



WalkingPad WPS1F Walking Device User Manual

[Home](#) » [WalkingPad](#) » WalkingPad WPS1F Walking Device User Manual

Contents [[hide](#)]

- [1 WalkingPad WPS1F Walking Device](#)
- [2 Performance & Indicators](#)
- [3 Safety Instructions](#)
- [4 Product and Accessories](#)
- [5 Function Schematic Diagram](#)
- [6 Usage Instructions](#)
- [7 Important safety instructions](#)
- [8 Product and accessories](#)
- [9 Function schematic diagram](#)
- [10 Guide for initial](#)
- [11 Learn to use WalkingPad](#)
- [12 Safety notice](#)
- [13 Maintenance and adjustments](#)
- [14 Warranty Conditions](#)
- [15 Documents / Resources](#)
 - [15.1 References](#)
- [16 Related Posts](#)

WalkingPad

WalkingPad WPS1F Walking Device



The KingSmith WalkingPad Walking Device is a foldable, innovative integral design walking device that allows you to enjoy the benefits of walking at home. The device comes with a remote control, various indicators, and adjustable speed settings. The following is detailed product information and usage instructions:

Performance & Indicators

- Expansion Dimension: N/A
- Folding Dimensions: N/A
- Walking Area: N/A
- Net Weight: N/A
- Maximum Load: N/A
- Applicable Age: 8 years and above
- Applicable Height: N/A
- Minimum Speed: N/A
- Maximum Speed: N/A
- Power Input: N/A
- Frequency: N/A
- Rated Voltage: N/A
- Sport Mode: Automatic and Manual Modes

Safety Instructions

It is important to follow these safety instructions to avoid damage or injury:

1. Always unplug the device after use and before cleaning.
2. Close supervision is necessary when children, invalids, or disabled persons use the device.
3. Use the device only for its intended use as described in the manual. Do not use attachments not recommended by the manufacturer.
4. Do not operate the device if it has a damaged cord or plug, or if it is not working.

Product and Accessories

The package should include the following items:

- Power Cord
- Remote Control
- Remote Control Lanyard
- Main Product
- Hex L Shaped Wrench
- Silicone Oil
- User Manual

Function Schematic Diagram

The device has various parts and indicators:

- Product Main Body
- Walking Belt
- Left side Fold Hinge
- Right side Fold Hinge
- Display Panel Touch Roller
- Power Switch
- Power Plug Roller

The indicator panel displays the following:

- Speed
- Calories
- Time
- Distance
- Steps
- Manual Mode
- Fault Warning Light
- Automatic Mode

Usage Instructions

Initial Setup

1. Choose a flat ground to place the WalkingPad. Do not place it on a thick and soft cushion.
2. Unfold the WalkingPad slowly and press it down until it is completely flat.
3. Check and adjust the walking belt to make sure it is centered.
4. Connect the power cord to the device.
5. Press the power switch button to turn on the device.

Using the Device

The device can be used in two modes: Automatic and Manual.

Automatic Mode

1. Unlock all functions by walking 1 km on the device first, or complete the novice guide by KS Fit App.
2. Use the remote control to start or stop the device.
3. Use the Mode Switch button to switch between Manual and Automatic modes.
4. Use the Acceleration and Deceleration buttons to adjust the speed.
5. The indicator panel displays various information such as speed, calories, time, distance, and steps.

Manual Mode

1. Unlock all functions by walking 1 km on the device first, or complete the novice guide by KS Fit App.
2. Use the remote control to start or stop the device.
3. Use the Mode Switch button to switch between Manual and Automatic modes.
4. Use the Acceleration and Deceleration buttons to adjust the speed.
5. The indicator panel displays various information such as speed, calories, time, distance, and steps.

Remember to follow the safety instructions and properly store the device after use to avoid damage or injury. For any questions or comments, contact the customer line provided in the user manual.

The product user guide contains product features, how to use, and the operating procedure. Read the user manual carefully to get the best experience and avoid unnecessary damage. Keep this manual for future reference. If you have any questions or comments about the device, please contact the customer line.

- www.alza.co.uk/kontakt
- ☎ +44 (0)203 514 4411
- **Importer** Alza.cz a.s., Jankovcova 1522/53, Holešovice, 170 00 Praha 7, www.alza.cz

Important safety instructions

The appliance is intended for household.

DANGER – To reduce the risk of electric shock:

Always unplug this appliance from the electrical outlet immediately after using and before cleaning.

WARNING – To reduce the risk of burns, fire, electric shock, or injury to persons:

1. An appliance should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.
2. Close supervision is necessary when this appliance is used by, on, or near children, invalids, or disabled persons
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. Never operate this appliance if it has a damaged cord or plug, if it's not working properly, if it's has been dropped or damaged, or dropped into water. Return the appliance to a service centre for examination and repair.
5. Do not carry this appliance by supply cord or use cord as a handle.

6. Keep the cord away from heated surfaces.
7. Never drop or insert any object into any opening.
8. Do not use outdoors.
9. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
10. To disconnect, turn all controls to the off position, then remove plug from outlet.

WARNING

1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
2. Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

WARNING – always keep young children away from this machine. Contact with the moving surface may result in severe friction burns.

Welcome to use!

 
Thanks for choosing KingSmith WalkingPad Walking device, and hereinafter referred to as “a WalkingPad”, which possess various advantages including exquisite, foldable, innovative integral design. From now on, enjoy the quality life of walking at home.

- **Performance & indicators** Detailed parameters
- **Expansion dimension** 1445 × 518 × 125 mm 56.9” × 20.4” × 4.9”
- **Folding dimensions** 825 × 518 × 136 mm 32.5” × 20.4” × 5.4”
- **Walking area** 1200 × 400 mm 47” × 15.7”
- **Net weight** 25 kg (55 lbs)
- **Maximum load** 100 kg (240 lbs)
- **Applicable age** 14 ~ 60 years old
- **Applicable height** Unlimited
- **Minimum speed** 0.5 km/hr 0.5 mi/hr
- **Maximum speed** 6 km/hr 3.7 mi/hr
- **Power input** 735 W
- **Frequency** 50/60 Hz
- **Rated voltage** 220 – 240 V ~
- **Sport Mode** Standby mode / Manual mode / Automatic mode

Product and accessories


Please check carefully if the items inside the packaging are complete and intact. In case of any item missing or it's broken, please contact the seller.

Accessories

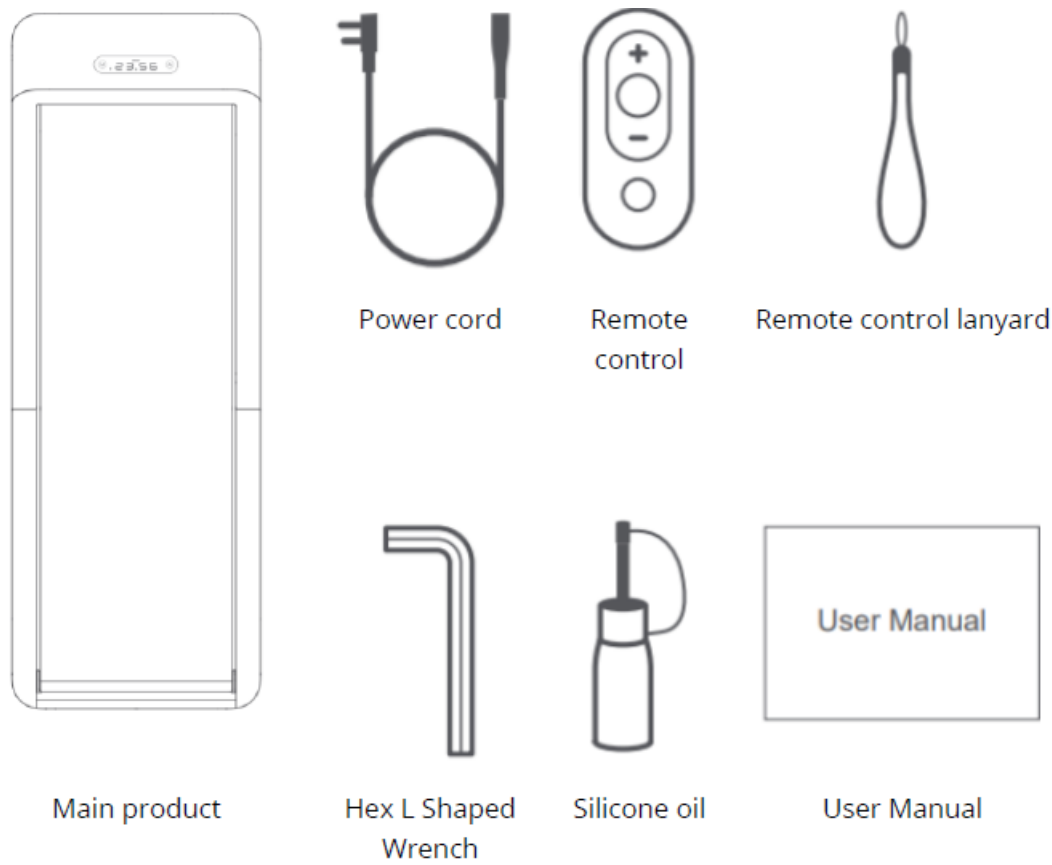

Function schematic diagram

 
Product main body

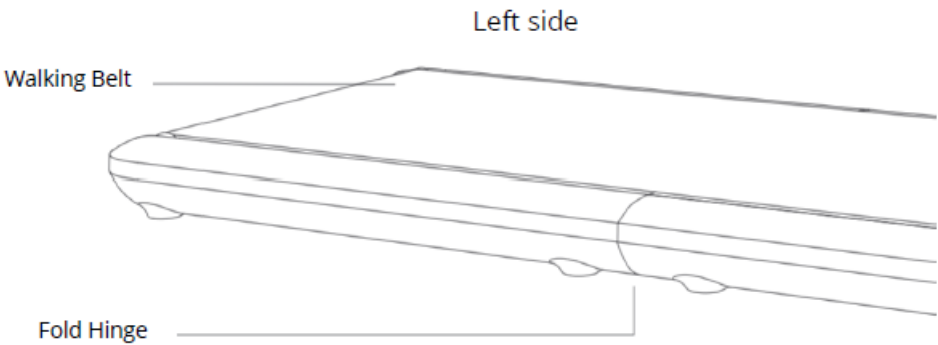


Right side




 Introduction of the function of the indicator panel

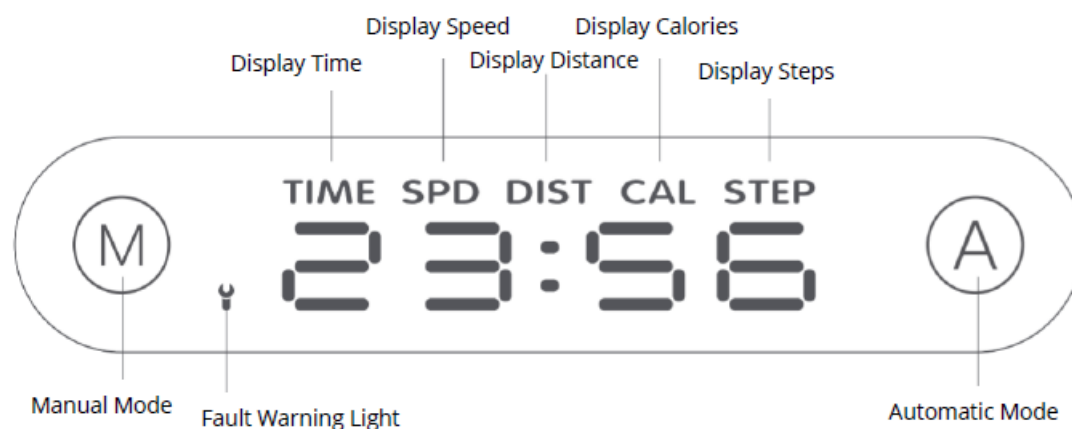


WalkingPad remote control

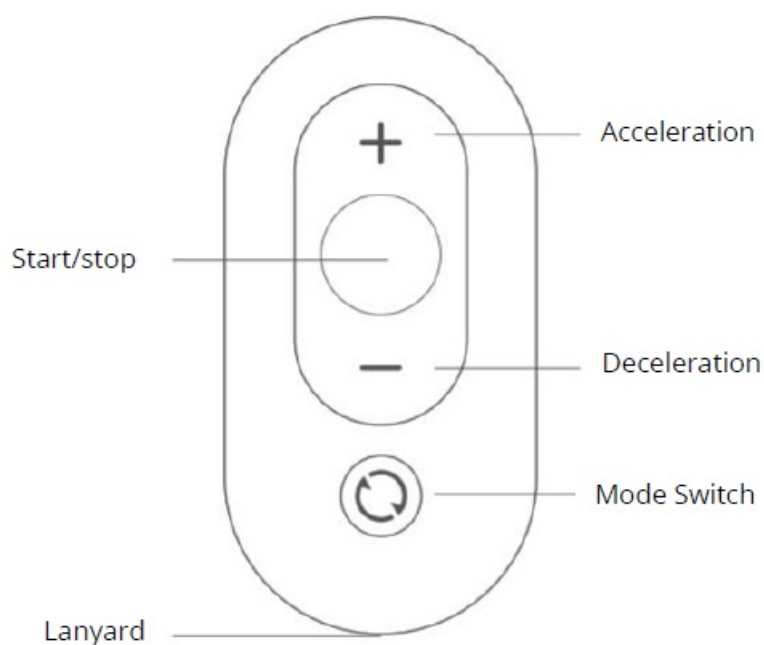 

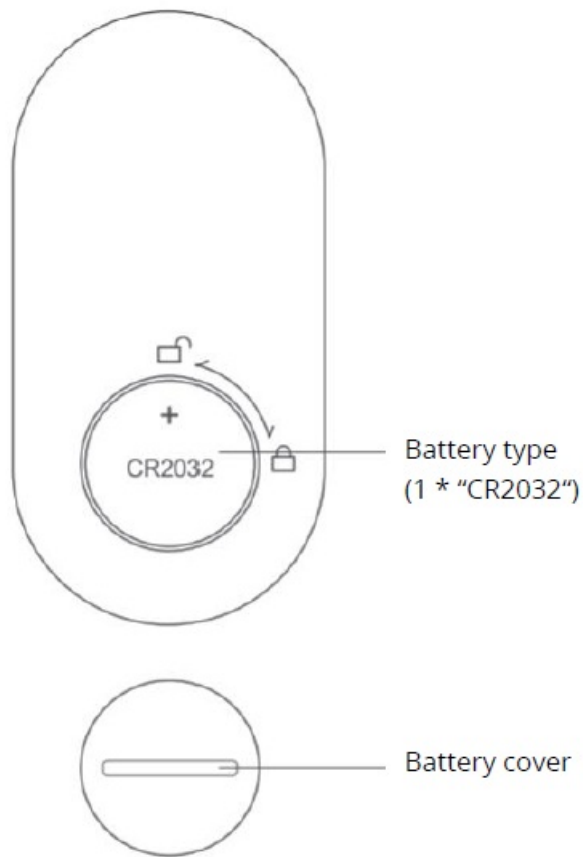 

Guide for initial

 
1. Choose flat ground to place the WalkingPad. It is forbidden to place it on thick and soft cushion. Please note: Don't connect the power before the WalkingPad is fully unfolded.

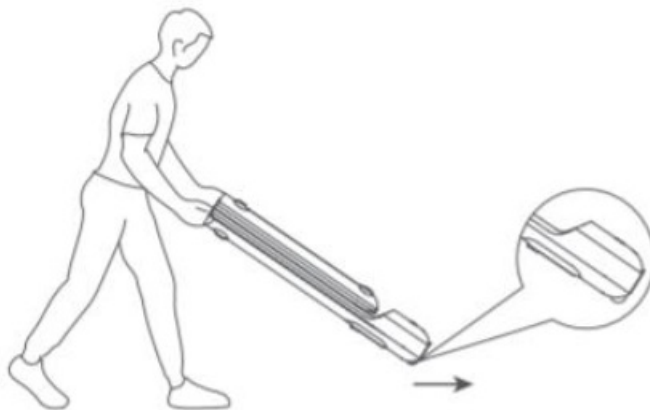


2. Unfold the WalkingPad slowly and press it down to completely flat.



 3. Check and adjust the walking belt to make sure it's centered.

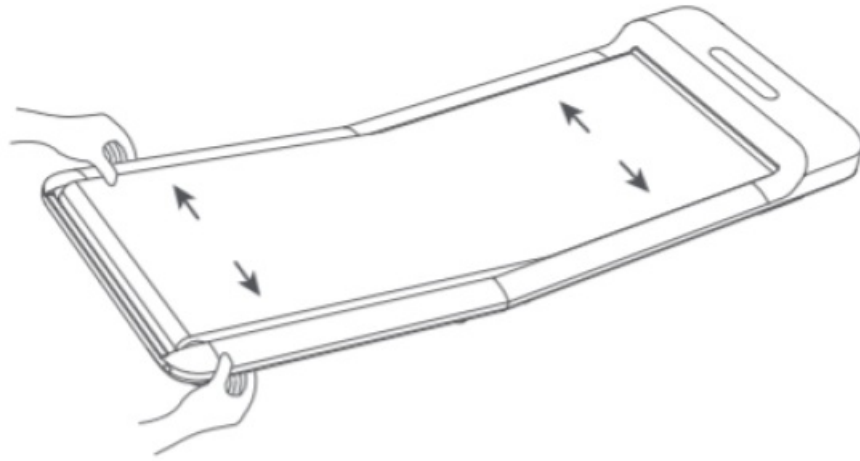

 4. Connect the power cord and press the button to switch on.

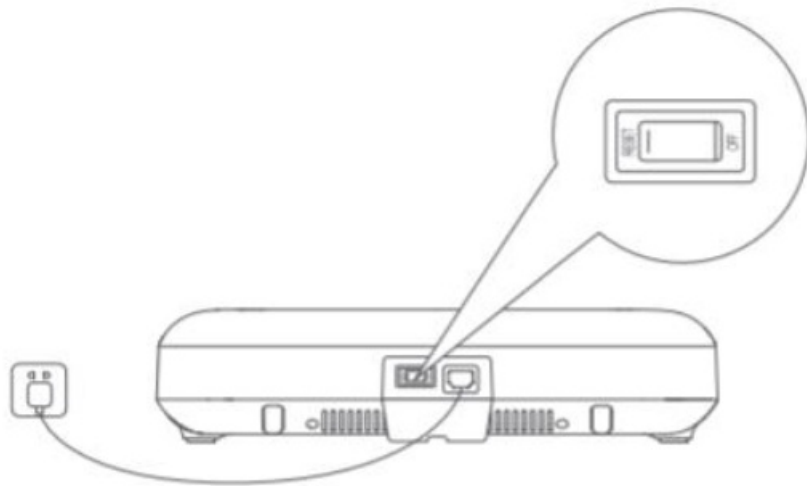


5. Unlock all functions by following two ways, otherwise the speed limit remains at 3 km/hr (1.9 mi/hr):



1. Walk 1 km (0.6 mi) on device first, reboot to unlock all functions.
2. Complete novice guide by "KS Fit" APP to unlock all functions.



 
6. Search "KS Fit" APP from Apple Store or Google Play and complete the installation.

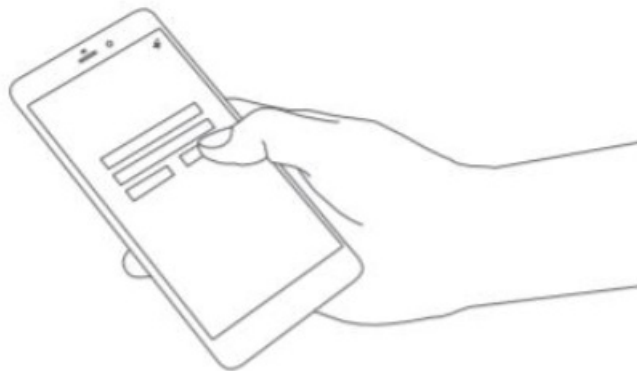


7. Open APP, follow the prompts to set up the device



 8. Enter novice guide to unlock all functions

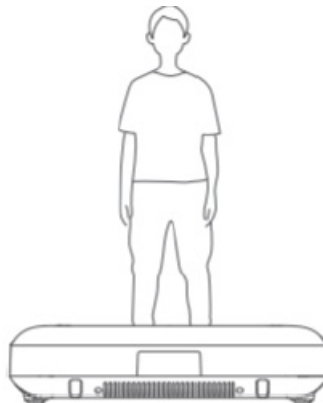

 9. Start to use the Walking Pad.

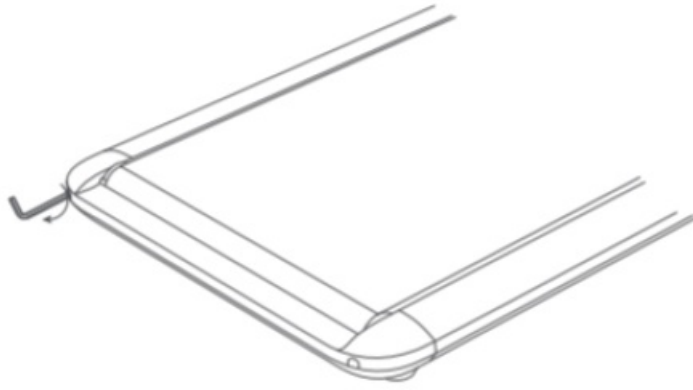

10. If the belt deviates from the orbit in use, please adjust properly. SEE: 06 Maintenance and service.

Learn to use WalkingPad

Mode instruction



- **Manual Mode**

Light of the manual mode is on; Control the speed through the remote control or APP.



- **Automatic Mode**

Light of the automatic mode is on; Speed is automatically controlled by intelligent algorithm. It follows the speed of walking

Instructions of the standby mode control

The motor and sensor stop responding in this mode to prevent nonusers from accidentally triggering the WalkingPad.



 
Mode Switch

 
Short press: return to the previous mode

Instructions of manual mode control (primary mode)

Manual mode

In this mode, the speed of the WalkingPad can be controlled by the remote control. It is recommended when beginners use the manual mode for first time and then use the automatic mode after being skilled in using the WalkingPad. The manual mode is controlled by remote control is used to start or stop the WalkingPad, which can be modified in the client "Personalized".

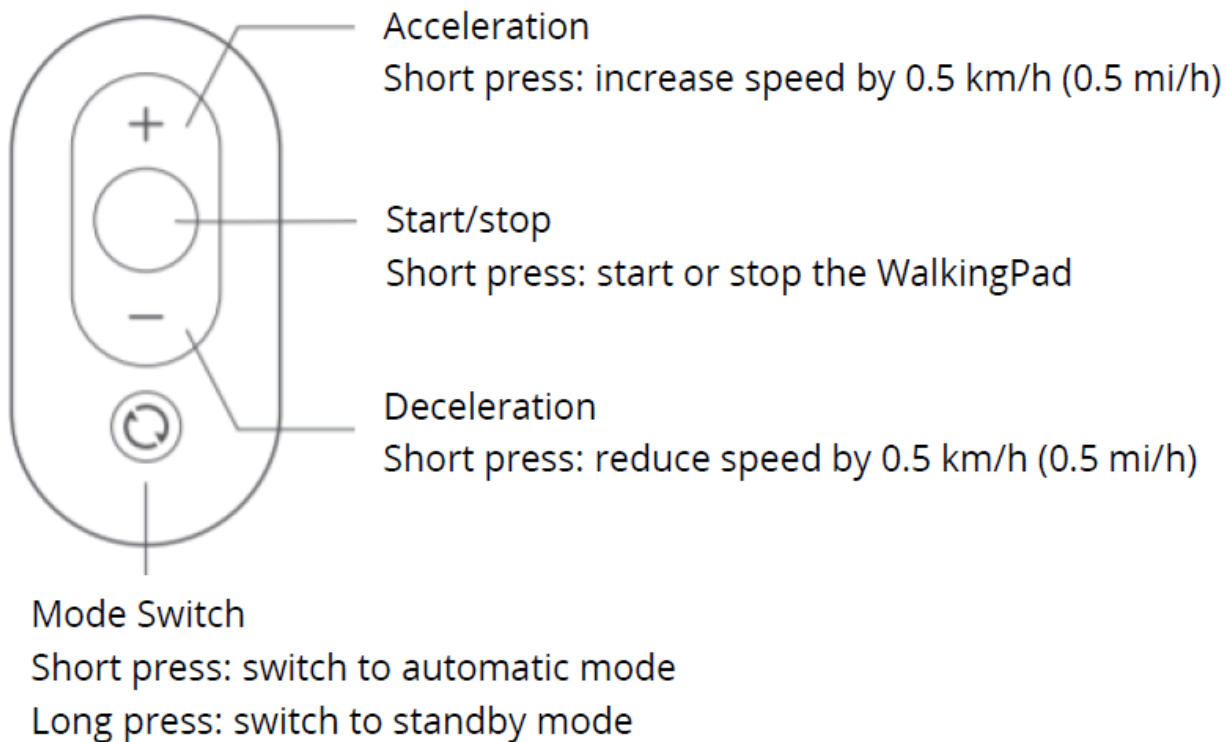


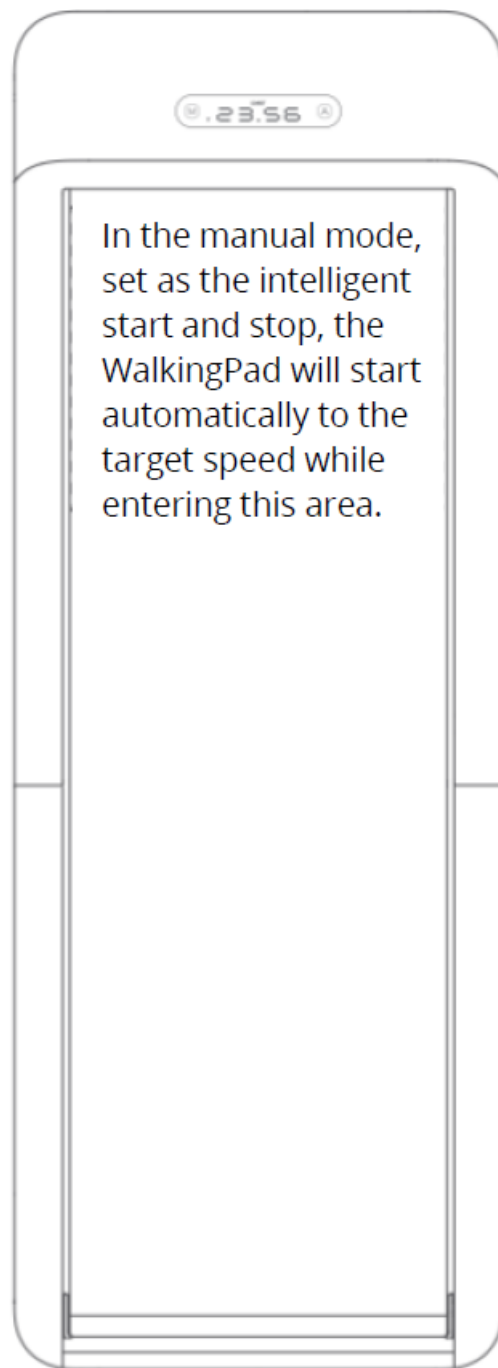

Description of automatic mode control (advance mode)

Automatic

 This mode is a challenging and higher-class mode. User can walk on the WalkingPad completely out of remote controller. We only recommend those who have good sports skills or walking-device experience to take the challenge.

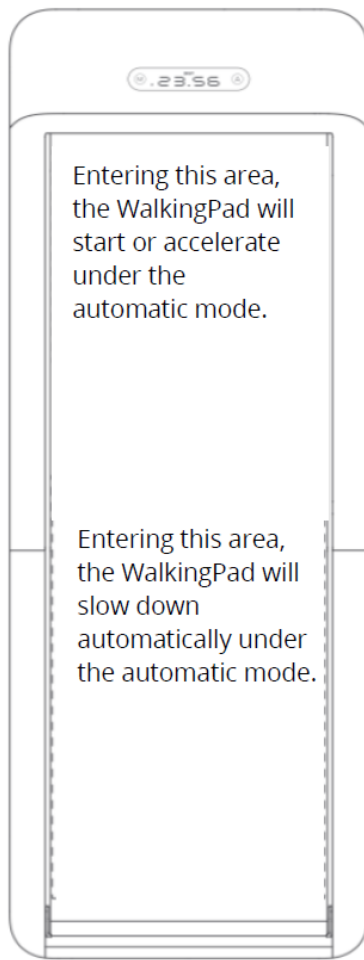

Mode Switch
Short press: switch to manual mode
Long press: switch to standby mode

Remote controller notice

If the remote controller has no response or you change a new one, the remote controller and walking device need re-establish communication.

Remote control pairing method:

Restart the WalkingPad, press and hold down the mode switch button on the remote control immediately, hearing the sound of "Beep" indicates the success of pairing. Note: During the operation, the remote control should be close to the LED display panel of WalkingPad.

Error warning light


Error Warning Light on the display panel is off when WalkingPad works well. When error occurs, error warning light turns on and shows its error code.

E01:	Upper control receives lower control data abnormally	E08	Motor overvoltage protection
E02:	Hall fault	E09	Motor phase loss protection
E03:	Software overcurrent protection	E10	Motor overload loss protection
E04:	Locked rotor protection	E20	Abnormal communication
E05:	The data received by the lower control is abnormal	E21	Sensor failure
E06:	Hardware overcurrent protection		
E07:	Motor undervoltage protection		


Safety notice



 
- Please keep a rear distance of 1000 mm or more.

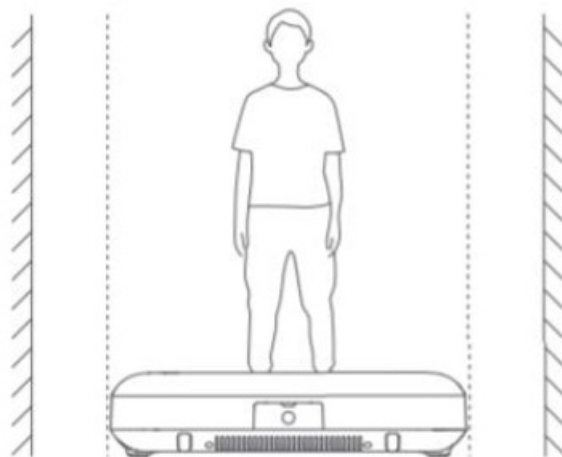

 - Please keep a distance of 500 mm or more for both sides.

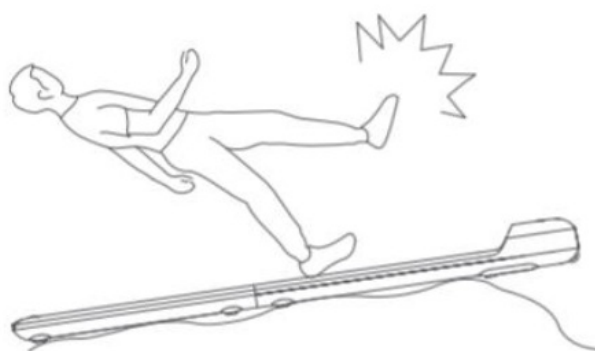


 
- Please use sport shoes.
- Using on uneven ground is prohibited.

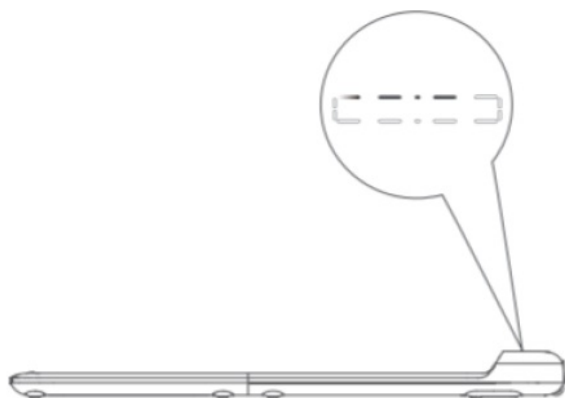



START/STOP



 
 
- Please do not stand up on the walking machine when it is under auto calibration situation.
- It is strictly forbidden to walk up and down on WalkingPad while walking. When emergency occurs, please press the remote control START/STOP and step away from the WalkingPad from one side.

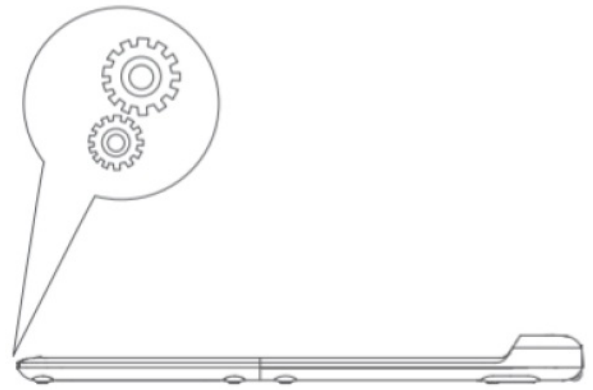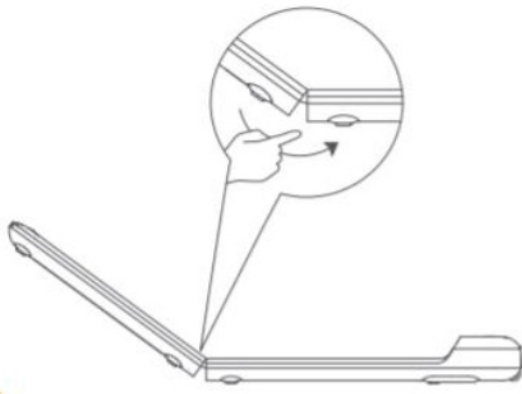

 
 
- Anti-pinch.
- Anti-involved, please do not trample.

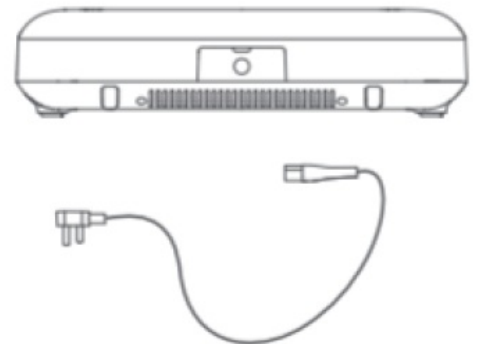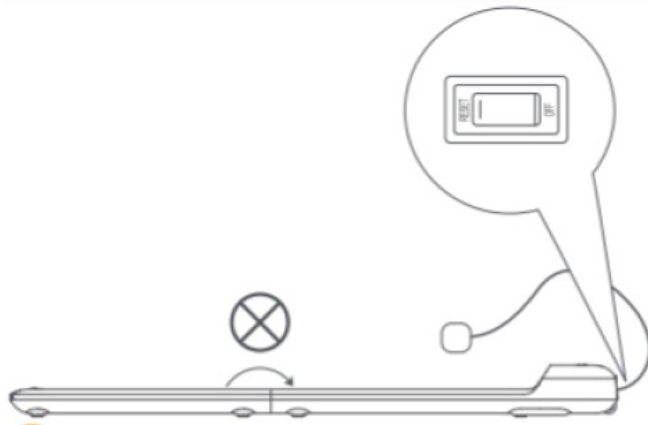

  
- Do not bring pets when you are using the Treadmill.
- Do not use the Treadmill backward or sideways.

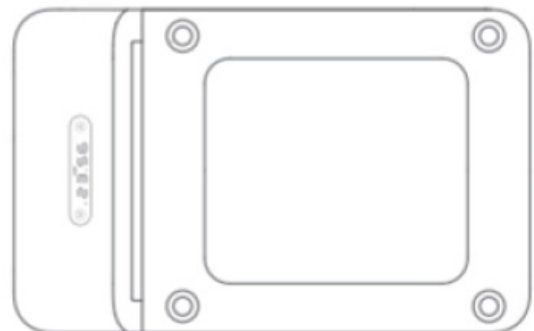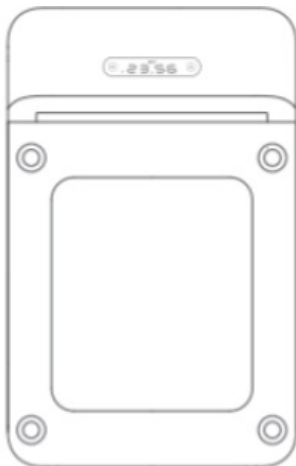

  
- Prohibition of vertical placement.
- Prohibition of lateral placement.

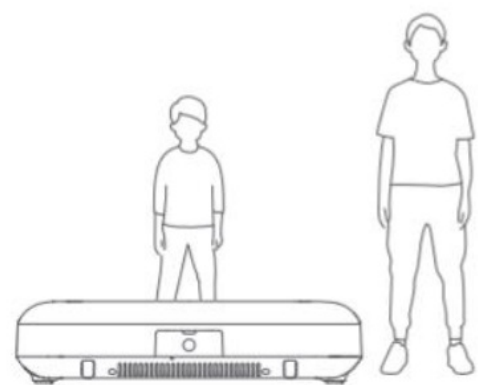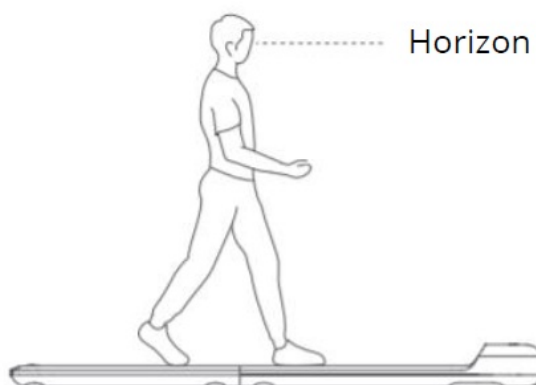

 
- Please keep your sight horizontal to avoid dizziness.
- Children should be supervised to ensure that they do not play with WalkingPad.

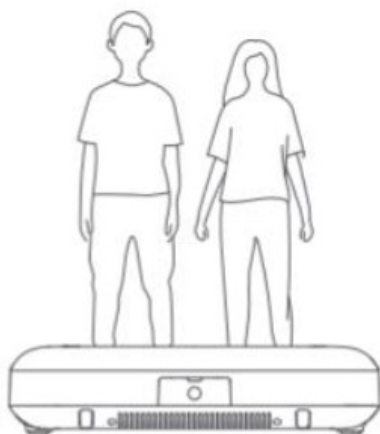

 - More than one person on the WalkingPad is prohibited.
- Walking sideways on the machine is prohibited.

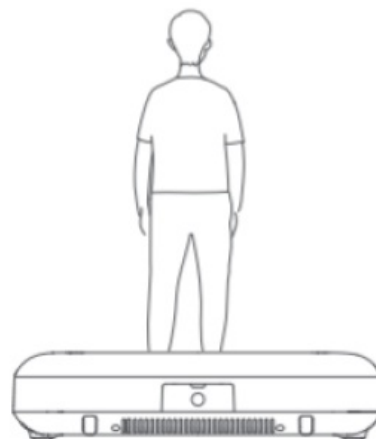

 - Using machine with pet is prohibited.
- Walking backwards on the machine is prohibited.

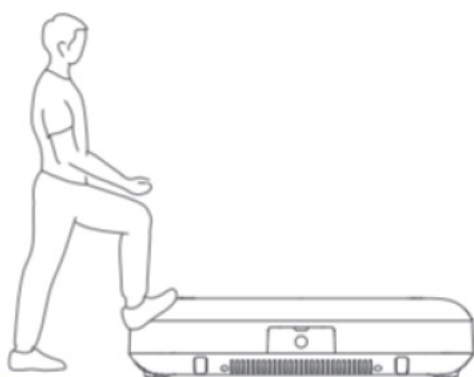

- Trampling the machine head is prohibited.
- Please use this product reasonably according to your physical condition (the elderly and pregnant women should use it cautiously). If you feel unwell, stop exercising immediately. If necessary, please seek medical attention.

Maintenance and adjustments

 
Clean the walking machine



- Turn off the machine and unplug the power cord.
- Add several drops of detergent on cotton rag or towel. Don't put the detergent on the belt directly, and don't use acid or corrosive cleaners.

After using for a period, dust and stains may appear on the back part, that is normal situation, then just clean them up.

Adjust the belt

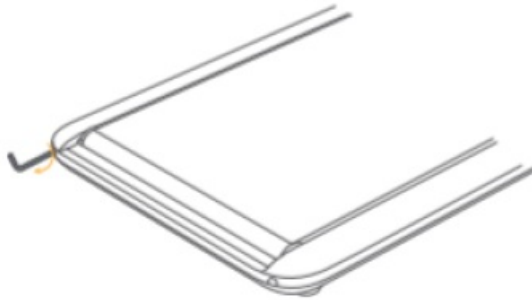

- Press and hold both mode switch button and acceleration button on the remote control over 3 seconds.
- Front panel shows "CALI", and the speed is 4 km/hr (2.5 mi/hr).
- If belt deviates to the left: Turn the left adjusting screw for a half-circle clockwise.
- If belt deviates to the right: Turn the right adjusting screw for a half-circle clockwise.
- If belt is slipping: Turn both left and right adjusting screw for a half-circle clockwise at same time.
- Keep the machine running for 1-2 minutes and check whether it needs to readjust.

Lubricate the belt



- Turn off the machine and unplug the power cord.

- Lift the belt and apply silicone oil on the backside of the belt.
- Turn on the machine again.
- Keep the machine running under 4 km/hr (2.5 mi/hr) for 10-20 seconds.
- Only apply 5-10 ml lubricant oil each time, too much lubricant oil makes the belt become slipping.
- Apply for silicone oil once every 3 months.

Warranty Conditions

A new product purchased in the Alza.cz sales network is guaranteed for 2 years. If you need repair or other services during the warranty period, contact the product seller directly, you must provide the original proof of purchase with the date of purchase.

The following are considered to be a conflict with the warranty conditions, for which the claimed claim may not be recognized:

- Using the product for any purpose other than that for which the product is intended or failing to follow the instructions for maintenance, operation and service of the product.
- Damage to the product by a natural disaster, the intervention of an unauthorized person or mechanically through the fault of the buyer (e.g. during transport, cleaning by inappropriate means, etc.).
- Natural wear and aging of consumables or components during use (such as batteries, etc.).
- Exposure to adverse external influences, such as sunlight and other radiation or electromagnetic fields, fluid intrusion, object intrusion, mains overvoltage, electrostatic discharge voltage (including lightning), faulty supply or input voltage and inappropriate polarity of this voltage, chemical processes such as used power supplies, etc.
- If anyone has made modifications, modifications, alterations to the design or adaptations to change or extend the functions of the product compared to the purchased design or use of non-original components.

WEEE





This product must not be disposed of as normal household waste in accordance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE – 2012/19 / EU). Instead, it shall be returned to the place of purchase or handed over to a public collection point for the recyclable waste. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. Contact your local authority or the nearest collection point for further details. Improper disposal of this type of waste may result in fines in accordance with national regulations.

Documents / Resources

 <p>KingSmith WalkingPad Walking device Model: WPS1F User Manual - Chinese and English - ©2020 KingSmith Technology Co., Ltd. All rights reserved.</p>	<p>WalkingPad WPS1F Walking Device [pdf] User Manual WPS1F Walking Device, WPS1F, Walking Device, Device</p>
---	--

References

-  alza.at

-  alza.co.uk
-  alza.de
-  alza.hu
-  alza.sk