



# Walmart SW001 Rechargeable Remote Wireless Switch Lite Controller Gamepad Joypad User Guide

[Home](#) » [Walmart](#) » Walmart SW001 Rechargeable Remote Wireless Switch Lite Controller Gamepad Joypad User Guide 

## Contents

- [1 Walmart SW001 Rechargeable Remote Wireless Switch Lite Controller Gamepad Joypad](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Product Description](#)
- [5 Product Parameter](#)
- [6 Pairing and Connecting](#)
- [7 Console mode wired connection](#)
- [8 TURBO Function Setting](#)
- [9 Package](#)
- [10 Documents / Resources](#)



Walmart SW001 Rechargeable Remote Wireless Switch Lite Controller Gamepad Joypad



## Product Information

The Wireless Controller for N-SL, Model NO.SW001 is a versatile gaming controller designed for use with consoles and PCs. It features Bluetooth connectivity for wireless gameplay and also supports wired connections. The controller has a motor function that provides vibration feedback during gameplay. It also includes a TURBO function for rapid button inputs. The controller is equipped with LED indicators to display various status and connection information.

## Product Usage Instructions

### Bluetooth Pairing Mode

1. Step 1: Ensure the controller is turned off.
2. Step 2: Turn on the console or PC's Bluetooth function.
3. Step 3: Press and hold the HOME button on the controller for 3-5 seconds.
4. Step 4: The LED indicators (LED1-LED4) on the controller will flash quickly, indicating it is in Bluetooth pairing mode.
5. Step 5: Once the controller is successfully connected to the console or PC, it will vibrate, and the corresponding channel indicator will remain steady.

### Console Mode Wired Connection

1. Step 1: Enable the wired connection option of the PRO controller on the console.
2. Step 2: Place the console into the console base.
3. Step 3: Connect the controller to the console using the data cable.
4. Step 4: The controller will automatically connect to the console.
5. Step 5: After disconnecting the data cable, the controller will automatically reconnect to the console via Bluetooth.

### Wired Connection in N-SL Mode

1. Step 1: Enable the wired connection option of the PRO handle on the N-SL host.
2. Step 2: Place the console into the base.
3. Step 3: Connect the handle to the console using the data cable.
4. Step 4: Press any button (A/B/X/Y/ZL/ZR/R/L) on the handle to automatically connect it to the console.
5. Step 5: After disconnecting the data cable, the handle will automatically reconnect to the console via Bluetooth.

### **Windows (PC360) Mode**

1. Step 1: Turn off the controller.
2. Step 2: Connect the controller to a PC using a USB cable.
3. Step 3: The PC will automatically install the driver.
4. Step 4: The LED2 on the controller will remain on, indicating a successful connection.
5. Step 5: The controller will be recognized as an "Xbox 360 controller for Windows" in the PC's settings.

### **TURBO Function Setting**

The controller includes a TURBO function for rapid button inputs. To adjust the motor intensity:

- To increase intensity: Press the "turbo+" button and push the left joystick upwards. Each press increases intensity by one gear.
- To decrease intensity: Press the "turbo+" button and push the left joystick downwards. Each press reduces the intensity by one gear.
- The motor intensity has four levels: 100% strength, 70% strength, 30% strength, and 0% strength. The default setting is 100% strength.

### **Power Off/Charge/Reconnect/Reset/Low Battery Alarm**

- To power off the controller: When the controller is turned on, Press and hold the HOME button for 5 seconds.
- The controller will automatically shut down when it fails to connect after 30 seconds in the back-connecting state.
- When the controller is connected to the machine, it will automatically shut down if there is no button operation within 5 minutes.
- When the controller is turned off and plugged into the adapter for charging, LED 1-4 will flash. After fully charged, LED 1-4 will turn off.
- When the controller is plugged into a USB port, the corresponding channel light will flash slowly and remain on when fully charged.
- To reconnect the controller to the console: After the controller is connected to the console and the console is in a sleep state, press the HOME button to wake up the console. The console wakes up in about 3-10 seconds.

### **Product Description**

This product is a wireless Bluetooth gamepad, which belongs to the wireless blue control gamepad (using wireless Bluetooth technology). It can be remotely controlled and easy to operate. It can be used for the N-SL console. It also supports PC X-input PC games.


### **Product Parameter**

- Voltage: DC 5 V
- Working Current: <20mA
- Sleep Current: 9uA
- Battery Capacity: 550mAh
- Use time: About 10 hours
- Charging time: About 3.5 hours
- Vibration Current: 70-120mA
- Charging Current: About 180mA
- USB length: 70 cm/2.30 ft
- Bluetooth Transmission Distance <10m

## Pairing and Connecting

### Bluetooth connection in mode:



- Step 1: Turn on the console, click the System settings menu button on the main page interface (Figure 1 ), enter the next menu option, click the Airplane Mode option (Figure 2 ), and then click the Controller Connection (Bluetooth) (Figure 3 ) option Turn on its Bluetooth function (Figure 4).

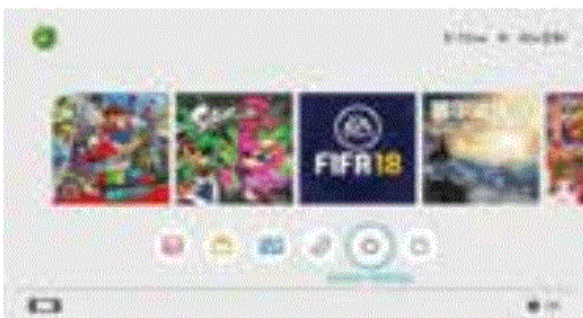

①



②

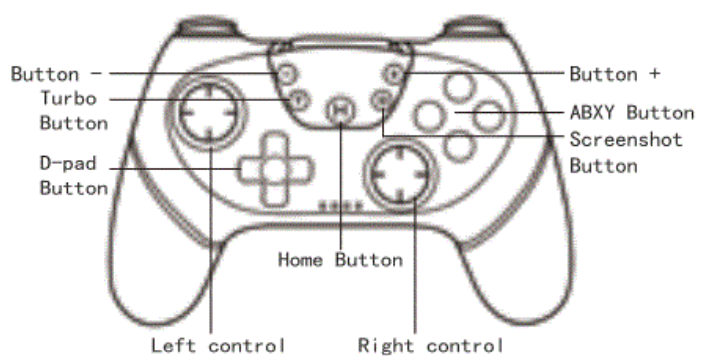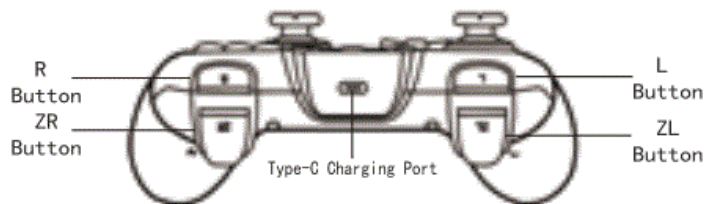




③



④

- Step 2: Enter the Bluetooth pairing mode of the console and controller, click the Controllers menu button on the console homepage interface (Figure ⑤), enter the next menu option, and click the Change Grip/Order option. The console will automatically search for paired controllers (Figure ⑥).

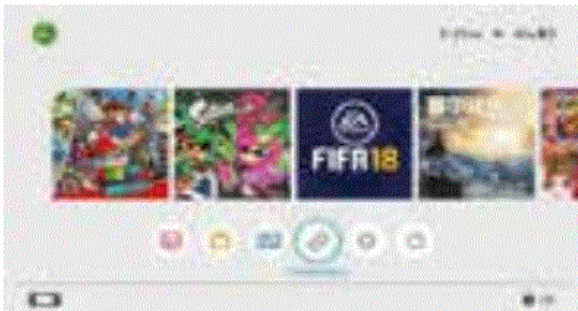

⑤



⑥

- Step 3: Press and hold the HOME button for 3-5 seconds to enter the Bluetooth search pairing mode, LED1-LED4 marquee flashes quickly. After the controller is successfully connected to the console, it vibrates and automatically assigns the corresponding channel indicator of the controller to be steady.



⑦



⑧

## Console mode wired connection

- Turn on the wired connection option of the PRO controller on the console, put the console into the console base, and then connect the controller via the data cable, the controller will automatically connect to the console, after the data cable is pulled out, the controller will automatically connect back to the console console via Bluetooth.

## Wired connection in N-SL mode:

- Turn on the wired connection option of the PRO handle on the N-SL host, put the console into the base, and then connect the handle through the data cable. pressing any button (A/B/X/Y/ZL/ZR/R/L) of the handle will automatically connect the console and pull out the data cable, then the handle will automatically connect back

to the console host through bluetooth.

### Windows (PC360) mode:

- When the controller is turned off, connect to the PC via a USB cable, and the PC will automatically install the driver. The LED2 on the controller is long on to indicate a successful connection.
- The display name: the Xbox 360 controller for Windows. (wired connection)

### TURBO Function Setting

- The controller has the TURBO function, hold down the TURBO button and then press the corresponding button to set the TURBO.
- In N-SL mode, A, B, X, Y, L1, R1, L2, and R2 can be set
- In XINPUT mode, you can set A, B, X, Y, L1, R1, L2, R2

#### Adjust Turbo speed:

- Turbo + right 3D up, the frequency increases by one gear
- Turbo + Right 3d down the frequency by one gear
- The power-on default is 12Hz; there are three levels (5 times per second — 12 times per second — 20 times per second). When the Turbo combo is executed, the Turbo combo speed LED1 flashes accordingly as the Turbo indicator.

### Motor Vibration Function

- The controller has a motor function; it uses a pressure-sensitive motor; the console can manually turn on or off the controller motor vibration. ON/OFF
- Motor intensity can be adjusted under the N-SL platform

#### Adjust the motor intensity:

- turbo+ left 3d up, the intensity increases by one gear
- turbo+ left 3d down, the intensity is reduced by one gear

#### A total of 4 levels:

- 100% strength, 70% strength, 30% strength, 0% strength, Power-on default 100%

### Power off/Charge/Reconnect/Reset/Low Battery Alarm


status	Description
power off	When the controller is turned on, press and hold the HOME button for 5S to turn off the controller.
	When the controller is in the back-connecting state, it will automatically shut down when it cannot be connected after 30 seconds.

power off	When the controller is in the state of code matching, it will enter a back connection when the code cannot be matched after 60 seconds, and it will automatically shut down.
	When the controller is connected to the machine, it will automatically shut down when there is no button operation within 5 minutes.
charge	When the controller is turned off and the controller is inserted into the adapter, LED 1-4 flashes, after fully charged, LED 1-4 goes out.
	The controller is online, when the controller is plugged into the USB, the corresponding channel light flashes slowly, and it lights up when it is full.
Reconnect	The console wakes up and reconnects: After the controller is connected to the console, the console is in a sleep state, and the controller connection indicator is off, short press the controller HOME button, the indicator light flashes slowly and the marquee flashes back to wake up the console. The console wakes up in about 3-10 seconds on. (The console wake-up state can only be effective by pressing the HOME key)
	Reconnect when the console is powered on: When the console is powered on, press the HOME key on the controller to reconnect.
reset	When the controller is abnormal, such as button disorder, crash, failure to connect, etc., you can try to restart the controller. Reset method: Insert a slender object into the Reset hole on the back of the controller, and press the Reset button to reset the controller state.
Low battery alarm	When the controller battery voltage is lower than 3.6V (according to the principle of battery characteristics), the light of the corresponding channel flashes slowly, indicating that the controller is low and needs to be charged. 3.45V low power shutdown.

## Package

- 1 X Controller
- 1 X USB Charging Cable
- 1 X User Instruction

## Documents / Resources

<p>Wireless Controller for N-5L</p> <p>Model NO.SW001</p> <p>USER GUIDE 說明書</p> 	<p><a href="#">Walmart SW001 Rechargeable Remote Wireless Switch Lite Controller Gamepad Joypad</a></p> <p>[pdf] User Guide</p> <p>SW001 Rechargeable Remote Wireless Switch Lite Controller Gamepad Joypad, SW001, Rechargeable Remote Wireless Switch Lite Controller Gamepad Joypad, Remote Wireless Switch Lite Controller Gamepad Joypad, Wireless Switch Lite Controller Gamepad Joypad, Switch Lite Controller Gamepad Joypad, Lite Controller Gamepad Joypad, Controller Gamepad Joypad, Gamepad Joypad, Joypad</p>
---	---