


WALTON MYB-A1C AC Remote Control User Manual

[Home](#) » [WALTON](#) » WALTON MYB-A1C AC Remote Control User Manual 

WALTON MYB-A1C AC Remote Control

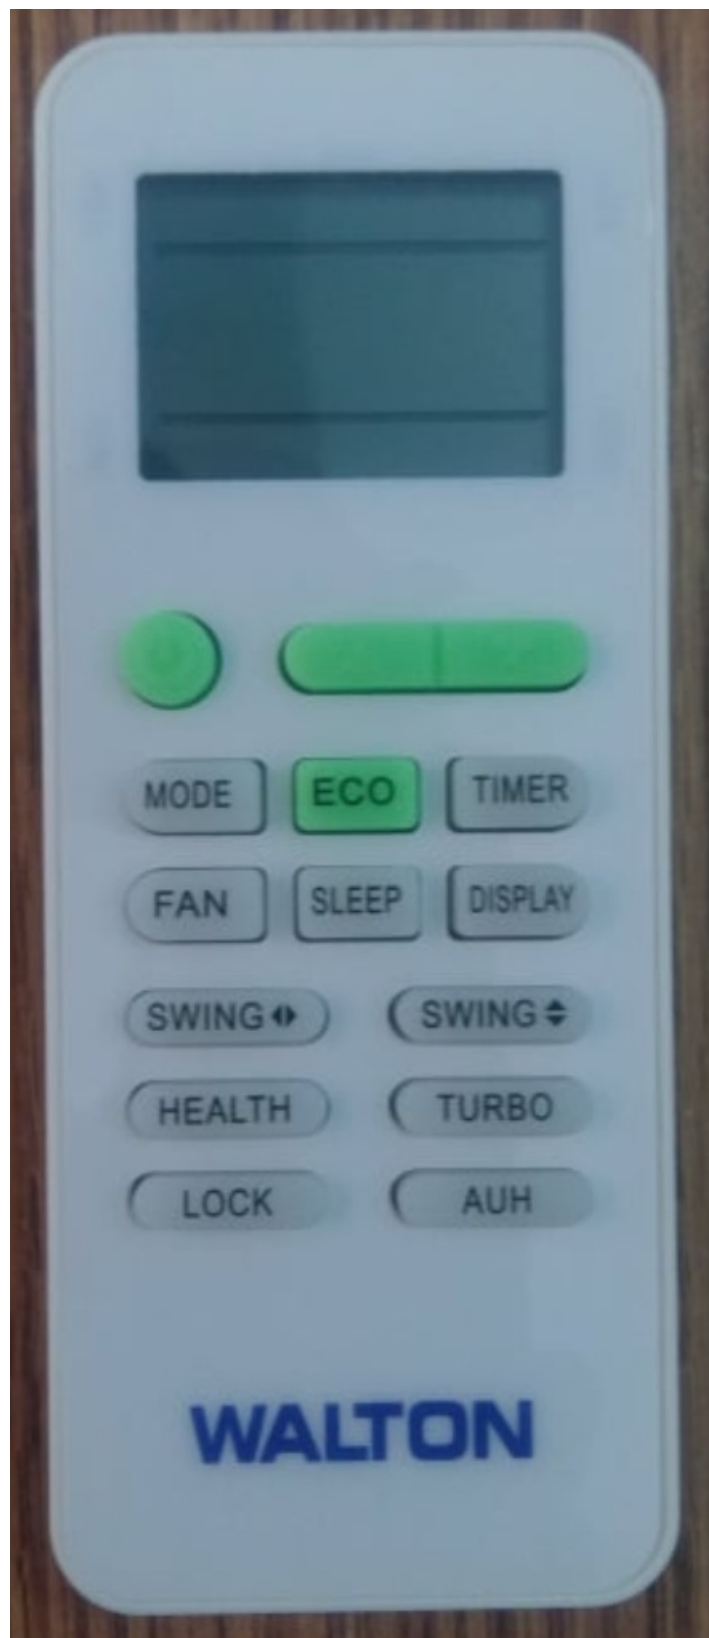

Contents

[1 Functions of Remote Controller](#)

[1.1 Model: MYB-A1C](#)

[1.2 Model: WK14-R01](#)

[1.3 Model: WM2-S-C](#)


[1.4 Model: WI20-P01](#)

[2 Documents / Resources](#)

[3 Related Posts](#)

Functions of Remote Controller

Model: MYB-A1C

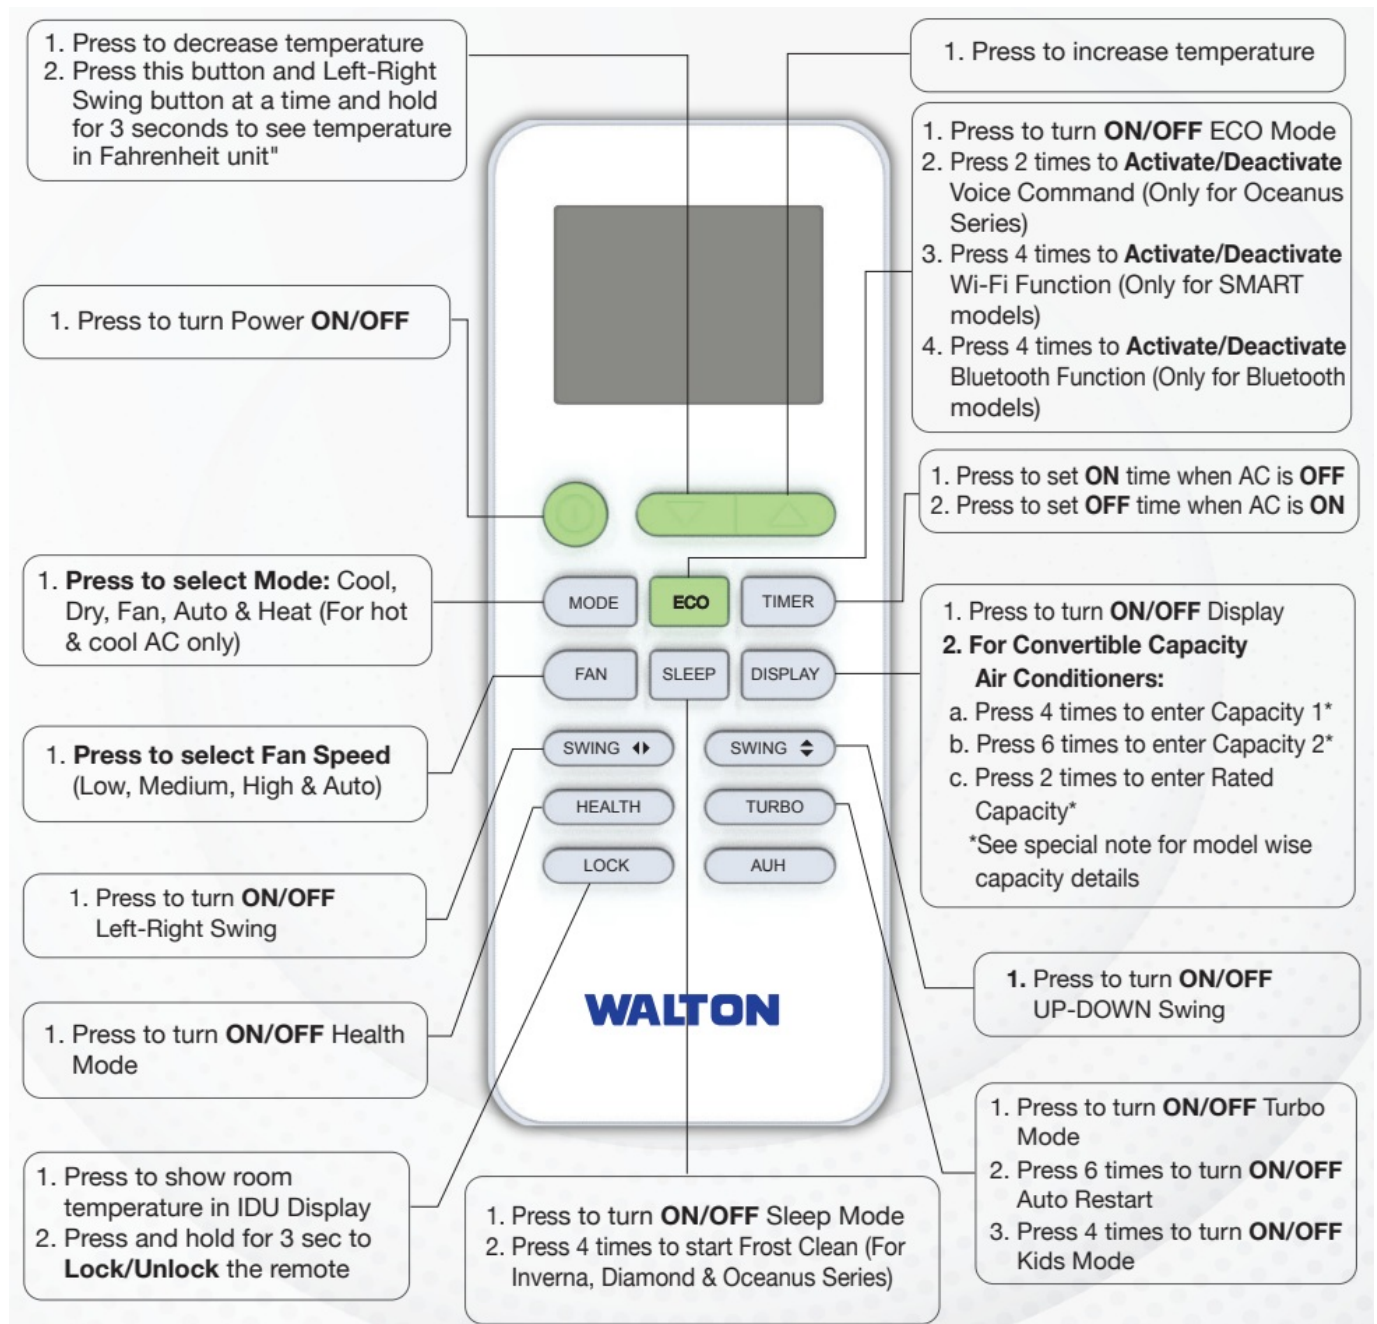

1. Kids Mode & Auto restart Activation/Deactivation work only in Cool Mode and Heat Mode.
2. Frost Clean Function and Convertible Capacity Selection work only in Cool Mode.
3. Press any key and hold for 3 seconds to turn on backlight.

4. Convertible Capacity details


For WSI-INVERNA (ULTRASAVER)-12C:

Rated Capacity=12k BTU (1 Ton), Capacity 1=9K BTU (0.75 Ton) Capacity 2= 6K BTU (0.50 Ton)

For WSI-KRYSTALINE(PRETO)-18F:

Rated Capacity=18k BTU (1.5 Ton) Capacity 1=12K BTU (1 Ton), Capacity 2= 9K BTU (0.75 Ton)

Model: WK14-R01

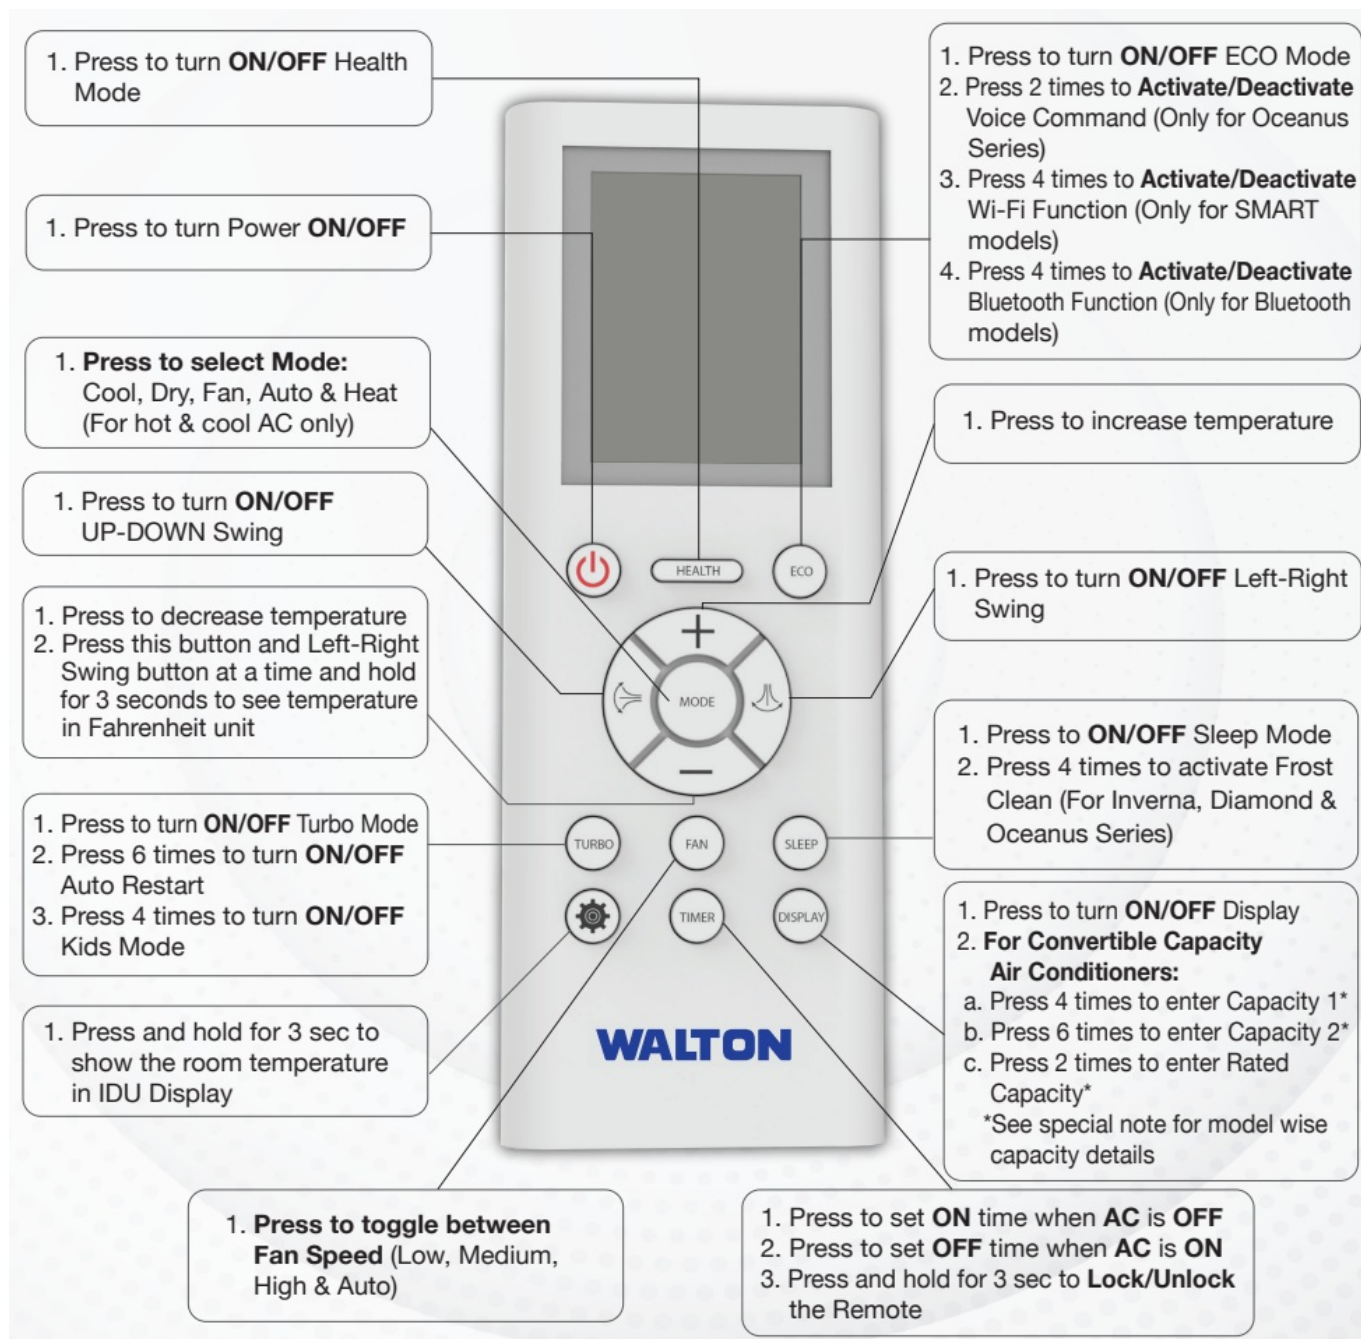

1. Kids Mode & Auto restart Activation/Deactivation work only in Cool Mode and Heat Mode

2. Frost Clean Function and Convertible Capacity Selection work only in Cool Mode

3. **Convertible Capacity details**


For WSI-INVERNA (ULTRASAVER)-12C:

Rated Capacity=12k BTU (1 Ton), Capacity 1=9K BTU (0.75 Ton) Capacity 2= 6K BTU (0.50 Ton)

For WSI-KRYSTALINE(PRETO)-18F:


Rated Capacity=18k BTU (1.5 Ton) Capacity 1=12K BTU (1 Ton), Capacity 2= 9K BTU (0.75 Ton)

Model: WM2-S-C

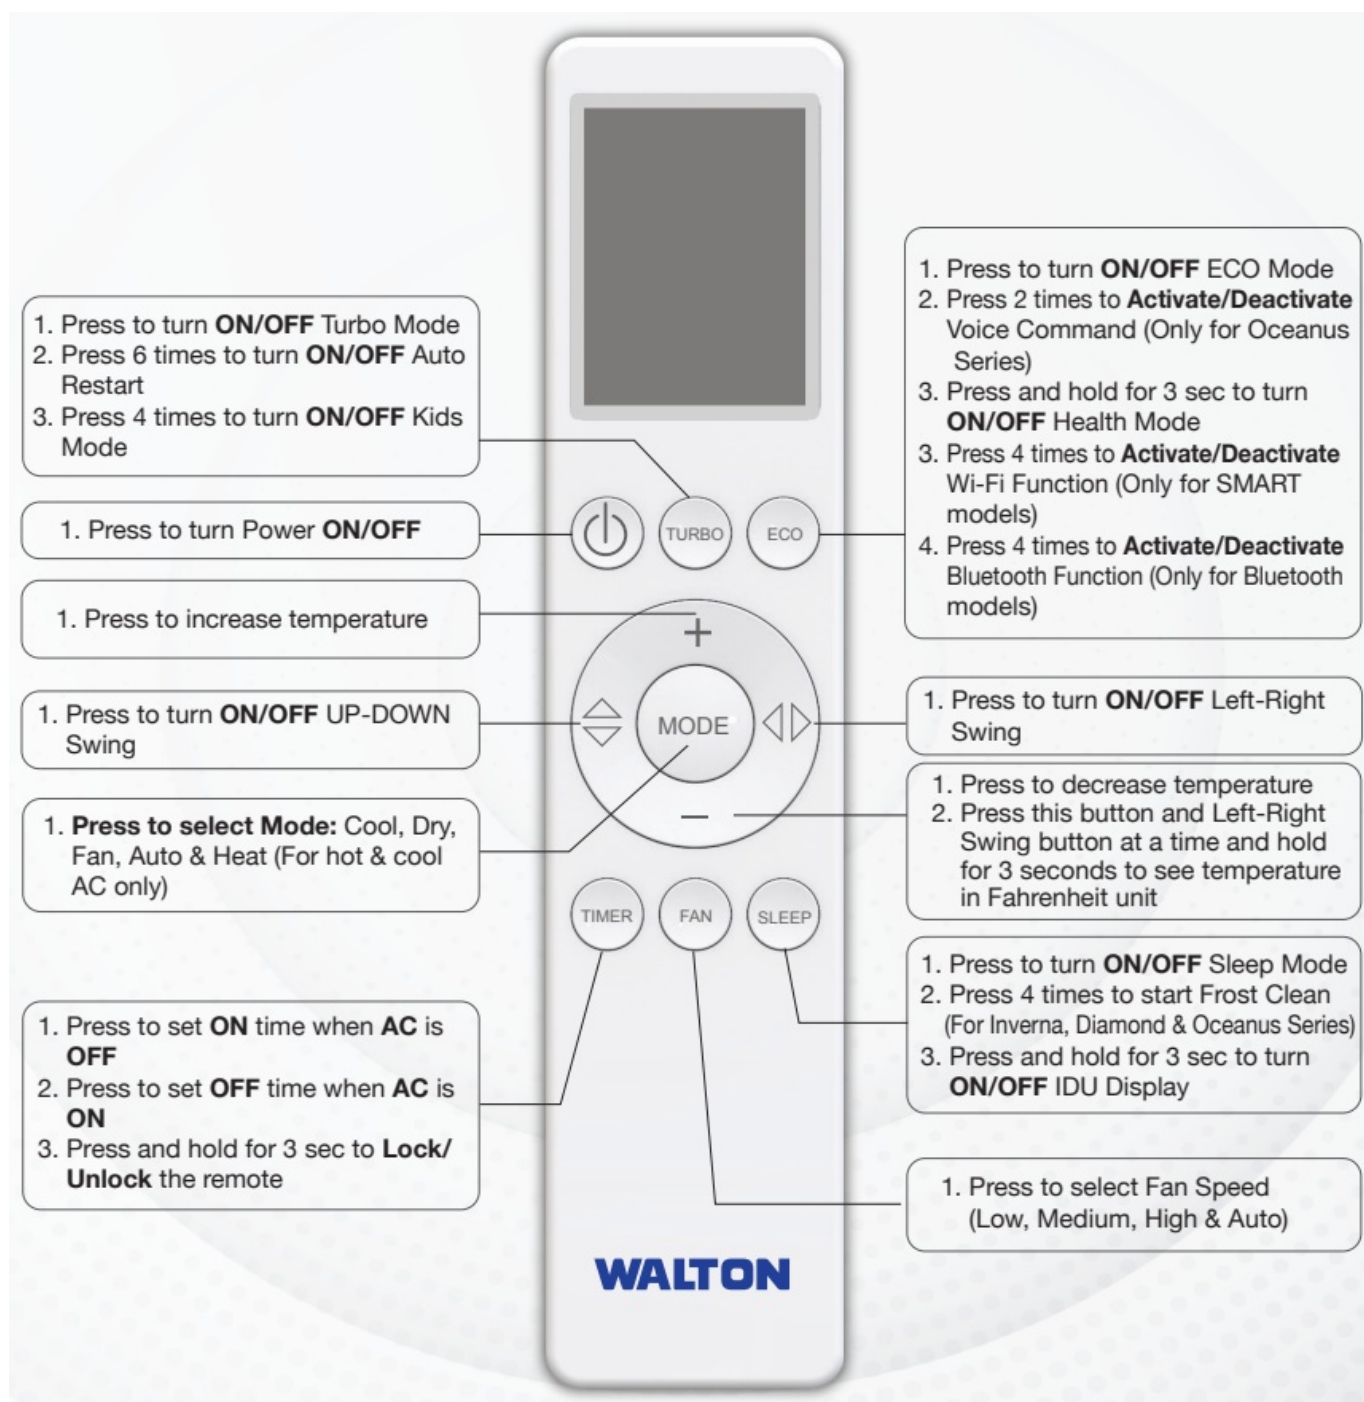


1. Kids Mode & Auto restart Activation/Deactivation work only in Cool Mode and Heat Mode
2. Frost Clean Function works only in Cool Mode

Model: WI20-P01

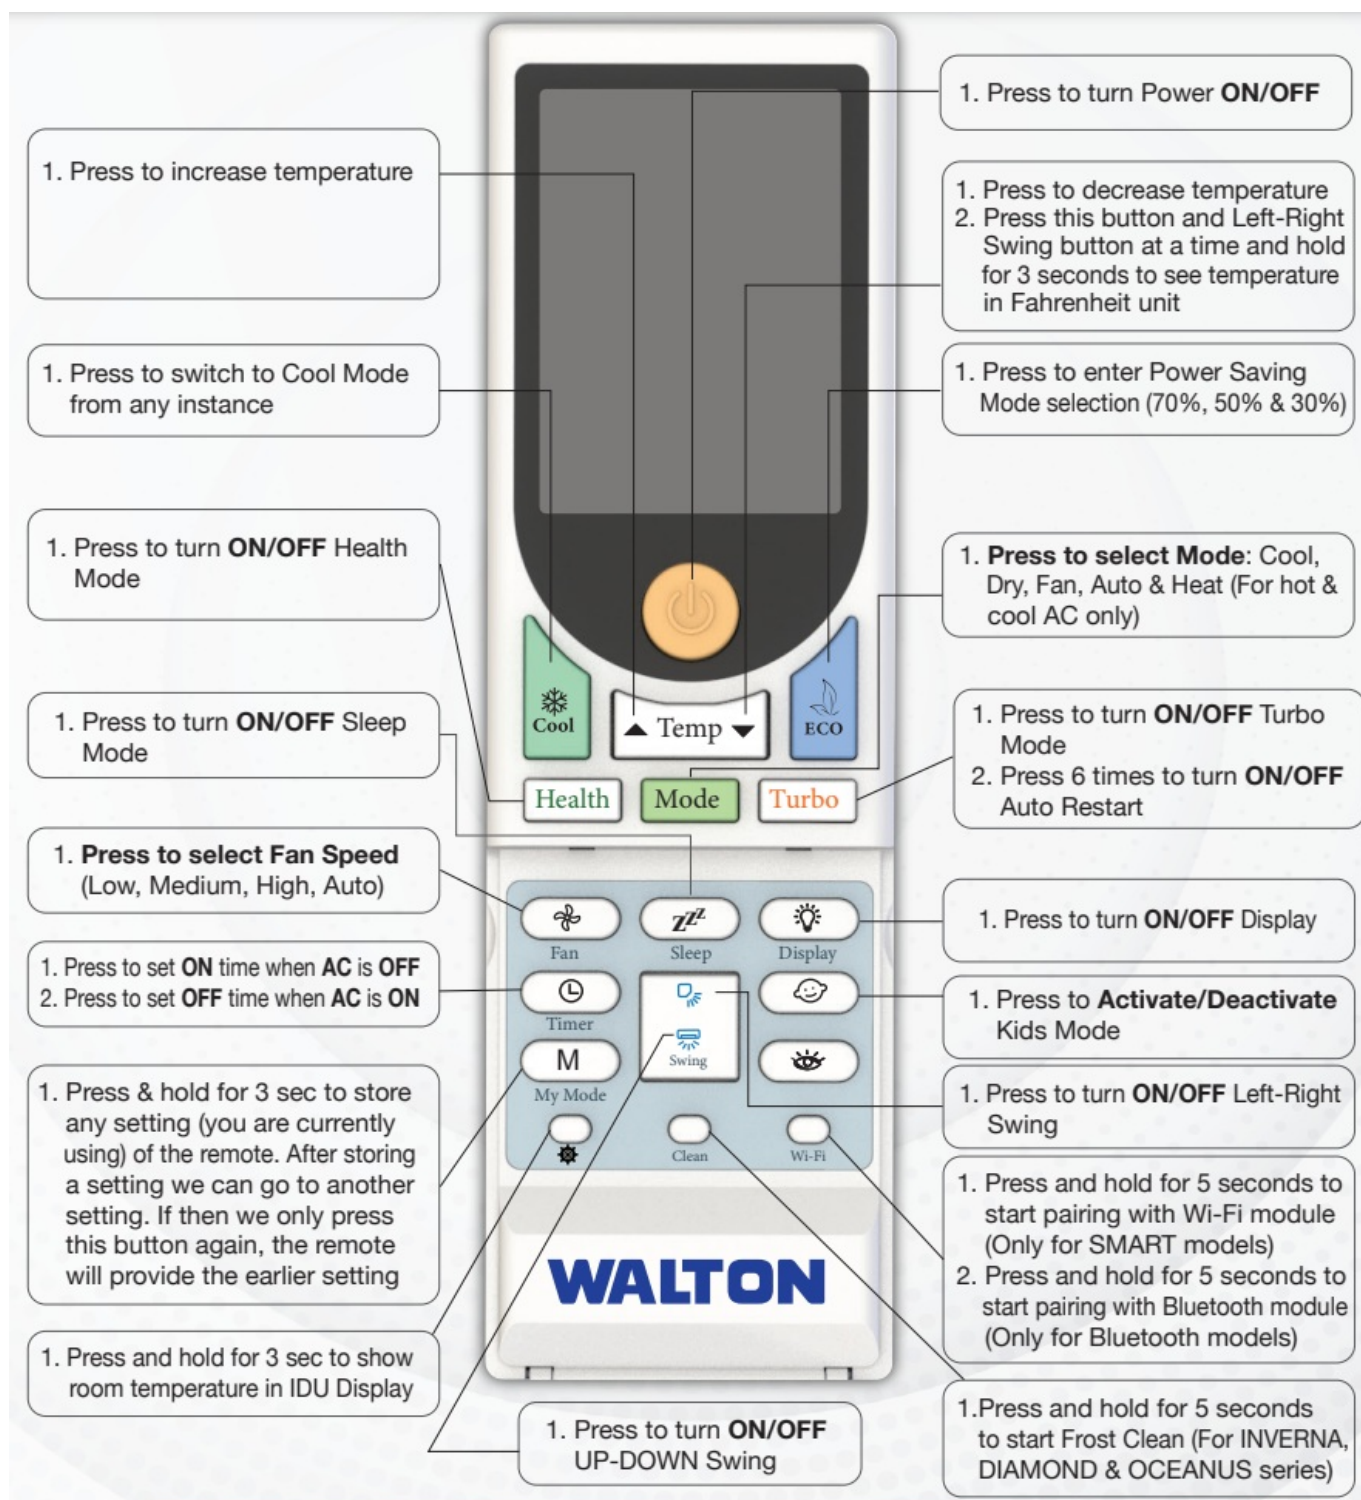

1. Kids Mode & Auto restart Activation/Deactivation work only in Cool Mode and Heat Mode
2. Frost Clean Function works only in Cool Mode
3. Press any key and hold for 3 seconds to turn on backlight.

Documents / Resources

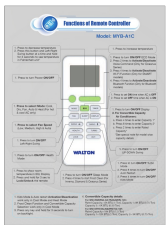

[WALTON MYB-A1C AC Remote Control](#) [pdf] User Manual
MYB-A1C, AC Remote Control, MYB-A1C AC Remote Control