



wanbo T2 Max LCD Projector User Manual

[Home](#) » [wanbo](#) » wanbo T2 Max LCD Projector User Manual 

Contents

- 1 wanbo T2 Max LCD Projector
- 2 Dear customer,
- 3 Important Safety Precautions
- 4 Projector Introduction
- 5 Installation and Adjustment
- 6 Remote Control
- 7 Image Mirroring
- 8 Projector Distance Reference Table
- 9 Maintenance
- 10 Cleaning the Projector
- 11 Warranty Conditions
- 12 EU Declaration of Conformity
- 13 Documents / Resources
 - 13.1 References
- 14 Related Posts

wanbo

wanbo T2 Max LCD Projector



Specifications

- **Product name:** T2 Max Blue v2
- **Light source:** [Not specified]
- **Operation mode:** [Not specified]
- **Output port:** [Not specified]
- **Weight:** [Not specified]
- **Accessories:** [Not specified]
- **Display technology:** [Not specified]
- **Speaker:** [Not specified]
- **Working environment:** [Not specified]
- **Input port:** [Not specified]
- **Size:** [Not specified]

Dear customer,

Thank you for purchasing our product. Please read the following instructions carefully before first use and keep this user manual for future reference. Pay particular attention to the safety instructions. If you have any questions or comments about the device, please contact the customer line.

www.alza.co.uk/kontakt

Importer

- +44 (0)203 514 4411
- Alza.cz a.s., Jankovcova 1522/53, Holešovice, 170 00 Praha 7, www.alza.cz


Important Safety Precautions

It is recommended to use the projector in a dark room to achieve the best effect.


- Do not install the projector in places that are heavily air conditioned as water condensation or high temperature may lead to projector failure.
- Ensure adequate ventilation and that vents are not blocked to prevent heat accumulation inside the projector.
- Prevent foreign matters such as nails or paper scraps from falling into the projector. Do not insert any metals, e.g., iron wire or screwdriver, into the projector. Turn off the power immediately and turn to professional technician to remove it if any foreign matters had fallen into the body of the projector.
- Do not place any liquid on the projector to avoid risk of electric leakage.
- Use soft packaging materials to move the projector, install lens protection cover to protect the lens from scraping, and keep the projector away from violent vibration.
- Areas near the exhaust vent will become hot during the use of the projector, and touching those areas may result in burns if they are touched by bare hands.
- Don't stare into the lens directly so as to protect your eyesight.


Notes

- Don't open the casing of the projector in order to prevent electric shock. Please turn to qualified professional maintenance personnel for the maintenance as there are no parts in the machine that users can repair themselves.
- Don't expose the projector to rain or moisture so as to prevent misfire or electric shock.
- The product is applicable to be used in temperature range between 0~35°C.
- Don't install in places with poor ventilation

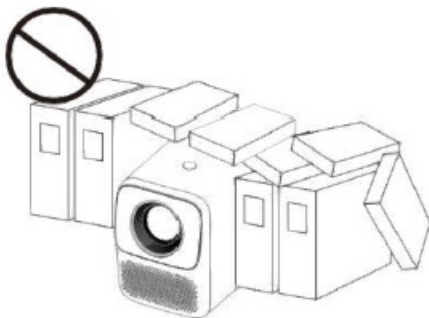


- Don't install in places that are hot and humid.
- Don't block the vents.

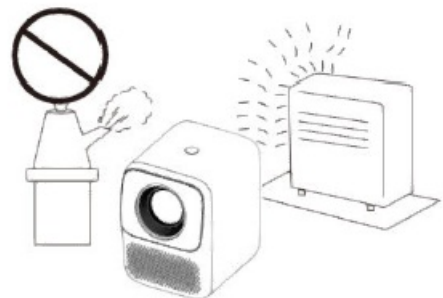

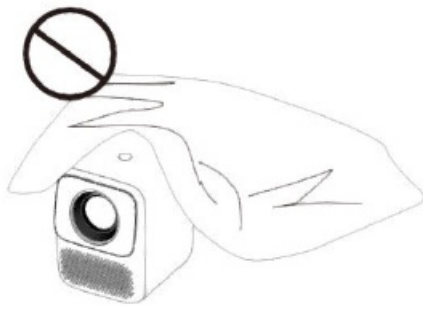

- Don't install in dusty and smoky areas.

Projector Introduction

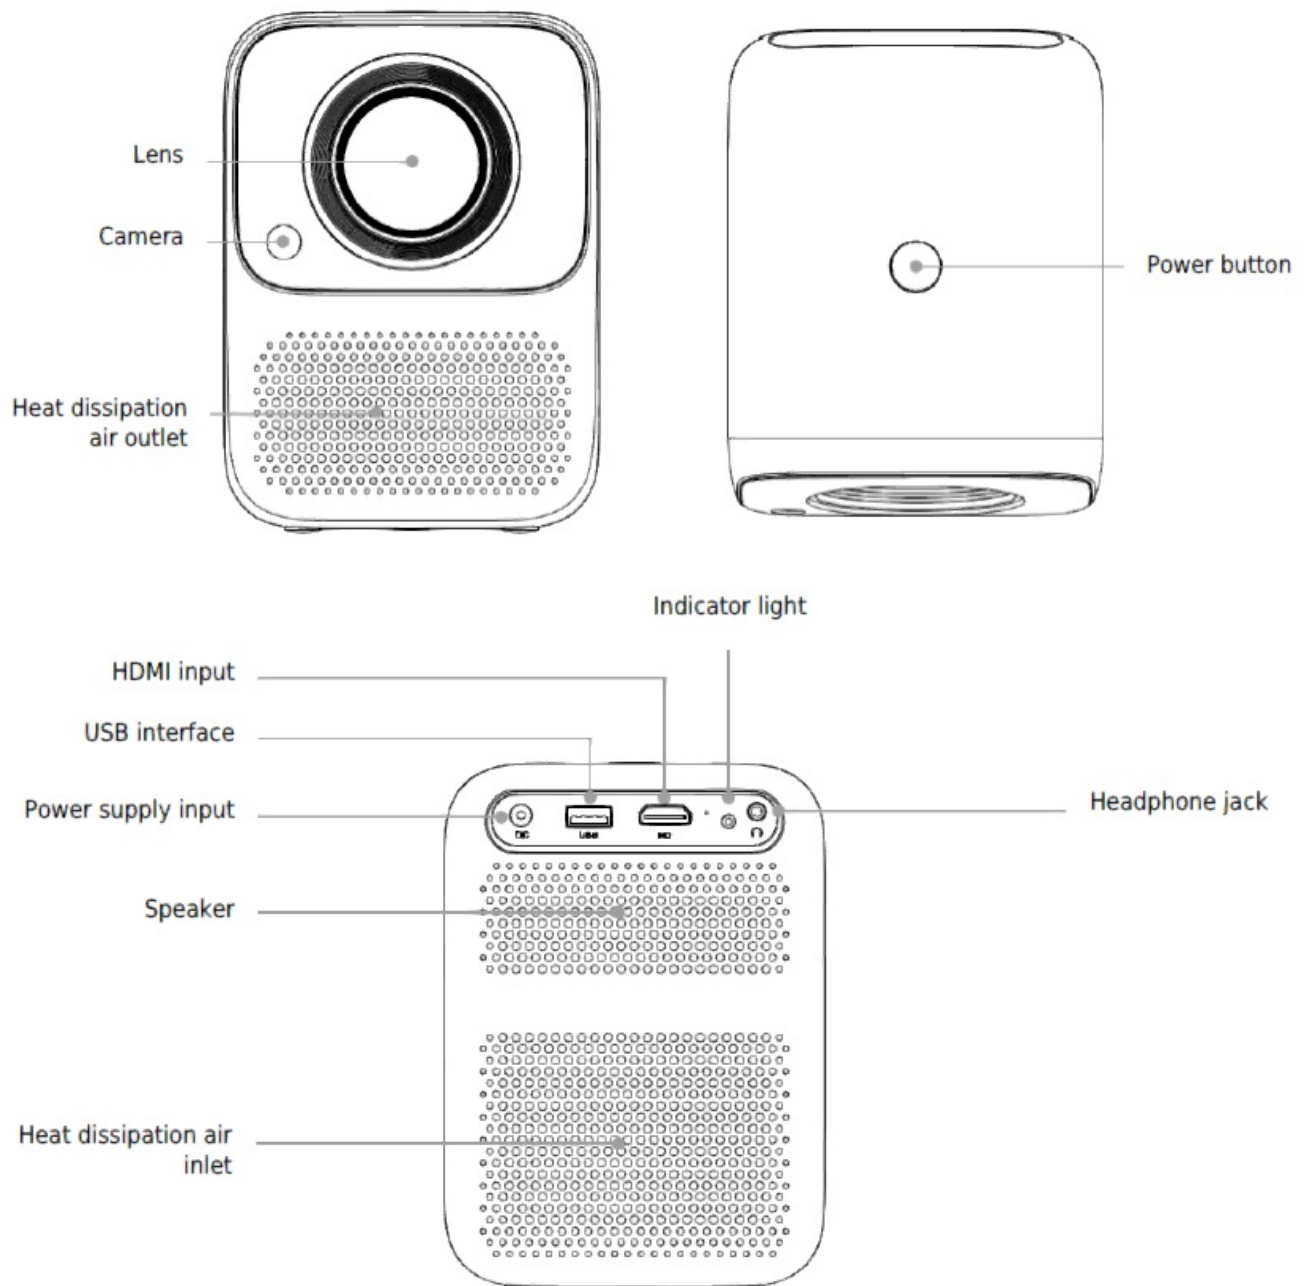


Installation and Adjustment

Powering On and Off

- To power on the projector, either press the power button on the projector, or point the remote control to the projector and press the power button.
- To power off the projector, short press the power button on the projector, or point the remote control to the projector and press the power button. Once shutdown prompt box appears, short press the same button again.

Focal Length Adjustment

- When the picture image is blurred, adjust the lens focus by using the rotation buttons on the remote control.

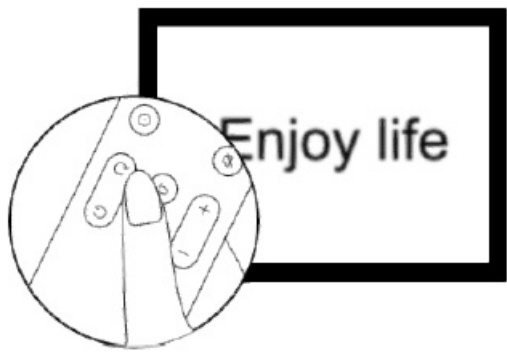

Parameters

Product name	Wanbo Projector
Light source	LED
Operation mode	Remote control
Output port	Headphone audio output
Weight	1.1kg
Accessories	User manual, remote control, power cord, adapter
Display technology	LCD
Speaker	3W ×2
Working environment	0~35°C
Input port	HDMI, USB
Size	113×146×156.5mm

Remote Control

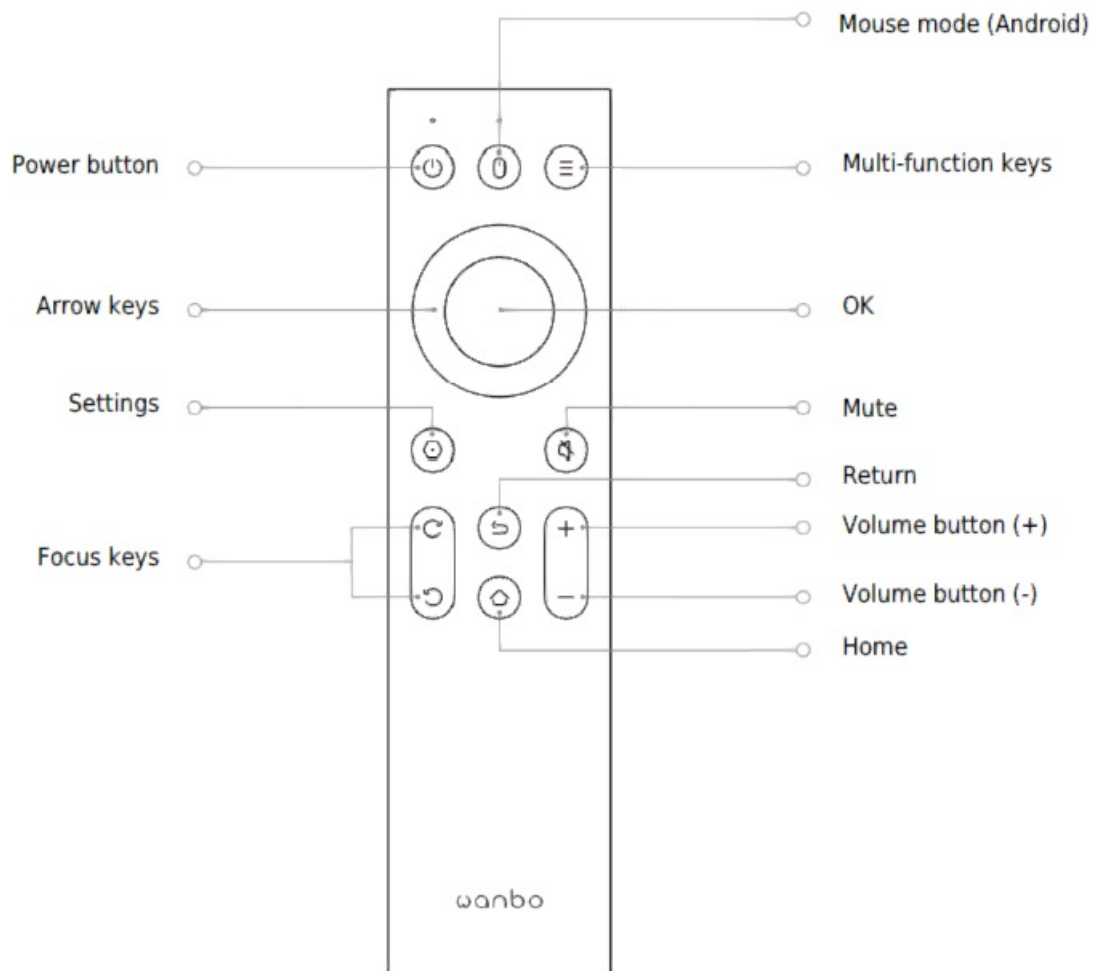


Image Mirroring

- The following steps can help you to display content of your mobile phone on the projection coming from the projector through Wi-Fi. In order to proceed, you will need an iPhone with iOS 6 and above, or Android phone with Android 5.3 and above.

Android

- First, ensure that the phone and the projector are both connected to the same Wi-Fi network. Then, open "Eshare" on the projector. Finally, choose the device with the same name that is shown on the Eshare to complete the connection.

iOS

- First, ensure that the phone and the projector are both connected to the same Wi-Fi
- network. Then, open "Eshare" on the projector. Next, open "AirPlay" / "Screen Mirror" on your iPhone. Finally, choose the device with the same name that is shown on the Eshare to complete the connection.

iOS – Image Mirroring Without Wi-Fi

- If there is no Wi-Fi, first turn on the mobile data, then turn on the Wi-Fi hotspot. On the projector, open "Eshare". On your iPhone, open "Airplay" / "Screen Mirror" and find the projector to connect to it.

Screen Extension

- Note: Advantage of screen extension, in contrast with image mirroring, is that while image mirroring enables you to see the screen of your phone on your projector, screen extension lets you use your phone without any complications while the image you wish to show is projected.
- First, ensure that the phone and the projector are both connected to the same Wi-Fi network. Then, open “Eshare” on the projector. Next, open “AirPlay” / “Screen Mirror” on your phone. Search for the projector and connect to it. Open the video software of the mobile phone and find the TV Mirroring icon (usually it’s located in the top right corner). Note that not all software has this function.

Signal Source Setting

- Enter the Settings interface from the main screen and select input sources. Choose what input source you want to use and hit OK to confirm the switch.
- To navigate through the menus, press return to return to the previous layer, and press the home button to return to the main interface.

Projector Distance Reference Table

Projection size [“]	Screen length×width [m]	Lens ~ screen [m]
40	0.89×0.5	1.07
50	1.12×0.62	1.33
60	1.33×0.75	1.6
70	1.55×0.87	1.87
80	1.77×1.0	2.13
90	1.99×1.12	2.4
100	2.21×1.25	2.67
110	2.44×1.37	2.93
120	2.66×1.49	3.2

Note: Projection size and distance are calculated according to projection ratio, which may have a deviation and subject to actual status.

USB Drive Supported Formats

File type	File format supported
Image	JPG, PNG, BMP
Audio	MP3, WAV, AAC, AC3, EAC3, Vorbis, FLAC, APE, DTS, DTS HD
Video	3GP, 3G2, AVI, FLV, F4V, MP4, MOV, TS, M2TS, M2T, MTS, TP, TRP, M2P, MKV, VOB, DAT, M4V, ASF, WEBM, 3GP, MP3, WAV, MPEG, PCM, MKA

Note: Specific operation contents are subject to actual situation due to irregular updates of the products system.

Maintenance

- Before cleaning, make sure the projector is not plugged into the power source.
- Do not use pesticides or other volatile chemicals on the projector or lens. Do not let rubber or vinyl products contact the projector for prolonged periods of time, since that could damage the coating and make it peel off.

Cleaning the Projector

- Wipe the projector with a soft, dry, cotton cloth. If it's heavily dirtied, wipe it with soft cloth that has been dampened with neutral detergent, then dry it with a clean and dry cloth immediately after that. Pay more attention if you decide to use chemical fibre cloth.
- Don't use thinner, benzene, or any other solvents to avoid quality reduction or coating peeling off, etc.
- A brush adapter can be inserted onto the vacuum cleaner to remove dirt inside the vents. Please don't use vacuum cleaner with no connector, or clean vents directly.
- Don't scrape the projector with nails or any other hard objects so as to avoid scratches.

Cleaning the Lens

- Clean lens with the same method as you'd clean the camera lens – use professional blow dryer or cleaning paper for glasses, ensure lens are not scratched.

Cleaning the Vents

- Dust in the inlet or outlet will prevent ventilation and increase the internal temperature, which will cause defects.
- Disconnect the power cable immediately after turning off the projector.
- Clean the exterior with an electric vacuum cleaner but install brush head adapter on the vacuum cleaner first. Don't use vacuum cleaner with no connector or brush.

Warranty Conditions

- A new product purchased in the Alza.cz sales network is guaranteed for 2 years. If you need repair or other services during the warranty period, contact the product seller directly, you must provide the original proof of purchase with the date of purchase.
- The following are considered to be a conflict with the warranty conditions, for which the claimed claim may not be recognized
- Using the product for any purpose other than that for which the product is intended or failing to follow the instructions for maintenance, operation, and service of the product.
- Damage to the product by a natural disaster, the intervention of an unauthorized person or mechanically through the fault of the buyer (e.g., during transport, cleaning by inappropriate means, etc.).
- Natural wear and aging of consumables or components during use (such as batteries, etc.).
- Exposure to adverse external influences, such as sunlight and other radiation or electromagnetic fields, fluid intrusion, object intrusion, mains overvoltage, electrostatic discharge voltage (including lightning), faulty supply or input voltage and inappropriate polarity of this voltage, chemical processes such as used power supplies, etc.
- If anyone has made modifications, modifications, alterations to the design or adaptation to change or extend

the functions of the product compared to the purchased design or use of non-original components.


EU Declaration of Conformity

This equipment is in compliance with the essential requirements and other relevant provisions of EU directives.






WEEE

- This product must not be disposed of as normal household waste in accordance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE – 2012/19 / EU). Instead, it shall be returned to the place of purchase or handed over to a public collection point for the recyclable waste. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. Contact your local authority or the nearest collection point for further details. Improper disposal of this type of waste may result in fines in accordance with national regulations.
-

Documents / Resources

 <p>T2 Max Blue v2 Blue Projector • 1080P Full HD • 3000 Lumens • 100% RGB • 100% RGB • 100% RGB • 100% RGB</p>	<p>wanbo T2 Max LCD Projector [pdf] User Manual T2, T2 Max LCD Projector, Max LCD Projector, LCD Projector, Projector</p>
--	---

References

-  [alza.at](#)
-  [Alza | Alza.co.uk](#)
-  [alza.de](#)
-  [alza.hu](#)
-  [alza.sk](#)
- [User Manual](#)