

WAPPoint N910 Android User Guide

Home » WAPPoint » WAPPoint N910 Android User Guide



WAPPoint N910 Android



Contents

- 1 HOW DO I SWITCH THE DEVICE ON & OFF?
- **2 HOW TO MAKE A SALE**
- 3 HOW DO I REPRINT A SLIP?
- 4 MANUAL END-OF-DAY CASH UP
- **5 HOW TO SETUP DEVICE ON WIFI**

(OPTIONAL):

- **6 CUSTOMER SUPPORT**
- 7 Documents / Resources
 - 7.1 References
- **8 Related Posts**

HOW DO I SWITCH THE DEVICE ON & OFF?

• ON/OFF: Press the power button in on the left side of the device

To REBOOT device, hold the on button in until menu appears where you press 'reboot'

HOW TO MAKE A SALE

- · Once device is switched on, the Nedbank App will launch
- Enter the amount and press 'Confirm'
- Device will display: TOTAL: 'Amount'
- Customer can complete the transaction
 - Chip & Pin
 - Swipe & Sign (if card does not have chip)
 - Tap & Go
 - Device will display: 'Transaction Approved'
- · Options for next steps:
 - Print Customer Copy / Skip

HOW DO I REPRINT A SLIP?

- In the menu button in the top right corner
- · Select 'Reporting'
- · Select 'Receipts'
 - ∘ ID = 1
 - o Pin: 12345
- · Select 'Last Receipt' or 'Specific Receipt;
- If 'last receipt' selected. Device will reprint the last transaction
- If 'Specific Receipt' selected: Enter Receipt Number, you would like to reprint and press 'confirm'

MANUAL END-OF-DAY CASH UP

- · Menu button top right
- · Merchant Configuration

- · Select 'Batch Upload'
 - User ID = 1
 - User Pin 12345
 - Login

This should be done at the end of each day

HOW TO SETUP DEVICE ON WIFI (OPTIONAL):

- From the Home screen, select 'System'
- Enter Supervisor Login
 - User ID: 1
 - User Pin: 12345
- · Select 'WiFi'
- · Select Wifi Connection, enter wifi password and click 'Connect

CUSTOMER SUPPORT

support@wappoint.co.za 021 3000 121

www.wappoint.co.za



Documents / Resources



WAPPoint N910 Android [pdf] User Guide N910, N910 Android, N910, Android

References

- WAPPoint Accept Card Payments with a WAPPoint Card Machine.
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.