


WARING TBB145 2.0 – 2 HP Blender with Toggle Switch **Instruction Manual**

Home » WARING » WARING TBB145 2.0 – 2 HP Blender with Toggle Switch Instruction Manual





TBB145 2.0 – 2 HP Blender with Toggle Switch **Instruction Manual**

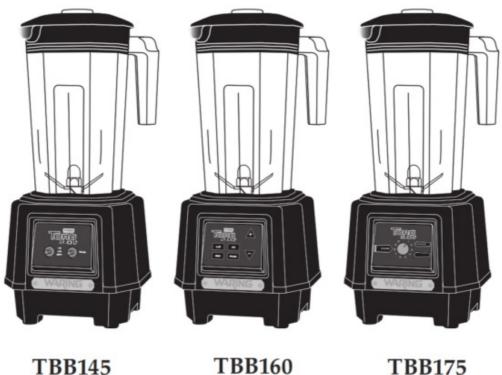





before using it.

Contents

- 1 IMPORTANT SAFEGUARDS
- **2 GROUNDING INSTRUCTIONS**
- **3 BLENDER SPECIFICATIONS**
- **4 PARTS & ASSEMBLY**
- **5 OPERATING INSTRUCTIONS**
- **6 CLEANING AND SANITIZING**

INSTRUCTIONS

- **7 SERVICE**
- **8 WARRANTY**
- 9 Documents / Resources
 - 9.1 References
- 10 Related Posts

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be taken, including the following:

- 1. READ ALL INSTRUCTIONS.
- 2. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- 3. To protect against electrical hazards, do not immerse the blender base in water or other liquids.
- 4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- 5. Children should be supervised to ensure that they do not play with the appliance.
- 6. Avoid contact with moving parts.
- 7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or electrical or mechanical adjustment.
- 8. The use of attachments not recommended by the appliance manufacturer may cause hazards.
- 9. Do not use outdoors.
- 10. Do not let the cord hang over the edge of the table or counter, where it can inadvertently be pulled on or tripped over, or touch hot surfaces, which could damage the cord.
- 11. Keep hands and utensils out of the container while blending to prevent the possibility of severe personal injury and/or damage to the blender. A rubber scraper may be used but must be used only when the blender is not running.
- 12. Blades are sharp. Handle carefully.
- 13. Never place cutting assembly or cutting blades on base without container properly attached.
- 14. Always operate blender with cover in place.
- 15. Always operate blender with jar pad in place.
- 16. **CAUTION:** This blender is not intended for use with hot liquids or ingredients.
- 17. Do not fill above the MAX FILL line for blending.
- 18. Not for waterjet cleaning.
- 19. Ensure the jar coupler and motor coupler are aligned and engaged before operating. If unable to engage,

remove the jar and shake the contents, then try again.

- 20. The jar coupler and motor coupler may be hot after running; do not touch them.
- 21. Replace jar pad is worn.
- 22. Always use HIGH speed for crushing ice.
- 23. If the jar overflows during blending, there is too much liquid/ingredients in the jar. Stop blending, remove enough liquid/ingredients to below MAX FILL line, and continue blending. Do not operate if overflowing.
- 24. DO NOT use carbonated liquids in the blender jar or any blending container. Using carbonated liquids in the blender jar or any blending container may result in injury.
- 25. DO NOT blend oil or oil-based products such as peanut butter for more than 5 minutes.
- 26. Never remove the blender jar from the base unit until the blade and coupling have completely stopped.
- 27. **CAUTION:** In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.


SAVE THESE INSTRUCTIONS

GROUNDING INSTRUCTIONS

- For your protection, Waring ® Commercial Blenders are equipped with a 3-conductor cord set.
- 120-volt units are supplied with a molded 3-prong grounding-type plug and should be used in combination with a properly connected grounding-type outlet, as shown in Figure 1.

If a grounding-type outlet is not available, an adapter, shown in Figure 2, may be obtained to enable a 2-slot wall outlet to be used with a 3-prong plug.

Referring to Figure 3, the adapter must be grounded by attaching its grounding lug under the screw of the outlet cover **plate**.

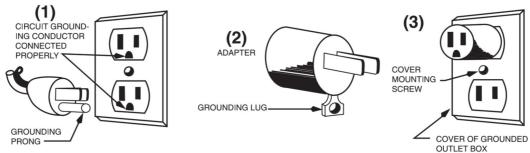

CAUTION: Before using an adapter, it must be determined that the outlet cover plate screw is properly grounded. If in doubt, consult a licensed electrician.

Never use an adapter unless you are sure it is properly grounded.

NOTE: The use of an adapter is not permitted in Canada.

BLENDER SPECIFICATIONS

• Capacity: 48 oz. Working Capacity

• Rating: 220-240 Volts, 60 Hz, 13.0 Amps

• Base Material: Polycarbonate

• Bearing: High-Precision Ball Bearing

Cord: 6-Foot, Three-Conductor Ground Cord with Strain Relief in Base

• Overall Height: 17 Inches


cULus, NSF Listed

• Operating Cycle: 1 min. ON/3 min. OFF

Controls:

TBB145 / TBB160 – LO 20,500, HI 24,000, PULSE 24,000 TBB175 – Variable speed dial from 1,000 to 17,000 RPM with Pulse, 24,000 RPM

PARTS & ASSEMBLY

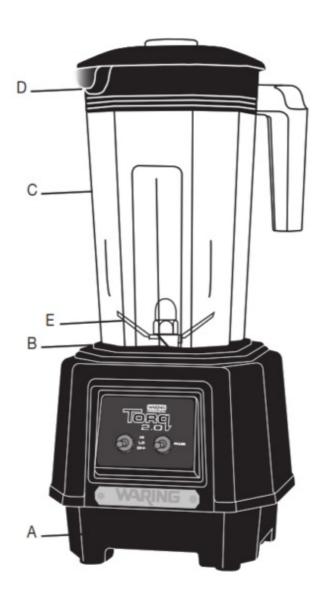

A. Base

B. Jar Pad

C. Container

48 oz., BPA-free copolyester container.

D. Lid

The Center part of the two-piece lid is removable for adding ingredients.

E. Blade

Stainless steel cutting blades.

F. Operating Light

Lighted LED indicates that the unit is in standby mode. LED will blink during operation.

G. Power Cord (not shown)

Control Panel Variations

TBB145 - Toggle Switch Controls with HI, LO, OFF & PULSE



TBB145

TBB160 - Electronic Touchpad Controls with HI, LO, STOP, PULSE & 60-Second Timer LED with Up







TBB160

TBB175 - Variable Speed Control Dial & PULSE



TBB175

PULSE Button Feature

PULSE overrides HI speed for a quick burst of power. All parts that come in contact with food are BPA-free.

BEFORE FIRST USE

After unpacking, follow the Cleaning and Sanitizing Instructions on page 9 before first use and if you have not used your blender for a period of time. Thoroughly dry the container before placing it on the base.

OPERATING INSTRUCTIONS

TBB145 – Toggle Switch Controls



- 1. With the blender unplugged and in the OFF position, place the container on the blender base. Be sure the container is fully seated and that the drive coupling is properly engaged.
- 2. Plug the power cord into an outlet and the LED operating light will illuminate.
- 3. Put ingredients into the container and place the lid on top. Do not fill above the MAX FILL line.
- 4. T his blender has 2-speed settings: HI and LO. Switch toggle switch to the desired position. Always use HI or PULSE for crushing ice.
- 5. When blending is complete, set the toggle switch to the OFF position.
- 6. This blender is equipped with a PULSE option. Hold the toggle switch in the down position to engage the PULSE function. The unit will run on MAX speed until the toggle switch is released.
 - **NOTE:** This blender utilizes a Slow Start [™] feature. When beginning HI or LO operation, the unit will start at a slower speed for 1 second and then switch to the full selected speed. PULSE utilizes a .5-second Slow Start [™]. This allows for a more even blending of ingredients in the container.
- 7. Allow the motor to come to a complete stop before removing the container from the blender base. Never place the container on the motor base or remove it from the motor base while the motor is running.
- 8. Always hold the container with one hand when starting and while blending. Never operate without a lid.
- 9. Wash and dry the container after each use. See Cleaning and Sanitizing Instructions.
- 10. Unplug to turn off all power to the blender.

TBB160 – Electronic Touchpad Controls with Timer

Follow steps 1–3 from the TBB145 operating instructions.



4. T his blender is equipped with electronic touchpad controls with HI, LO, STOP, and PULSE buttons as well as a 60-second countdown timer. Always use HI or PULSE for crushing ice.

NOTE: Blender can operate in two modes: Timer Mode & Continuous Mode.

arrow to set the desired time on the LED display, up to 60 5. For timer mode, press the up are or down arrow for fast scrolling. After the time is set, press either LO seconds. Press and hold the up or down or HI to start the blender. LED will blink during blending. The timer will count down to 0 in 1-second intervals and then the blender will stop. Once you set a time, it will be kept and is repeatable until reset or unplugged.

NOTE: If you want to increase or decrease the time while the timer is counting down, press the up or down

arrow symbols as needed. Time will increase in 1-second intervals. Pressing the PULSE or STOP button during timer mode will stop the motor regardless of how much time is left on the timer.

6. For continuous operation, press either the LO or HI button. When blending is complete, press STOP. For momentary operation, press the PULSE button; the motor will run on MAX speed until the button is released.

NOTE: This blender utilizes a Slow Start ™ feature. When beginning HI or LO operation, the unit will start at a slower speed for 1 second and then switch to the full selected speed. PULSE utilizes a .5-second Slow Start ™. This allows for a more even blending of ingredients in a container.

- 7. Allow the motor to come to a complete stop before removing the container from the blender base. Never place the container on the motor base or remove it from the motor base while the motor is running.
- 8. Always hold the container with one hand when starting and while blending. Never operate without a lid.
- 9. Wash and dry the container after each use. See Cleaning and Sanitizing Instructions.
- 10. Unplug to turn off all power to the blender.

TBB175 - Variable Speed Controls

Follow steps 1-3 in the TBB145 operating instructions.



- 4. T his blender is equipped with a Variable Speed Control Dial that operates from speeds 1–10 and POWER, START/STOP, and PULSE buttons. Always use Speed 10 or PULSE for crushing ice.
- 5. For continuous blending, turn the variable speed control dial clockwise to set the speed from 1-to 10. Press the

START/ STOP button to start blending. The LED will blink during blending. When blending is complete, press the START/ STOP button to stop blending. You may wish to start at a low speed and increase to a higher setting.

6. For momentary operation, press the PULSE button; the motor will run on MAX speed until the button is released.

NOTE: This blender utilizes a Slow Start [™] feature. When beginning HI or LO operation, the unit will start at a slower speed for 1 second and then switch to the full selected speed. PULSE utilizes a .5-second Slow Start [™]. This allows for a more even blending of ingredients in a container.

- 7. Allow the motor to come to a complete stop before removing the container from the blender base. Never place the container on the motor base or remove it from the motor base while the motor is running.
- 8. Always hold the container with one hand when starting and while blending. Never operate without a lid.
- 9. Wash and dry the container after each use. See Cleaning and Sanitizing Instructions.
- 10. Unplug to turn off all power to the blender.

RESETTING THERMAL PROTECTION

- Your blender is equipped with a manual reset switch to protect the motor from overheating.
- If your blender stops running under heavy use, or if the LED light starts to blink much more rapidly than usual during normal blending, press the power switch to OFF and unplug the power cord. Empty the blender container of all its contents and allow approximately 5 to 10 minutes for the motor to cool down.
- Plug the power cord back into the outlet and continue blending.
- If your blender does not function properly following this procedure, discontinue use and contact a certified Waring Customer Service Center.

CLEANING AND SANITIZING INSTRUCTIONS

THE CONTAINER MUST BE CLEANED AND DRIED AFTER EACH USE OF THE BLENDER ACCORDING TO THE FOLLOWING INSTRUCTIONS.

FAILURE TO DO SO MAY ALLOW RESIDUE OF PROCESSED MATERIAL TO COLLECT ON THE INTERNAL SEALS OF THE BLADE ASSEMBLY, RENDERING THEM INEFFECTIVE.

- Wash, rinse, sanitize, and dry the container prior to initial use and whenever it will not be used again within a period of 1 hour.
- Wash and rinse the container after each use.
- Clean and sanitize the motor base prior to initial use and after each use.
- Washing solutions based on non-sudsing detergents and chlorine-based sanitizing solutions having a minimum chlorine concentration of 100 PPM are recommended.

The following washing, rinsing, and sanitizing solutions, or their equivalents, may be used.

SOLUTION	PRODUCT	DILUTION IN WATER	TEMPERATURE
Washing	International Products Co rporation LF2100 Liquid L ow-Foam Cleaner	1%-2%: 11/4 – 23/4 Ounce/Gallon (lower dilution of 1% for normal cleaning and up t o 2% for more stubborn soils)	Room Temperature
Rinsing	Plain Water		Warm 95°F (35°C)
Sanitizing	Clorox® Regular Bleach (8.25% Hypochlorite Concentration)	2 Teaspoons/Gallon (Alternately a bleach with 5.25% Hypochlorite Concen tration can be used at a dilution of 3 Teaspoons/Gallon)	

- In repetitive batch-processing applications, frequent cleaning of the container will prolong the life of the blade assembly. In no case should the actual running time between cleanings exceed one-half hour?
- Do not use containers to store processed foods or beverages.

TO WASH AND RINSE CONTAINER

- 1. **REMOVE CONTAINER FROM MOTOR BASE.** Remove lid. Rinse the container interior and lid under running water. Add washing solution to the container. Scrub and flush out the container interior and lid to dislodge and remove as much food residue as possible. Empty container.
- 2. Wipe down the exterior of the container with a soft cloth or sponge dampened with a washing solution. Wash lid and lid insert in a fresh washing solution. Fill container one-quarter full with fresh washing solution, cover (with lid only), place on the motor base, and run on HI speed for two (2) minutes. Empty container.
- 3. Repeat step 2 using clean rinse water in place of the washing solution.

IMPORTANT

NOTE: IN ORDER TO MINIMIZE THE POSSIBILITY OF SCALDING, THE TEMPERATURE OF THE WASHING SOLUTION AND RINSE WATER MUST NOT EXCEED 115°F (46°C), AND THE QUANTITY USED MUST NOT EXCEED ONE-QUARTER CONTAINER FULL.

TO SANITIZE AND DRY THE CONTAINER

- 1. Wipe down the exterior of the container with a soft cloth or sponge dampened with sanitizing solution.
- 2. Fill the container with sanitizing solution, cover, place on the motor base, and run on HI speed for one (1) minute. Empty container. Dislodge any residual moisture from blade assembly by placing the empty container on the motor base and running on HI speed for two (2) seconds.
- 3. Sanitize lid and lid insert by immersing in sanitizing solution for two (2) minutes.
- 4. Do not rinse the container, lid, or lid insert after sanitizing is completed. Allow parts to air-dry.

TO CLEAN AND SANITIZE MOTOR BASE

- 1. UNPLUG THE POWER CORD. Wipe down exterior surfaces of the motor base with soft cloths or sponges dampened with washing solution, rinse water, and sanitize the solution. Prevent liquid from running into the motor base by wringing all excess moisture from clothes or sponges before using them.
 - DO NOT IMMERSE MOTOR BASE IN WASHING SOLUTION, RINSE WATER, OR SANITIZING SOLUTION.

2. Allow the motor base to air-dry before using.

SERVICE

Refer to the list of Authorized Service Centers enclosed with your Waring ® Commercial Blender for the name of the nearest Service Center or write to:

Waring Factory Service Center

P.O. Box 3201 314 Ella T. Grasso Avenue Torrington, CT 06790 (800) 492-7464

NOTE: If your application involves the processing of biologically active material, we request that any items returned for service be sterilized before being shipped. Such items must be clearly identified as having been sterilized, both by a tag on the item itself and by a statement in the accompanying correspondence. Waring will not accept delivery of any return unless it is so identified. Replacement parts for your out-of-warranty repairs are obtainable at the address below.

WARRANTY

LIMITED TWO YEAR MOTOR WARRANTY LIMITED ONE YEAR PARTS AND LABOR WARRANTY (U.S. and Canada Only)

Waring warrants every new Waring ® Commercial Blender to be free from defects in material and workmanship for a period of one year from the date of purchase when used with foodstuffs, nonabrasive liquids (other than detergents), and nonabrasive semiliquids, providing it has not been subject to loads in excess of the indicated rating. In addition, the motor in this appliance has a full two-year warranty.

Under this warranty, Waring will repair or replace any part that, upon our examination, is defective in materials or workmanship, provided the product is delivered prepaid to the Waring Service Center at 314 Ella T. Grasso Ave., Torrington, CT 06790, or any Factory Approved Service Center.

This warranty does not: a) apply to any product that has become worn, defective, damaged, or broken due to misuse or due to repairs or servicing by other than the Waring Service Center or a Factory Approved Service Center, or due to abuse, misuse, overloading or tampering; or b) cover incidental or consequential damages of any kind.

The warranty is applicable only to appliances used in the United States or Canada; this supersedes all other express product warranty or warranty statements. For Waring products sold outside of the U.S. and Canada, the warranty is the responsibility of the local importer or distributor. This warranty may vary according to local regulations.

Warning: This warranty is void if the appliance is used on Direct Current (DC).

Waring Commercial 314 Ella T. Grasso Avenue Torrington, CT 06790 1-800-4-WARING

www.waringcommercialproducts.com



©2020 Waring Commercial 314 Ella T. Grasso Ave. Torrington, CT 06790

www.waringcommercialproducts.com

TBB Series IB 20WC073399 Part Number – 035217 RVOO – 1512

Documents / Resources



WARING TBB145 2.0 - 2 HP Blender with Toggle Switch [pdf] Instruction Manual TBB145, TBB160, TBB175, 2.0 2 HP Blender with Toggle Switch

References

W Waring® Commercial

Manuals+,