 
 


# WAVES SUBBAN Subwoofer Alignment Plugin for PA System User Guide

[Home](#) » [WAVES](#) » WAVES SUBBAN Subwoofer Alignment Plugin for PA System User Guide 

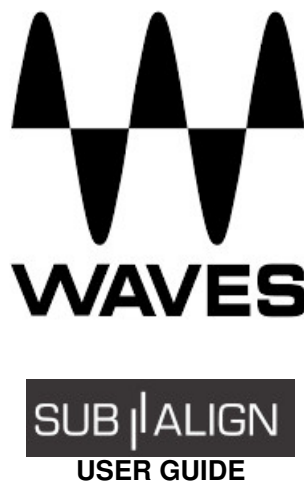

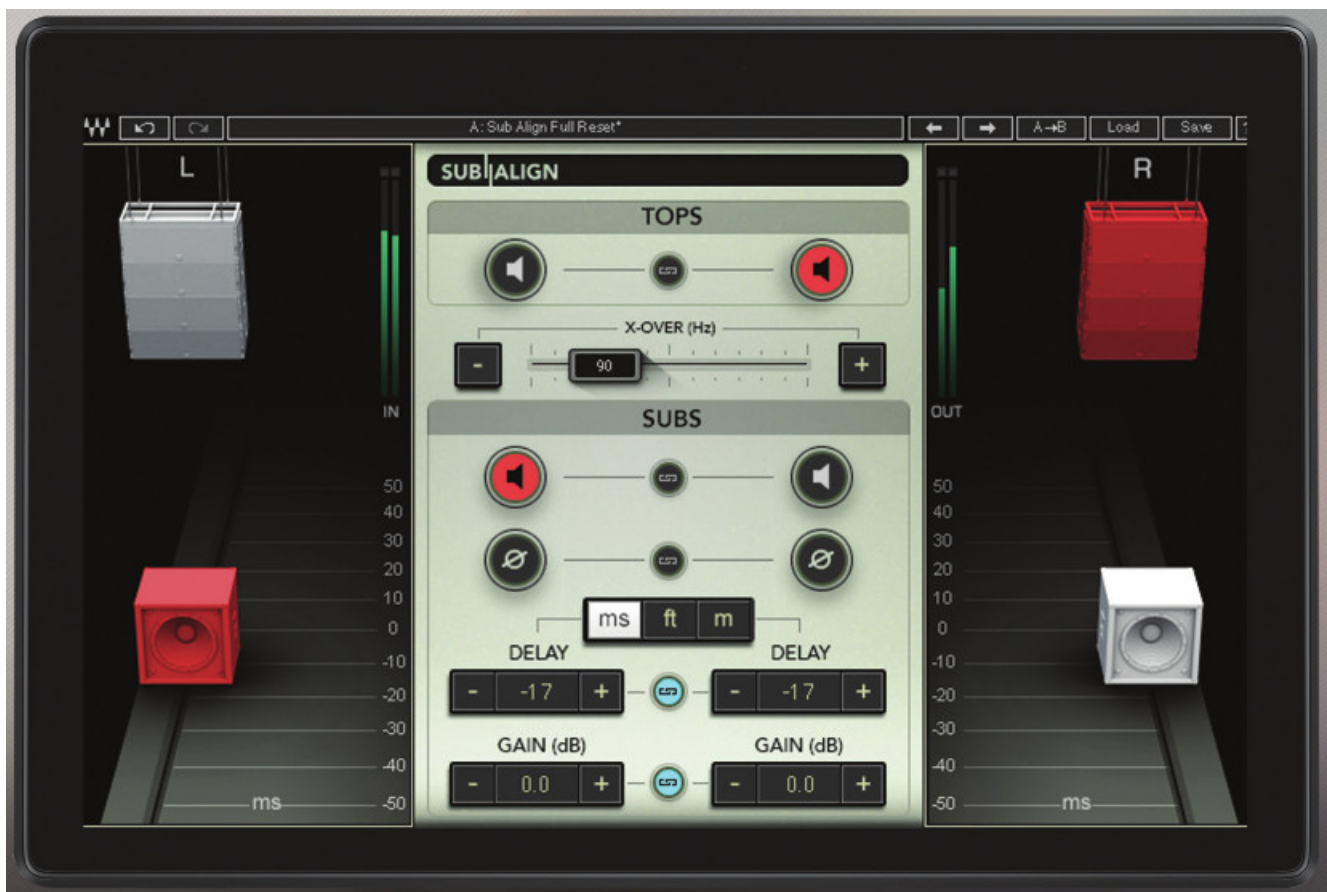

## Contents

### 1 CHAPTER 1: INTRODUCTION

#### 1.1 Welcome

#### 1.2 Product Overview

#### 1.3 Components

### 2 CHAPTER 2: QUICK START GUIDE

### 3 CHAPTER 3: INTERFACE AND CONTROLS

#### 3.1 Interface

#### 3.2 Controls

#### 3.3 Sub Align Block Diagram

### 4 Documents / Resources

### 5 Related Posts

## CHAPTER 1: INTRODUCTION

### Welcome

Thank you for choosing Waves! In order to get the most out of your new Waves plugin, please take a moment to read this user guide.

To install software and manage your licenses, you need to have a free Waves account. Sign up at [www.waves.com](http://www.waves.com). With a Waves account you can keep track of your products, renew your Waves Update Plan, participate in bonus programs, and keep up to date with important information.

We suggest that you become familiar with the Waves Support pages: [www.waves.com/support](http://www.waves.com/support). There are technical articles about installation, troubleshooting, specifications, and more. Plus, you'll find company contact information and Waves Support news.

### Product Overview

Sub Align is built to reclaim control of the subs when you don't have access to the system processor and the subs are tied in with the tops. The plugin artificially creates a crossover point between the tops and the subs and provides delay, phase and gain control over the predetermined sub range of frequencies. This allows you to "move" and control the subs even when they are tied in with the tops.

## Components

WaveShell technology enables us to split Waves processors into smaller plugins, which we call components. Having a choice of components for a particular processor gives you the flexibility to choose the configuration best suited to your material. The Sub Align plugin includes the following components:

 
- Sub Align Mono
- Sub Align Stereo

## CHAPTER 2: QUICK START GUIDE

As with all Waves plugins, factory presets are a good place to start. Use the bar at the top of the plugin to save and load presets, compare settings, undo and redo steps, and resize the plugin. To learn more about the WaveSystem Toolbar, click the icon at the upper-right corner of the window and open the WaveSystem Guide. Choose the preset closest to your preference. Tweak it from there. You can always reset all plugin controls by loading the Sub Align "Full Reset" preset.

## CHAPTER 3: INTERFACE AND CONTROLS

### Interface

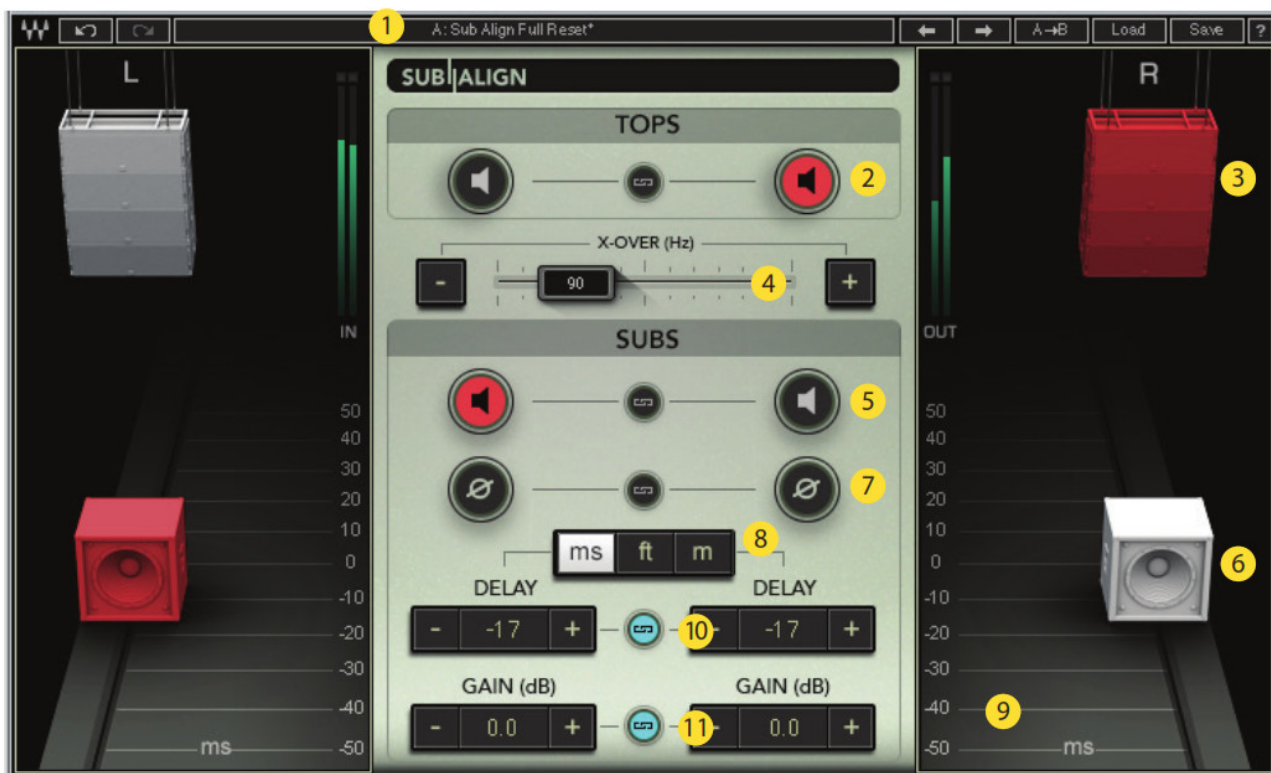

1. WaveSystem Toolbar	7. Subs Phase
2. Tops Solo	8. Subs Delay Scale Units
3. Tops	9. Subs Delay Scale
4. X-Over	10. Subs Delay
5. Subs Solo	11. Subs Gain
6. Subs	

## Controls

### Tops Solo



Solos the Tops.

Tops turn orange when Solo is activated.

In the Sub Align Stereo component, click the Link icon  to link the Left and Right sides.

Range: On, Off

Default: Off

### X-Over



Slide the X-Over fader left or right to adjust the crossover point between the tops and the subs.

Changes in the crossover point will be heard most clearly when you solo the tops or the subs. Use

the +/- controls for fine tuning.

Range: 40250 Hz


Default: 90 Hz

### Subs Solo



Solos the Subs.

Subs turn orange when Solo is activated.

In the Sub Align Stereo component, click the Link icon  to link the Left and Right sides.

Range: On, Off

Default: Off

### Subs

The large Subs icons (item 6 in the interface legend above) are actually movable faders. You can move them up and down the scale. The scale reflects changes in delay time.

### Subs Phase



Click to flip the subs' polarity 180 degrees.

In the Sub Align Stereo component, click the Link icon  to link the Left and Right sides.

Range: On, Off

Default: Off

### Subs Delay Scale Units



For convenience, delay time can be shown in one of three ways:

ms – milliseconds

ft - feet

m - meters

Default: ms

### Sub Delay Scale

The Sub Delay Scale will change per the Subs Delay Scale Units chosen.


### Subs Delay



Adjusts the delay time between the subs and the tops.

sides.

Use the +/- controls for fine tuning.

In the Sub Align Stereo component, click the Link icon  to link Left and Right

 
ms range: -50 to 50 milliseconds

ft range: -56 to 56

feet m range: -17 to 17 meters

Default: 0 ms

### Subs Gain



Adjusts the subs' output gain.

Right sides.


Use the +/- controls for fine tuning.

Range: - INF to 18 dB

Default: 0 dB

In the Sub Align Stereo component, click the Link icon  to link the Left and

### Sub Align Block Diagram

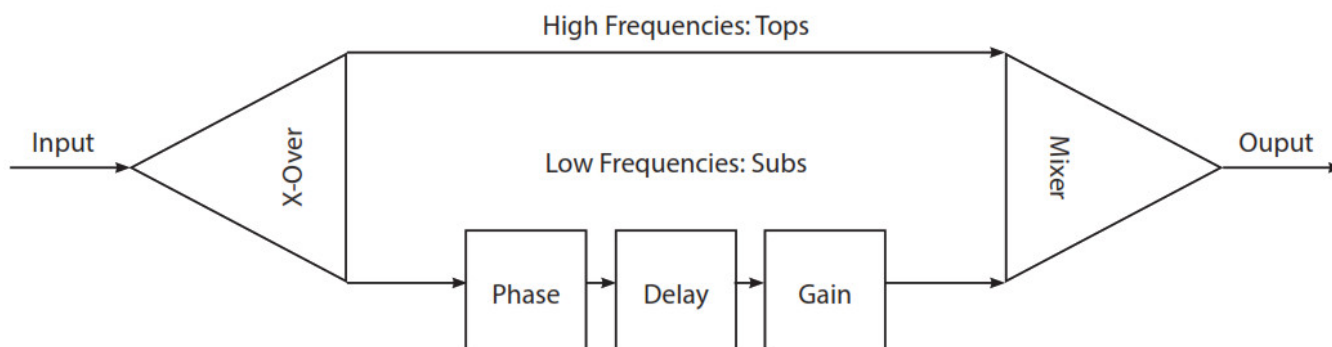 

### Documents / Resources



[WAVES SUBBAN Subwoofer Alignment Plugin for PA System](#) [pdf] User Guide  
SUBBAN Subwoofer Alignment Plugin for PA System, SUBBAN, Subwoofer Alignment Plugin f  
or PA System