



# Webasto Auxiliary Heater with Parking Heater Functionality Instruction Manual

[Home](#) » [Webasto](#) » Webasto Auxiliary Heater with Parking Heater Functionality Instruction Manual 



**Operating instructions**  
Auxiliary heater with parking heater functionality

## Operation instructions

Auxiliary heater with parking heater functionality

Dear Webasto Customer,

We assume that the operation and function of your new heater have been explained to you by the installing workshop/service point to your complete satisfaction.

With these operating instructions, we once again wish to outline the safe use of the upgraded auxiliary heater with the parking heater function.

### Contents

- [1 Information on maintenance and safety](#)
- [2 Operation](#)
- [3 Pre settings in the vehicle](#)
- [4 Switching on with compatible control elements](#)
- [5 Measures in case of malfunction](#)
- [6 Canceling the fault lock-out](#)
- [7 Warranty](#)
- [8 Documents / Resources](#)
  - [8.1 References](#)
- [9 Related Posts](#)

## Information on maintenance and safety

The type approvals in accordance with the regulations ECE-R 122 (heating) and ECE-R 10 (EMC) for the Thermo Top Evo water heater apply in the area where the European Directive 70/156/EEC and/or EC/2007/46 (for new vehicle types as from 29/04/2009) is valid.

## **1.1 Safety precautions**

### **The heater may not:**

- be operated without containing a minimum quantity (as per the vehicle manufacturer's specification) of brand-name antifreeze in the water in the heating circuit.

### **The heater:**

- may only be operated with the fuel and the rated voltage specified on the type label.
- must be shut down by switching off immediately and removing the fuse in case of heavy smoking, unusual combustion noises, or combustion odors. The heater must not be restarted before it has been checked by trained personnel in a specialist workshop.
- should be operated for 10 minutes once a month at the lowest fan setting when the engine is cold and the outside temperature is below +20°C.
- must be checked by a specialist every 2 years or at the start of the heating period at the latest.
- must have sufficient fuel to ensure trouble-free operation over the entire operating period.

The fuel in the tank should not reach the "Reserve" level.

## **1.2 Liability**

Failure to observe the operating instructions and the information contained in them will result in a disclaimer of liability by Webasto.

The same applies if repairs are carried out incorrectly or with the use of parts other than genuine spare parts.

This will result in the invalidation of the type approval for the heater and therefore of its homologation / EC type license.

Webasto shall accept no responsibility for the use of components and control elements that have not been approved by Webasto.

We reserve the right to reject warranty claims in the case of malfunctions resulting from disregard of our recommendations.

## **Operation**




### **WARNING**

#### **The danger of explosion and suffocation**

- Do not operate the heater at filling stations and tank installations.
- Do not operate the heater at locations where highly flammable gases or dust can form, or at locations where highly flammable liquids or solid materials are stored (e.g. near fuel, coal and wood dust, grain storage areas, dry grass and leaves, cardboard boxes, paper, etc.).
- Do not operate the heater in closed rooms (e.g. garages), not even with a timer or Telstar.

Depending on the type, the heater may be placed into operation with the control element.

	<p>We recommend matching the heating time with the driving time. Heating time = driving time Example: With a driving time of about 20 minutes (one way) we recommend that the heater ON time does not exceed 20 minutes.</p>
-----------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

The ventilation function depends on the type of heater.

## Pre settings in the vehicle

It may be necessary to preset the system in accordance with the operating instructions for the customer.

## Switching on with compatible control elements

The following Webasto Thermo & Comfort SE control elements may be used:

- ThermoCall / ThermoConnect
- Telstar T100 HTM
- Telstar T91 / T99
- MultiControl

The control elements are compatible with each other. How to use the control elements is described in the respective operating instructions.

Webasto recommends the installation of the operation indicator LED (order number:1320992\_) if only Telestart control elements are used.

## Measures in case of malfunction

Fault codes are shown on the MultiControl display or with the ThermoCall / ThermoConnect status check. Refer to the accompanying documentation for the respective control element.

If a malfunction occurs, first check the condition and fit of the fuses and connectors.


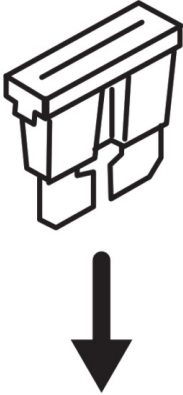
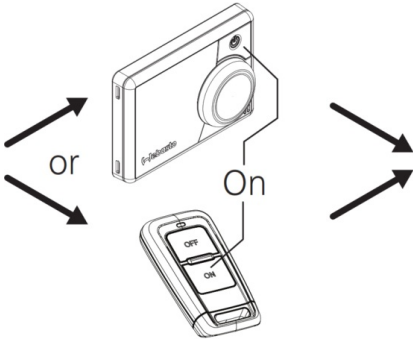

You can rectify the following faults yourself:


Fault description	Possible cause	Corrective measures
The heater switches off automatically (= fault switch-off).	No combustion after start and restart; flame goes out during operation.	Switch the heater off and on again (no more than 2x).
The heater will not switch on.	No power was applied to the heater.	Check the power supply to heater and ground terminal points.
The heater switches off during heating operation (=fault switch-off).	The heater overheated due to insufficient coolant.	Top up coolant according to manufacturer's specifications.

You can cancel a fault lock-out yourself as described on the next page.

## Canceling the fault lock-out

The fault lock-out is canceled using the fuse in the upgrade. Refer to the customer operating instructions for the position of the fuse.

 <p>Wait ap- prox. 3 s</p>			
<p>Voltage interrupted by removing the 20 A fuse (yellow) in the vehicle's E-box in the engine compartment, Item F30</p>	<p>Reinserting the fuse</p>	<p>Briefly press the ON button on the left of the transmitter or the  button on the MultiControl/ Smart Control</p>	<p>Voltage interrupted by removing the 20 A fuse (yellow) in the engine compartment, Item F30</p>

	<p>Inserting the fuse switches on the heater. Please contact the Webasto service center if this procedure does not remedy the problem.</p>
-------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------

## Warranty

In the event of a defect in the auxiliary heater, the replacement heater will need to be upgraded.

Please contact your Webasto dealer.

You will find a Webasto dealer near you under 'Contact' → 'Search for Dealer' on the Webasto website at [www.webasto.com](http://www.webasto.com)

In multilingual versions the German language is binding. The telephone number of each country can be found in the Webasto service center leaflet or the website of the respective Webasto representative of your country.

### Webasto Thermo & Comfort SE

Postfach 1410  
82199 Gilching  
Germany

### Besucheradresse:

Friedrichshafener Str. 9  
82205 Gilching  
Germany

### Nur innerhalb von Deutschland

Tel: 0395 5592 229

E-mail: [kundencenter@webasto.com](mailto:kundencenter@webasto.com)  
[www.webasto.com](http://www.webasto.com)

Documents / Resources

Webasto

Operating Instructions  
Bedienungsanweisung  
Auxiliary heater with parking heater functionality  
Zusatz mit Standheizungsfunktion

EN Operating Instructions 3

DE Bedienungsanleitung 9

DA Betjeningsvejledning 15

FI Käyttöohje 21

NO Betjeningsskjema 27

SV Driftanvisning 33

[Webasto Auxiliary Heater with Parking Heater Functionality](#) [pdf] Instruction Manual  
Auxiliary Heater with Parking Heater Functionality

References

- [Webasto Group - Provider for Original Equipment & Customized Solutions](#)