

WebRelay X-WR-441W Remote Relay Control User Guide

Home » WebRelay » WebRelay X-WR-441W Remote Relay Control User Guide Ta





Contents

- 1 Basic Setup Steps
- **2 Factory Default Settings**
- 3 Documents / Resources
 - 3.1 References
- **4 Related Posts**

Basic Setup Steps

- 1. Power the module and connect via ethernet to a computer.
- 2. Set IP address on computer to the same network as module. (Ex: 192.168.1.50) Note: restore computer settings after setup.
- 3. To configure module, open web browser and enter: http://192.168.1.2/setup.html
- 4. In General Settings under WiFi, enter the WiFi settings.

- 5. Assign the module a permanent IP address or enable DHCP.
- 6. Restart the module for the settings to take effect.

Factory Default Settings

IP Address: 192.168.1.2 Subnet Mask: 255.255.255.0

Control Page Web Address: http://192.168.1.2

Control Password: (no password set)

Setup Page Web Address: http://192.168.1.2/setup.html


Setup Username: admin

Setup Password: webrelay (all lower case)

C: Relay Contact Common

NO: Relay Contact Normally Open NC: Relay Contact Normally Closed V IN+: Power Supply Input (9-28VDC) V IN-: Power Supply Input (Ground) INPUT-: Optically-Isolated Input (-)

INPUT+: Optically-Isolated Input (+) +5V OUT: 5VDC Output

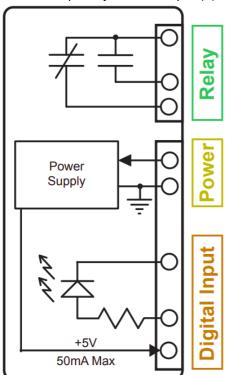



Documents / Resources



WebRelay X-WR-441W Remote Relay Control [pdf] User Guide

X-WR-441W Remote Relay Control, X-WR-441W, Remote Relay Control, Relay Control, Control

References

- Support Get Help With Your ControlByWeb Device
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.