


# Weizhi STC131 Wall Mounted Music Boxing Target Instruction Manual

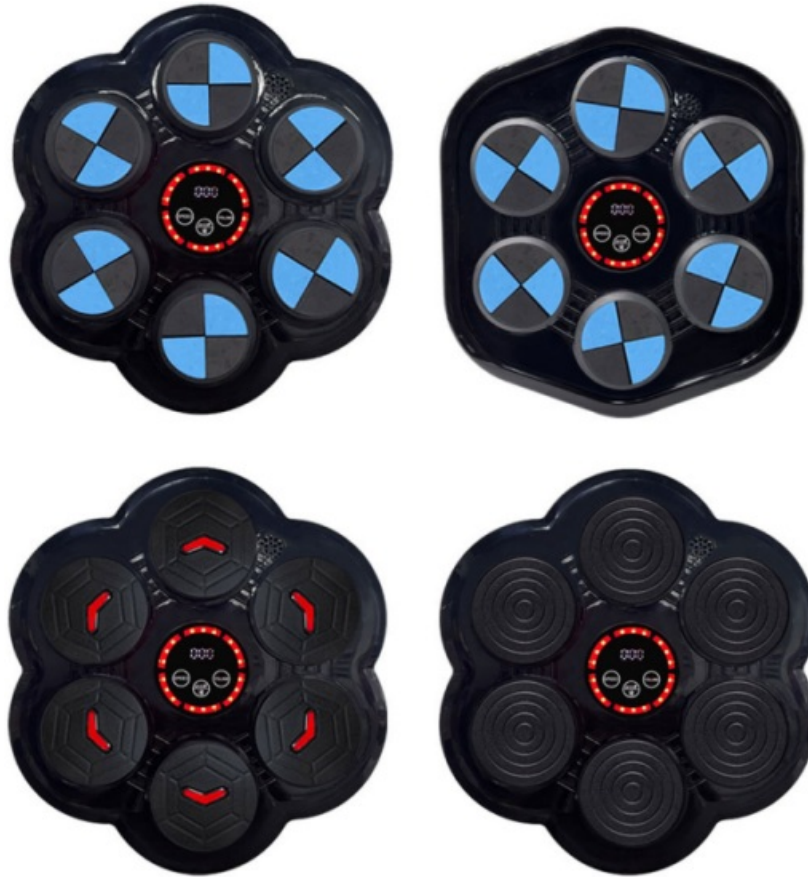

## Contents

### [1 Boxing target with six buttons and dual lights enhanced versione](#)

#### [1.1 Product Introduction](#)

#### [1.2 Instructions for use](#)

#### [1.3 Installation instructions](#)

##### [1.3.1 Installation method 1:](#)

##### [1.3.2 Installation method 2:](#)

#### [1.4 Troubleshooting](#)

#### [1.5 matters needing attention](#)

#### [1.6 Warning:](#)

### [2 Documents / Resources](#)

#### [2.1 References](#)

### [3 Related Posts](#)

## Boxing target with six buttons and dual lights enhanced versione

### Product Introduction



1. Digital display screen
2. Long press the volume adjustment button
3. On/Off Mode
4. Speed key

#### **Instructions for use**

1. Long press and hold the “ON/OFF” button to turn on the device;  
The lights will turn on and the music will start playing.
2. Press and hold the “ON/OFF” button for 2-3 seconds to turn off the device.
3. When the device is turned on, press the “SPEED” button to adjust the speed level from 1 to 9.  
When the device is turned on, press the “ON/OFF” button to select Bluetooth mode.
4. For Bluetooth devices, please search for “QJB-6”  
The device name at the beginning; Open the settings on your phone via Bluetooth, and you can play music from your phone.
5. When the device is turned on, press and hold the “VOLUME” button to adjust the volume

#### **Installation instructions**

##### **Installation method 1:**

1. First, peel off the double-sided tape on the upper half of the EVA.
2. Align the EVA sticker on the back of the product.
3. Tear off the double-sided tape on the lower part of the EVA sticker.
4. Put it in place and stick it firmly to the wall.

##### **Installation method 2:**

1. Align the adhesive Velcro on the back of the product.
2. Remove the double-sided tape from the upper half.
3. Align the position with the wall and stick it firmly.

### Troubleshooting

Number	Fault phenomenon	Cause analysis	Exclusion method
1	No light or sound	The product is not turned on	Short press to open the key
2	No light or sound	Battery depleted	Please charge
3	Flashing lights	Low battery level	Please charge
4	Short press the switch to turn on the device	Long term failure to power on results in power shortage of the main chip capacitor	Repeatedly short press the switch
5	Internal collision sound of equipment	Emitted by internal activity force structure	Normal phenomenon

### matters needing attention

1. Please fix this product on a sturdy and reliable wall. When striking, please strike within the striking area. It is strictly prohibited to hit the corners to avoid hand injury or equipment damage.
2. This product is suitable for adult use. Children should be guided to use it under adult supervision.
3. Beginners should not use excessive force to avoid hand injuries. During exercise, first pay attention to safety and strictly prohibit leg or knee strikes.
4. It is strictly prohibited to hit the horn area.
5. If the device cannot be turned on or has any abnormalities, please check if the battery level is too low. It should be charged in a timely manner, and the charging time should not exceed 8 hours. If it is not used for a long time, it is recommended to charge it once every 1-2 months.
6. This product is not waterproof. When wiping boxing targets, use a dry cloth and do not get wet.
7. Please keep the instruction manual properly for emergency use.



### Warning:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
  - (2) this device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

NOTE: This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.

## Documents / Resources

	<a href="#">Weizhi STC131 Wall Mounted Music Boxing Target</a> [pdf] Instruction Manual STC131, STC131 Wall Mounted Music Boxing Target, Wall Mounted Music Boxing Target, Music Boxing Target, Boxing Target
---	--

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.