

Wellis®
EASY 4 Compact
Full Function
Keypad



Wellis EASY 4 Compact Full Function Keypad User Manual

[Home](#) » [Wellis](#) » Wellis EASY 4 Compact Full Function Keypad User Manual 

Contents

- [1 Wellis EASY 4 Compact Full Function Keypad](#)
- [2 Specifications](#)
- [3 Product Usage Instructions](#)
- [4 SPA FUNCTIONS](#)
- [5 PROGRAMMING STEPS](#)
- [6 TROUBLESHOOTING SECTION](#)
- [7 FAQ](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)

Wellis®

Wellis EASY 4 Compact Full Function Keypad



Specifications

- **User Interface:** EASY 4
- Compact full-function keypad
- 1 Pump Model
- 2 Pump Model (optional)
- Light key functionality
- Smart Winter mode

Product Usage Instructions

- **Using the Keypad:**

The digital keypad provides access to various functions of the spa. Refer to the Quick Reference Card for an overview of main functions and operations.

- **Off Mode:**

To enable Off mode, press Pump 1 for 5 seconds. This stops all outputs for 30 minutes for quick maintenance. The display toggles between OFF message, clock, and water temperature. Press Pump 1 or Pump 2 (if available) to restart before 30 minutes.

- **Pump Control:**

Press Pump 1 key to turn Pump 1 on at low speed. Press again for high speed (for dual-speed pump). Press a third time to turn off. Pump automatically turns off after 20 minutes if not manually deactivated.

- **Light Control:**

Press Light key to turn light on. Press again to turn off. Light automatically turns off after 2 hours if not manually deactivated.

- **Temperature Adjustment:**

Use Up or Down key to set desired water temperature. The display will confirm your selection. Hold the button for continuous increase/decrease in parameter.


- **Programming Steps:**

To access the program menu, hold down the Light key for 5 seconds. Set parameters like clock, filter cycles,


economy mode, and temperature units using the Up or Down key.

COMPACT FULL-FUNCTION KEYPAD


The Quick Reference Card provides an overview of your spa's main functions and the operations accessible from your digital keypad. This QRC depicts a generic overlay, custom versions may vary.

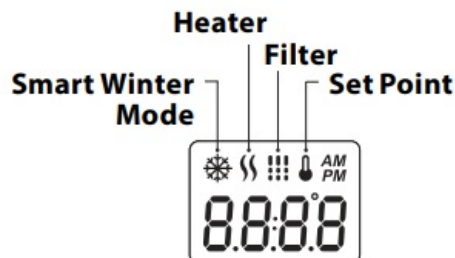

1 PUMP MODEL

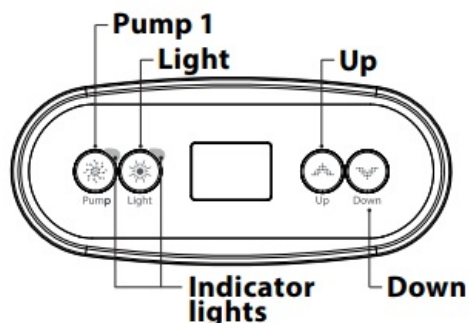

2 PUMP MODEL

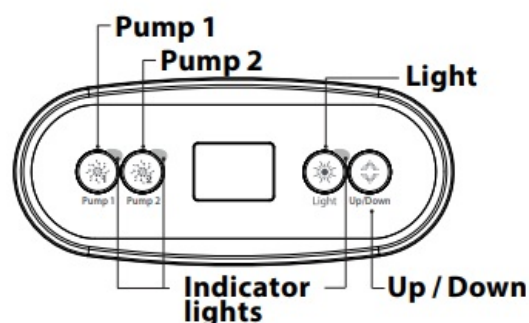

SPA FUNCTIONS

OFF MODE

- Pressing Pump 1 for 5 seconds will enable the Off mode. This mode allows you to stop all outputs including automatic functions such as filter cycle, heat request and smart winter mode for 30 minutes to perform quick spa maintenance.
- When Off mode is active, the display will toggle between the "OFF" message, the clock and the water temperature.
- The spa light will flash for a few seconds before the end of the 30 minutes to warn you that the system is about to resume its normal operation.
- Press Pump 1 or Pump 2 (if available) to restart the system before the expiration of the 30 minute delay. When the system resumes its normal operation, the display shows "On" for 3 seconds.

PUMP 1

- Press Pump 1 key to turn Pump 1 on at low speed. Press a second time to turn pump to high speed (with a dual-speed pump*). A third time turns pump off. A built-in timer automatically turns pump off after 20 minutes, unless pump has been manually deactivated first.
- The "Pump 1" indicator lights up when Pump 1 is on. With a dual-speed pump, the indicator will flash when pump 1 is on at low speed.

PUMP 2 KEY


- Not available on all models
- Press Pump 2 key to turn Pump 2 on at low speed. Press a second time to turn pump to high speed (with a dual-speed pump*). A third time turns pump off. A built-in timer automatically turns pump off after 20 minutes, unless pump has been manually deactivated first.
- The “Pump 2” indicator lights up when Pump 2 is on. With a dual-speed pump, the indicator will flash when pump 2 is on at low speed.

LIGHT KEY

- Press Light key to turn light on.
- A second press turns light off.
- A built-in timer automatically turns light off after 2 hours, unless it has been manually deactivated first.
- The “Light” indicator lights up when light is on.

UP/DOWN KEYS

- Use Up or Down key to set desired water temperature. The temperature setting will be displayed for 2 seconds to confirm your new selection.
- 2 pump spas have a combined Up/Down key. Hold the button to increase the parameter and release the button to stop. Hold the button again to decrease the parameter.
- The “Set Point” icon indicates that the display shows the desired temperature, NOT the current water temperature!

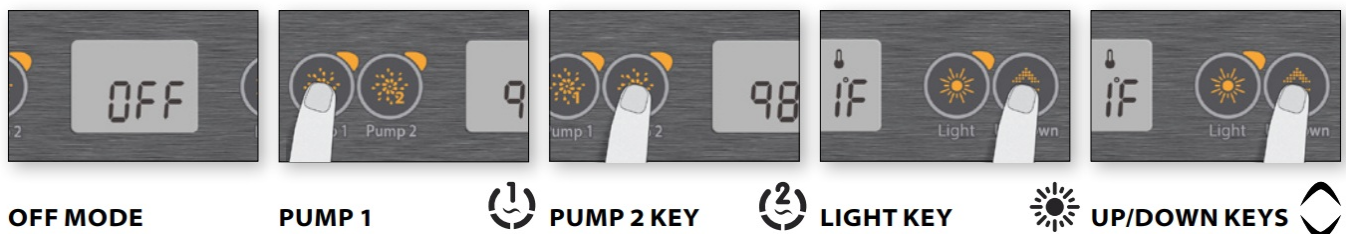

* If single speed pump: press Pump key to turn pump on. Press Pump key again to turn pump off.

PROGRAMMING STEPS

• PROGRAM MENU

- The program menu is accessible by holding down the Light key for 5 seconds. In the program menu the following parameters can be set: clock, the filter or purge cycles, economy mode and temperature units. While you are in the program menu, use the
- Up or Down key to adjust the parameters and use the Light key to jump to the next parameter.
- The changes will be saved after the confirmation of the last parameter only. If there is no action taken for 10 seconds, the system will exit the program menu without saving any changes.

• SETTING THE CLOCK

- Enter the program menu by holding down the Light key for 5 seconds. The display will show the current

clock setting with the hour flashing.

- Depending on factory settings your system may be set to 24- hour time or 12-hour time. Setting the hour: Use the Up or Down keys to adjust the hours. Press the Light key to jump to the next parameter, the minutes.
- Setting the minutes: Use the Up or Down keys to adjust the minutes. Press the Light key to jump to the next parameter, the filter or purge start time (FS).



PROGRAM MENU



SETTING THE CLOCK

• PROGRAMMING THE FILTER/ PURGE CYCLES

- Depending on system configuration your spa will perform either a filter or a purge cycle.
- The filter cycle menu consists of the following parameters: the start time (FS), the duration (Fd) and the frequency (FF).
- The purge cycle menu consists of the following parameters: the start time (FS) and the frequency (FF).
- A filter cycle consists of starting all the pumps and blower in high speed for 1 minute (purge step) then, the pump associated with the filter will run in low speed for the remaining duration of the filter cycle (clean step).
- A purge cycle is used when the spa is equipped with a 24 hour circulation pump which provides a continuous clean step. It consists of starting all the pumps and blower in high speed for 1 minute.

• SETTING FILTER OR PURGE CYCLE START TIME

- The display will show FSxx, "xx" representing the starting hour of the cycle. Use the Up or Down key to adjust the hours. Use the Light key to jump to the next parameter, filter duration (Fd).



SETTING FILTER OR PURGE CYCLE START TIME

• SETTING FILTER CYCLE DURATION

- (not available on purge systems)
- The display will show Fdxx, "xx" representing the duration in hours of the filter cycle. Use the Up or Down key to adjust the duration. Use the Light key to jump to the next parameter, filter or purge frequency (FF).
 - 0 = no filtration
 - 24 = continuous filtration
 - It is not recommended to set this to "0".

• SETTING FILTER OR PURGE CYCLE FREQUENCY

- The display will show FFxx, “xx” representing the number of cycles per day. Use the Up or Down key to adjust the frequency. Use the Light key to jump to the next parameter economy mode (EP).
- The “Filter cycle” indicator lights up when filter is on and flashes when suspended.



**SETTING FILTER
CYCLE DURATION**



**SETTING FILTER
OR PURGE CYCLE
FREQUENCY**

• SETTING ECONOMY MODE


- This mode allows you to lower the temperature set point of the spa by 20 °F (11 °C) during a certain period of the day.
- The display will show EPx, “x” representing the state of the programmed economy (0 = disabled, 1 = enabled). Use the arrow keys to enable or disable economy mode. Use the Light key to jump to the next parameter, economy start time (ES).

• SETTING ECONOMY START TIME

- The display will show ESxx, “xx” representing the hour at which the economy mode will become active. Use the Up or Down key to adjust the hour.
- Use the Light key to jump to the next parameter, economy duration (Ed).
- When the Economy mode is ON, the display will toggle between the “Eco” message, the time, and the water temperature.

• SETTING ECONOMY DURATION

- The display will show Edxx, “xx” representing the duration in hour of the economy mode. Use the Up or Down key to adjust the hour. Use the Light key to jump to the next parameter, temperature unit.
- 24 = continuous economy

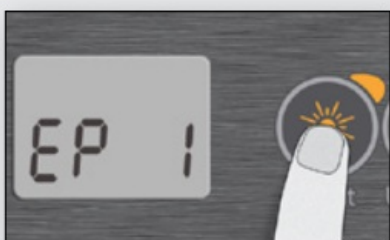

**SETTING ECONOMY
MODE**



**SETTING ECONOMY
START TIME**



**SETTING ECONOMY
DURATION**

- Note that the parameters for the economy mode settings are associated to specific low level configuration of the system that are not present in all software revisions.

• SETTING TEMPERATURE UNIT

- Water temperature can be displayed in either Fahrenheit (°F) or Celsius (°C). The display will show F or

C.

- Use the Up or Down key to change the setting. Use the Light key to save all the parameters.

• **SMART WINTER MODE**

- Our Smart Winter Mode protects your system from the cold by turning pumps on several times a day to prevent water from freezing in pipes.
- The “SWM” indicator lights up when freezing is detected and flashes when the purge is active.

• **COOLDOWN**

After heating the spa water to the desired Set Point, the heater is turned off, but its associated pump (Pump 1 low-speed or CP) remains on for a predetermined period of time to ensure adequate cooling of the heatingelement, prolonging its useful life.

• **WATER TEMPERATURE REGULATION**

Every 15 to 90 minutes the pump will run to ensure accurate water temperature readings as well as avoid heater activation in dry conditions. After verifying pump activation and taking a water temperature reading if required, the system automatically turns the heater on to reach and maintain water temperature at Set Point. Indicator flashes when taking water temperature reading.

TROUBLESHOOTING SECTION

Should an error occur, the display will show one of the following error messages toggled with the clock and the water temperature.

IN.XE ERROR CODES: DESCRIPTION



- An internal hardware error has been detected in the in.xe.
- Contact dealer or service supplier.



- Temperature inside the spa skirt is too high, causing the internal temperature in the in.xe to increase above normal limits. Open skirt and wait until error clears.



- A problem is detected with the temperature probe.
- Call your dealer or service supplier.



- The system has shut the heater down because the temperature at the heater has reached 119°F (48°C).
- Do not enter the water! Remove the spa cover and allow the water to cool down, then shut power off and power your spa up again to reset the system.



- The system does not detect any water flow while the primary pump is running.
- Check and open water valves. Check for water level.
- Clean filter. If the problem persists, call your dealer or service supplier.




- The water temperature in the spa has reached 108°F (42°C).
- Do not enter the water! Remove the spa cover and allow the water to cool down to a lower temperature.
- Call your dealer or service supplier if problem persists.

FAQ

Q: How do I reset the clock on the spa?

A: Enter the program menu by holding down the Light key for 5 seconds. Use the Up or Down key to set the correct time with the hour flashing.

Documents / Resources

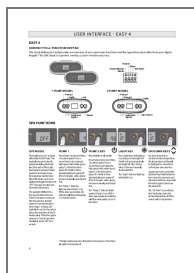

[Wellis EASY 4 Compact Full Function Keypad \[pdf\] User Manual](#)

EASY 4, EASY 4 Compact Full Function Keypad, EASY 4, Compact Full Function Keypad, Full Function Keypad, Function Keypad, Keypad

References

- [User Manual](#)

[Manuals+. Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.