

**WENTELMICRO
A11 Microphone
Wireless System**



WENTELMICRO A11 Microphone Wireless System Instruction Manual

[Home](#) » [WENTELMICRO](#) » WENTELMICRO A11 Microphone Wireless System Instruction Manual 

Contents

- 1 WENTELMICRO A11 Microphone Wireless System
- 2 Product Information
- 3 Product Usage Instructions
- 4 Control Panel
- 5 Product Specifications
- 6 Usage
- 7 Packing List
- 8 PLEASE PAY ATTENTION BEFORE USE
- 9 After-Sales
- 10 FAQ
- 11 Documents / Resources
 - 11.1 References
- 12 Related Posts

WENTELMICRO

WENTELMICRO A11 Microphone Wireless System



Product Information

Product Specifications

- **Product Name:** A11 Microphone Wireless System
- **Case:** ABS Environmentally Friendly Material
- **Plug Color:** Chrome-Plated Black
- **Frequency Band:** 2.4GHz
- **Dynamic Range:** 108dB
- **Audio Resolution:** 24 bit / 48KHz
- **Frequency Response:** 20Hz~20KHz, +1dB/-3dB
- **Charging Port:** Type-C connector 6.35mm (1/4") jack XLR Adapter Jack

Product Usage Instructions

Transmitter Usage

1. Long press the power button for 2-3 seconds to turn on and off the transmitter. It will power on and automatically pair.
2. In the power-on state, press any transmitter or receiver to switch to another working mode.
3. The mode indicator will show a blue light for musical instrument mode and a green light for KTV mode.
4. To charge the transmitter, use the provided Type-C connector charging head in the charging port. The charging indicator will show a red light when charging and turn off when fully charged.

Receiver Usage

1. The receiver connects devices such as stereos, musical instruments, or adapter plugs using the cannon jack.
2. To switch working modes on the receiver, press any transmitter or receiver when in the power-on state.

Dear Valued Customer,
Hello! Thank you for purchasing our A11 Wireless Microphone Adapter. We hope you have a pleasant shopping experience with us!

Control Panel



1	Setting switch	1. Long press 2-3 seconds to turn on and off, power on auto pairing;
		2. In the power-on state, press any transmitter or receiver to switch to an other working mode;
2	Mode Indicator	Blue light for musical instrument mode, green light for KTV mode;
3	Charging indicator	The red light is on when the device is charging, full light is off;
4	Charging port	Please use the 5V Type-C connector charging head for charging;
5	Reset button	Press to restore factory settings;
6	Transmitter Cannon jack	Connects devices such as microphones, musical instruments, or adapter plugs;
Receiver Cannon 7 jack		Connects devices such as stereos, musical instruments, or adapter plugs ;

Product Specifications

Product Name	A11 Microphone Wireless System
Case	ABS Environmentally Friendly Material
Plug	Chrome-Plated
Color	Black
Frequency Band	2.4GHz
Dynamic Range	108dB
Audio Resolution	24-bit / 48KHz
Frequency Response	20Hz~20KHz, +1dB/-3dB
Latency	<15ms (with no latency perceptible to the ear.)
Battery Capacity	300mAh
Voltage	5V
Charging Port	Type-C
Charging Time	1.5 hours
Battery Life	4-5 hours
Transmission Range	100 feet
6.35mm (1/4") jack	ü
XLR Adapter Jack	ü
Product Size (L*W*H)	4.33 × 1.1 × 0.8 inches
Product Weight	3.66 oz

(**Tips:** Manual measurement, there may be deviations.)

Usage

1. Press the power button to turn on the transmitter and receiver, the mode indicator will light up to check if the frequencies are the same;
2. Select the correct working mode;
3. Check the connection by talking through the microphone or playing the instrument;



XLR Adapter Jack 1 XLR Adapter Jack 2

Packing List

- Transmitter* 1
- Receiver* 1
- XLR adapter 6.35mm jack* 2
- Dual Type-C charging cable* 1
- Instruction manual* 1

PLEASE PAY ATTENTION BEFORE USE

- The first thing you should do after receiving the product is to fully charge it. It not only protects the product chip and battery but also ensures the best first use effect.
- Pair the transmitter and receiver first before plugging them into your devices. If there is a problem with pairing, turn off the power and restart it.
- In KTV mode, the receiver's green light is always on; in Instrument Transmission mode, the receiver's blue light is always on. Press the transmitter or receiver at any time to switch to another working mode. By selecting the corresponding mode for optimal use.
- When using wireless transceivers, try not to use other devices with wireless interference. Wireless transmission only transmits the sound and can not change or amplifies the sound. You can adjust the volume of your guitar or amplifier.
- Please do not use it beyond 100 feet.
- Wireless transmission can not go through the wall, so please do not use it through the wall.
- After 3-4 hours of continuous use, please connect the charger for next use.
- Please use a 5V charger to charge it, otherwise the chip will be damaged.
- When the battery is about to run out, it may not work properly such as transmission problems.

After-Sales

- If the product cannot be used, please apply for a replacement or full refund. And we will take care of it asap. The customer is always #1 for us.
- If you have any questions, please feel free to talk to us and give us feedback. This way we can make every effort to understand your issue. Thank you for your support.

May your work go well and all your family be happy!

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, under part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used by the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

FAQ

Q: How do I reset the A11 Wireless Microphone Adapter?

A: Press the reset button on either the transmitter or receiver to restore factory settings.

Q: What is the charging voltage for the device?

A: Use a 5V Type-C connector charging head for charging the A11 Wireless Microphone Adapter.

Documents / Resources



[WENTELMICRO A11 Microphone Wireless System](#) [pdf] Instruction Manual
2BEJ8-A11, 2BEJ8A11, A11 Microphone Wireless System, A11, Microphone Wireless System, Wireless System, System

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.