



## **2000 Big Ben Alarm Clock**



# **Westclox Source 2000 Big Ben Alarm Clock User Manual**

[Home](#) » [Westclox Source](#) » **Westclox Source 2000 Big Ben Alarm Clock User Manual** 

### **Contents**

- [1 Westclox Source 2000 Big Ben Alarm Clock User Manual](#)
- [2 PRODUCT DESCRIPTIONS](#)
- [3 SETTING THE TIME](#)
- [4 SETTING THE ALARM](#)
- [5 TURNING THE ALARM ON/OFF](#)
- [6 WINDING YOUR CLOCK \(TIME\)](#)
- [7 WINDING YOUR CLOCK \(ALARM\)](#)
- [8 REGULATING THE TIME FOR ACCURACY](#)
- [9 CARE OF YOUR CLOCK](#)
- [10 ONE-YEAR LIMITED WARRANTY](#)
- [11 References](#)
- [12 Related Posts](#)




**Westclox Source 2000 Big Ben Alarm Clock User Manual**



Thank you for your purchase of this quality clock. The utmost care has gone into the design and manufacture of your clock. Please read these instructions carefully and store them in a safe place for future reference.

## **PRODUCT DESCRIPTIONS**

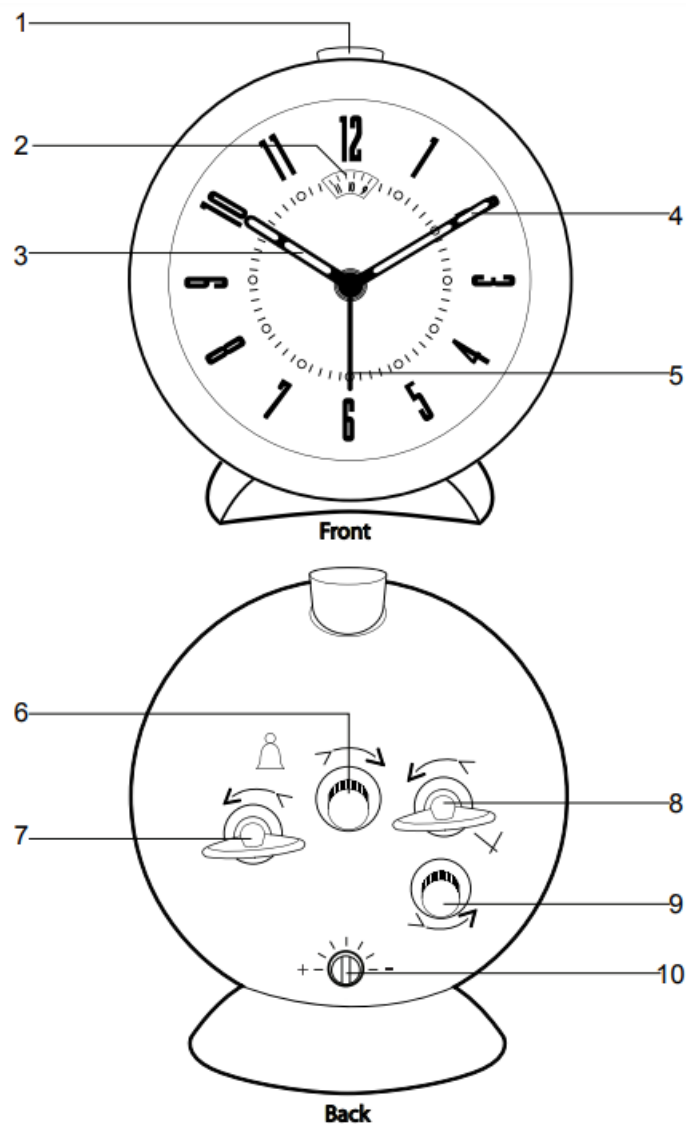

1. ALARM ON/OFF button
2. ALARM TIME indicator
3. HOUR hand
4. MINUTE hand
5. SECONDS hand
6. ALARM TIME SET knob
7. ALARM TIME WINDING key
8. TIME WINDING key
9. TIME SET knob
10. REGULATOR knob

The following instructions explain how to operate your Baby Ben keywound alarm clock.

## SETTING THE TIME

Turn the TIME SET knob located on the back in a counterclockwise direction as indicated by the arrow on the back of the clock, until the correct time is reached.

**Note:** The hands on the dial will turn in a clockwise direction.


## SETTING THE ALARM

Turn the ALARM TIME SET knob located on the back in a clockwise direction as indicated by the arrow on the back of the clock, until the desired alarm time is reached.

**Note:** The alarm indicator hand on the dial will turn in a counterclockwise direction.

## TURNING THE ALARM ON/OFF

1. The ALARM ON/OFF button is located on the top of the clock. To turn the alarm on, the ALARM ON/OFF button should be in the up position. If it is in the down position, press the button one time, the button will change to the up position (alarm on).
2. To turn the alarm OFF, press the ALARM ON/OFF button so it is in the down position (alarm off).

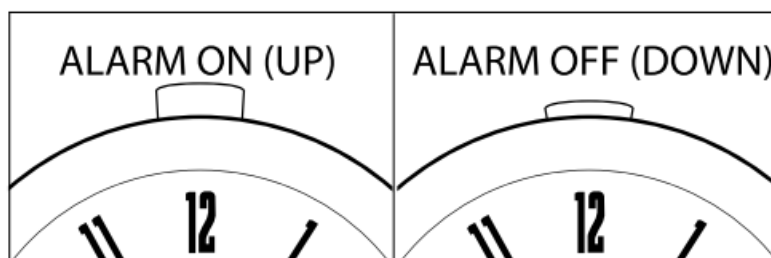

## WINDING YOUR CLOCK (TIME)

**Note:** Your clock does not require batteries or electricity to operate.

Turn the TIME WINDING key in a counterclockwise direction as indicated by the arrow on the back of the clock, until the knob will not allow you to turn it any further.

**Note:** The time winding key when fully wound will last approximately 36 hours, however, it is recommended that the clock is wound once a day for continuous uninterrupted timekeeping. The clock should be wound at approximately the same time every day.

## WINDING YOUR CLOCK (ALARM)

Turn the ALARM TIME WINDING key in a counterclockwise direction as indicated by the arrow on the back of the clock, until the knob will not allow you to turn it any further.

**Note:** It is recommended to wind the alarm time winding key right after the alarm is turned off. If you do not use the clock for the alarm, there is no need to wind the alarm key.

## REGULATING THE TIME FOR ACCURACY

**Note:** The clock has been regulated at the factory but due to shipping, the clock may need to be adjusted to keep accurate time.

The following adjustment requires a small “flat head” screwdriver to adjust the REGULATOR knob located on the back of the clock.

- If your clock runs fast, you can adjust the REGULATOR knob towards the “-” symbol marked on the back of the

clock.

- If your clock runs slow, you can adjust the REGULATOR knob towards the “+” symbol marked on the back of the clock.

## CARE OF YOUR CLOCK

1. Store the clock without batteries when not in use.}
2. A soft cloth or paper towel may be used to clean your clock. Do not use corrosive cleansers or chemical solutions on the clock. Keep the clock clean and dry to avoid any problems.
3. Avoid putting the clock in a highly humid environment such as poolside or in a bathroom.
4. Do not expose the clock to direct sunlight, extreme hot or cold temperatures

## ONE-YEAR LIMITED WARRANTY

NYL Holdings LLC warrants the original consumer purchaser of this product that it shall be free of defects in materials and workmanship for one year from the purchase date of this product. Defects caused by tampering, improper use, unauthorized modifications or repairs, immersion in water, or abuse are not covered by this warranty.

If a defect covered by this warranty occurs during the warranty period, package your clock carefully and send it to the following address:

- Att: Repair center
- NYL Holdings LLC
- 1212 East Broward Blvd. Suite 203
- Fort Lauderdale, FL 33301 [954-462-6848](tel:954-462-6848)>[954-462-6848](tel:954-462-6848)

You must include a Proof of Purchase, either the original receipt or a photocopy, and a check or money order for USD \$4.95 to cover the cost of shipping and handling. Also include your return address inside the package. NYL Holdings LLC will repair or replace the clock and return it to you. NYL Holdings LLC will not be liable for any loss or damages, including incidental or consequential damages of any kind: from any breach of warranty either expressed or implied relating to the product. Since some states do not allow the exclusion or limitation of incidental or consequential damages, these limitations may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state.

**Printed in China**

**Download PDF:** [Westclox Source 2000 Big Ben Alarm Clock User Manual](#)

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.