



Westinghouse WHTS2S06K 2-Slice Toaster Instruction Manual

[Home](#) » [Westinghouse](#) » Westinghouse WHTS2S06K 2-Slice Toaster Instruction Manual 



220-240V
220-240V
780-930W WHTS2S06K

**2 SLICE TOASTER
INSTRUCTION MANUAL**



Figures and illustrations in this User Manual are provided for reference only and may differ from the actual product appearance.

Product design and specifications may be changed without notice.

Contents

1 IMPORTANT SAFETY INSTRUCTIONS

2 ELECTRICAL REQUIREMENTS

3 PARTS AND FEATURES

4 CONTROL PANEL

5 CLEANING & CARE

6 TROUBLESHOOTING & WARRANTY

7 LIMITED WARRANTY

8 Documents / Resources

8.1 References

9 Related Posts

IMPORTANT SAFETY INSTRUCTIONS

WARNING

The temperature of accessible surfaces may be hot whilst the toaster is operating.

Never cover the toaster with anything. If covered, the toaster and/or items covering the toaster may ignite.

1. Read all instructions carefully before using your new toaster. Save these instructions.
2. Always use this toaster with a power outlet of the voltage (A.C. only) marked on the back of the appliance.
3. Do not operate the toaster if:
 - i) the cord or plug is split, melted, or damaged.
 - ii) the appliance has malfunctioned.
 - iii) the appliance has been damaged in any manner.If any of the above incidents occur, return the toaster to the nearest authorized service center for examination, repair, or adjustment.
4. Never cover the toaster with anything. This will cause the toaster to overheat, causing irreparable damage and may interfere with the automatic on/ off functions. If covered, the toaster and/or items covering the toaster may ignite.
5. Bread can burn. Do not use the toaster near materials. Do not place the toaster close to curtains or other materials that could easily catch fire.

The toaster should not be left unattended when in operation.
6. Do not under any circumstances immerse the toaster, main cord, or mains plug in water or any other liquid.
7. Incorrect operation and improper use may damage the toaster or parts thereof, and cause severe personal injury.
8. When operating the toaster, use the loading handle and buttons only as some surfaces will become hot whilst the toaster is in use.
9. Never force bread into the toasting slots. Never toast slices of bread that have been buttered. Take extra care

when toasting items that contain sugar, jam, preserves, raisins, or other bits of fruit, as there is a risk of overheating.

Don't use bent, damaged, or broken bread slices in your toaster as they may get jammed in the slot.

10. Never attempt to remove bread or other items which have become jammed in the slots without first unplugging the toaster from the main supply. Be careful not to damage the internal mechanism or heating elements when removing the jammed items.
11. Never use metal objects to remove jammed items from the toaster.
12. The power plug must be removed from the outlet before emptying the crumb tray.
13. Unplug the appliance from the mains before cleaning, immediately after use, when moving it to storage and when not in use.
14. Keep the toaster and its cord out of reach of children less than 8 years old.
15. This toaster is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the toaster in a safe way by the person responsible for their safety, and understand the hazards involved.
16. Children should be supervised not to play with the toaster.
17. Always turn the power off at the power outlet before you insert or remove the power plug. Remove by grasping the plug – do not pull on the
18. This appliance is intended for non-commercial. indoors use only. Do not use this appliance for anything other than its intended use.
19. Always use the appliance on a stable. secure, dry, and level surface.
20. This toaster is not intended to be operated by means of an external timer or separate remote-control system.
21. Wait for the toaster to cool before carrying only by the outer side panels.
22. Close supervision is necessary when any appliance is used by or near
23. Never lift the toaster by placing your fingers inside or near the bread
24. The toaster should not be used whilst under a cupboard or close to a wall as scorching of the cupboard may occur as a result.
25. It is important that crumbs are not allowed to build up inside the toaster, as this is unhygienic and may cause a fire Crumbs can be easily removed by simply sliding open the crumb tray located at the rear lower section of the toaster. Once the crumb tray has been removed from the toaster, it may be emptied. Always ensure the toaster is completely cool and disconnected from the mains before carrying out this operation. Never touch the internal parts of the toaster with a brush or any other implement.
26. Do not place your toaster on or near a hot gas flame, electric element, heated oven, or any hot
27. Do not place the toaster on top of any other
28. Do not permit the mains supply cord or plug to touch the hot toaster or other hot objects, or allow the power cord to lay across the
29. Do not allow the power cord of this appliance to hang over the edge of a table or benchtop.
30. Do not use harsh or abrasive cleaning agents or any sharp instruments for cleaning the unit. When the unit is cool to touch, the outside surface may be wiped clean with a soft, damp cloth and then dried thoroughly.
31. Immediately unplug the toaster from mains power if malfunctions
32. Any appliance that has been dropped or damaged should not be used until examined by an authorized service center.
33. If the mains supply cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified person in order to avoid a

34. After use, allow the toaster to cool down approximately 30 minutes before handling or cleaning the
35. Always ensure that the toaster has completely cooled down before
36. This appliance is intended to be used in household and similar applications such as staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels, and other residential type environments; bed and breakfast type environments.

ELECTRICAL REQUIREMENTS

POWER SUPPLY CORD

1. Do not attempt to modify the power cord or plug in any way.
2. A short power-supply cord is provided to reduce the risk of becoming entangled in or tripping over a longer cord.
3. If the power supply cord is too short, do not use an extension cord. Have a qualified electrician or serviceman install an outlet near the appliance.

NOTE: Neither Westinghouse nor the retailer can accept any liability for damage to the product or personal injury resulting due to a failure to observe the electrical connection procedures.

INSTALLATION GUIDE

1. Carefully unpack the toaster.
2. Carefully remove packaging from inside the toaster slots and around the power cord. Straighten the power cord and do not remove warning labels.
3. To remove any dust that may have accumulated during packaging, you may wipe down the external sections of the appliance with a soft dry cloth.
4. Do not use harsh detergents or abrasive cleaners on any part of the toaster.
5. Do not use a toaster near combustible materials such as paper, curtains, etc. The toaster should not be used whilst under a cupboard or close to a wall as scorching of the wall or cupboard may occur. Position the toaster accordingly.

PARTS AND FEATURES



1. Loading Handle.	4. Defrost Function.
2. Cancel Function.	4. Defrost Function.
3. Reheat Function.	5. Browning Control.
1. Loading Handle.	6. Crumb Tray. (rear of a toaster)

CONTROL PANEL

REHEAT FUNCTION (Refer to Pg 5)

If left for too long after toasting, the bread may become cold. It may be reheated by pressing the loading handle down and pressing the reheat button to activate the reheat function.

DEFROST FUNCTION (Refer to Pg 5)

When using bread straight from the freezer, the defrost function may be used. Set the browning control to the desired browning position and press the loading handle down. After the loading handle has been pressed down, press the defrost button.

Ensure to watch the bread in case of burning.

CANCEL BUTTON (Refer to Pg 5)

The Cancel button will immediately stop your toasting cycles. Once pressed, all elements will cease heating and your bread/toast will pop back up.

TOASTER OPERATION

1. Operate the toaster twice on a light setting with no bread to disperse the initial element burning smell. Make sure the room is well ventilated. Once this step has been completed, do not use the toaster without bread slices occupying toaster slots as overheating may occur.
2. Place two slices of bread in the bread slots and press the handle down until it latches. The bread will be lowered into the toaster and the toasting cycle will begin.

NOTE: The handle will not latch if the unit is not connected to the mains, and may not latch if the browning

control is set to its minimum position.

3. If the toast starts to burn or smoke before it has popped up, toasting can be stopped by pressing the 'Cancel' button.
4. If you should and that the toast is not dark enough you may wish to toast the bread again. Turn the browning control down and keep a careful eye on the toaster to ensure that the toast does not burn. Remember to increase the browning control setting for subsequent operations. If the toast is too dark, reduce the browning control before toasting the next slice.

NOTE: Remember that dry or thin slices will toast quicker than moist or thick slices. Using a lower browning control setting for thinner slices is recommended. When toasting two slices at the same time, try to use the same size and consistency of bread to achieve equal browning.

5. When toasting has finished the handle will rapidly rise to the fully raised position. The toasted bread can now be removed and the toaster is ready to recommence toasting.
6. Avoid using the toaster in the maximum browning control setting. Most bread toast well below the 4 settings.
7. For Reheat, Cancel and Defrost functions, please refer to page 6.

TOASTING NOTES & INFORMATION

1. Toasting is a combination of cooking and drying the bread.
2. Moisture levels differ from one bread to another which can result in varying toasting times.
3. For slightly dry bread, use a lower setting than normal.
4. For fresh bread or whole wheat, use a higher setting than normal.
5. Bread with very uneven surfaces will require a higher setting.
6. Thickly cut pieces of bread (including crumpets) may take significantly longer to toast since more moisture must be evaporated from the bread before toasting can occur. Very thick pieces may require two cycles.
7. When toasting raisins or other fruit bread, remove any loose raisins from the surface of the bread before placing it into the toaster. This will help prevent pieces from falling into the toaster, sticking on the guard wire in the slot, or burning inside the toaster.
8. Uneven toasting is usually due to bread slices of uneven thickness.

CLEANING & CARE

Ensure the power is set to OFF and the unit has been allowed to cool. Be sure to remove the mains plug from the power outlet before proceeding to clean your toaster

1. The exterior of your toaster may be cleaned with a soft damp cloth and polished with a dry soft cloth if necessary. Do not use abrasive cloths or cleaning agents.
2. Dispose of crumbs by sliding out the removable crumb tray and emptying. Regular cleaning of the crumb tray is required as the accumulation of crumbs may pose a hazard.
3. Additional cleaning and/or disposal of crumbs may be achieved by turning the appliance upside down over the sink whilst gently shaking. Any additional debris or crumbs should fall out and can be washed down the sink.

TROUBLESHOOTING & WARRANTY

BEFORE CALLING FOR SERVICE

If the toaster fails to operate:

1. Check to make sure the toaster is plugged in correctly and securely. If it is not, remove the plug from the outlet, wait 10 seconds, and plug it back in securely.
2. Check for a blown or tripped circuit breaker in your home. If these seem to be working correctly, test another appliance in the same outlet to ensure the outlet is working correctly.

IF NONE OF THE ABOVE SOLVES THE PROBLEM, PLEASE CONTACT A QUALIFIED TECHNICIAN. DO NOT TRY TO ADJUST OR REPAIR THE WATER YOURSELF.

CUSTOMER SERVICE

In the event you believe your appliance to be defective, please return it along with your sales receipt to the place of purchase for resolution.

For any inquiries, please call our service center on:

Tel: 1300 883 109 – Mon-Fri 8:00am – 5:00pm WST

TROUBLESHOOTING

Troubleshoot your problem by using the chart below. If the toaster still does not operate correctly, it may be defective.

TROUBLE	POSSIBLE CAUSE	POSSIBLE REMEDY
The appliance does not turn on.	The appliance is not plugged in.	Check that appliance is plugged into a working power outlet
The loading lever does not stay down.	The appliance is not plugged into the main power	Check that plugged into the appliance is a working power outlet. Turn browning control to the desired level higher than 1.
Bread is jammed inside the slot.	The bread is too thick.	Turn the toaster off at a power outlet and unplug. gently depress the loading handle as many times as needed to dislodge bread.

LIMITED WARRANTY

1. Nothing in this Warranty affects the Consumer's rights under the Australian Consumer Law. The benefits to the Consumer under this Warranty are in addition to the rights and remedies of the buyer under any Consumer Guarantees. The Australian Consumer Law requires that we confirm that:

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are

entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

2. Subject to Clause 1, the Seller warrants that Westinghouse branded products will be free of manufacturing defects and will perform to the Seller's specifications subject to the following clauses.
3. The benefit of this Warranty extends only to the owner of the property in which the Products manufactured or supplied by the Seller are installed and used by the owner for the duration of the Warranty Period.
4. The Warranty commences on the date of the purchase of the product and continues for the benefit of the Owner for the Warranty Period. If within the Warranty Period a manufacturing defect is discovered in the Product, or the Product fails to perform to the Seller's specifications as a result of some defect in material or workmanship in the Product, then the Seller will at its own discretion:
 - a.) Repair or replace the Product at the cost of the Seller, including but not limited to labor and travel costs. Goods repaired or replaced under this Warranty will be warranted for the remaining period of the Warranty.
 - b.) Refund the purchase price paid by the consumer
5. The Warranty does not apply to Products that:
 - a.) Has failed due to excessive wear and tear beyond what is considered to be reasonable.
 - b.) Has been misused or neglected.
 - c.) Has been damaged accidentally or by acts of God including fire and flooding.
 - d.) Has been used or operated contrary to operating or maintenance instructions.
 - e.) Has been damaged by the Consumer or a third party authorized to act for the consumer in transit from the Sellers store to the Consumer.
6. In order to make a claim under the Warranty, the Owner must, where possible return the goods to the Seller's store at the Owner's cost. Proof of purchase must be supplied in all cases.
7. The seller will examine any returned Products and if the Seller determines that there is an apparent defect through no fault of the Owner, the Seller will:
 - a.) Make note of the Owner's contact details including the Owner's telephone number which the owner can be contacted during business hours, postal address, and e-mail address.
 - b.) Make note of the defects reported by the Owner
 - c.) Take back the defective goods from the owner and determine within a reasonable time through dialogue with the Seller whether the goods are defective.
 - d.) Advise the owner within a reasonable time frame whether it accepts or rejects the Product claim.
 - e.) If the seller accepts the return of the Product, the Seller must arrange to have it.
 - i) The Product repaired,
 - ii) Replace the damaged or faulty Product or,
 - iii) Refund the purchase price.
8. The Seller will not accept any returned Product which has not been returned strictly in accordance with this Warranty.
9. For the purpose of this Warranty:
 - a.) Australian Consumer Law means the law as set out in Schedule 2 of the Competition and Consumer Act 2010 (Cth).
 - b.) Consumer means the Purchaser of goods from the seller.
 - c.) Consumer means a Consumer as that term is set out in section 3 of the Australian Consumer Law.
 - d.) Consumer Guarantees mean the guarantees under the Australian Consumer Law.

e.) Implied terms mean any guarantees, conditions, warranties, or other terms implied by any Australian Commonwealth, State, or Territory laws, (excluding the Australian Consumer Law) or the law of any other jurisdiction.

f.) Owner has the meaning set out in clause 3.

g.) Warranty means this warranty.

h.) Product means the Product/s bought by the Owner from the Seller that falls under this warranty.

i.) Warranty Period means:

i) In relation to Cast Iron Cookware:	3-Year Limi
ii) In relation to Non-Stick Cookware:	3 Year Lim
iii) In relation to Cooking Utensils:	3 Year Lim
iv) In relation to Knives/Knife Block Sets:	3 Year Lim
v) In relation to Stainless Steel Cookware:	10 Year Lir
vi) In relation to Chopping boards:	1 Year Lim
vii) In relation to Small Appliances:	1 Year Lim



www.westinghousesmallappliances.com.au

CUSTOMER SERVICE – AU: 1300 883 109

info@westinghousesmallappliances.com.au

CUSTOMER SERVICE – NZ: 0508 776 546

info@westinghousesmallappliances.co.nz

IMPORTED AND DISTRIBUTED BY RVM AUSTRALIA PTY LTD.

11 Tamara Drive, Cockburn Central, WA 6164

MADE IN CHINA

© 2022 RVM AUSTRALIA PTY LTD. ALL RIGHTS RESERVED.

W& WESTINGHOUSE are trademarks of Westinghouse Electric Corporation.

Used under license by RVM AUSTRALIA PTY LTD. ALL RIGHTS RESERVED.

Documents / Resources



[Westinghouse WHTS2S06K 2-Slice Toaster](#) [pdf] Instruction Manual
WHTS2S06K, 2-Slice Toaster, WHTS2S06K 2-Slice Toaster

References

- [Westinghouse Small Appliances : Cookware, Audio Visual, Home Care](#)

