



## westomatic EVOLVE Screen Media Installation Guide

[Home](#) » [westomatic](#) » westomatic EVOLVE Screen Media Installation Guide 

### Contents


- [1 westomatic EVOLVE Screen Media](#)
- [2 INSTALLING SCREEN MEDIA](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)




### westomatic EVOLVE Screen Media



## INSTALLING SCREEN MEDIA

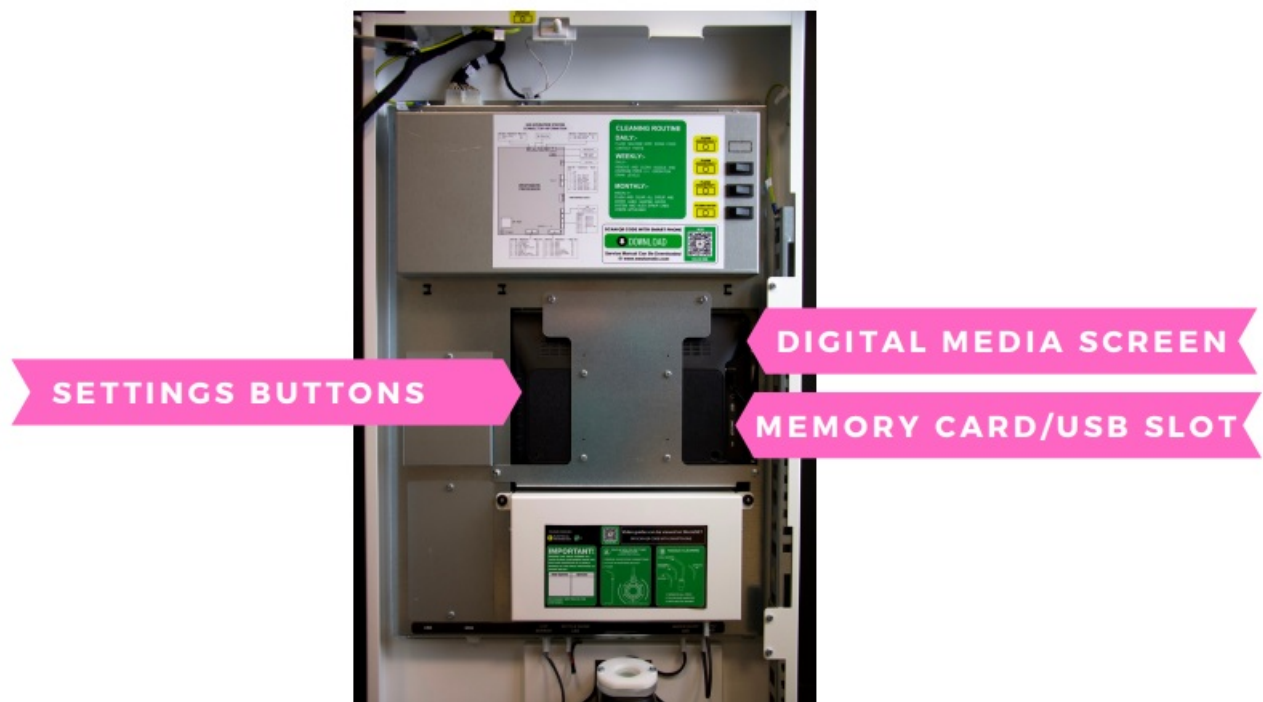

## LOADING FILES ON TO SD CARD

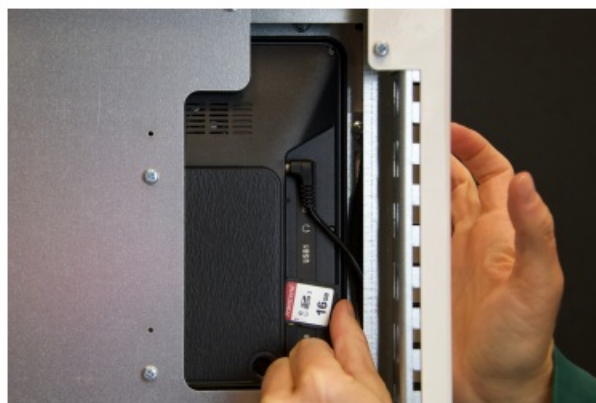

- We recommend using an SD Card to show media on the screen of the H20
- Remove the SD Card from the media screen
- Using a computer, read the contents of the SD card
- Delete all files currently on the SD Card (if there are any)

### **Load your media:**

For stock footage please use the following link [Evolve-Screen-Media.zip](#) and copy the files onto the SD card



Alternatively you can create your own using the following settings:

#### File Formats:

Image: PNG, JPG

Video: MP4

**Frame Width x Height:** 1280 x 720

**Frame Rate:** 30fps

Once created, please load onto the SD card

- Using the buttons on the back of the screen, highlight the 'SETTINGS' option and press 'ENTER' to select it
- Using the directional buttons again change the 'AUTOPLAY' options to your desired setting. i.e. 'movie' or 'photo' or 'photo & movie' should your screen have this option.



- Press 'MENU' to save the settings
- Insert SD card back into digital media screen (as shown in the image)
- Files on the SD Card will automatically play and continually rotate the media on the card.
- The screen does have sound – to adjust it please use the remote control supplied.

#### CONTACT

Westomatic Vending

Services Ltd ,

Units 7-8 Forde Court,Block 4 Forde Road ,

Newton Abbot ,


TQ124BT

call  
+ 4 4 ( 0 ) 1 6 2 6 3 2 3 1 0 0

mail  
[sales@westomatic.com](mailto:sales@westomatic.com)

Web  
[www.westomatic.com](http://www.westomatic.com)

Documents / Resources

	<a href="#">westomatic EVOLVE Screen Media</a> [pdf] Installation Guide EVOLVE, Screen Media
---	---