



WEWATCH S1 Projector User Manual

[Home](#) » [WEWATCH](#) » WEWATCH S1 Projector User Manual 

Contents

- [1 WEWATCH S1 Projector](#)
- [2 Main Unit Function Overview](#)
- [3 Input & Output Connection](#)
- [4 Remote Control Operation](#)
- [5 Product Specifications](#)
- [6 Operating the Projector](#)
- [7 Manual Focus & Keystone Correction](#)
- [8 Screen Mirroring](#)
- [9 Troubleshooting](#)
 - [9.1 Contact US](#)
- [10 FCC Warning Statement](#)
- [11 Documents / Resources](#)
- [12 Related Posts](#)

WEWATCH

WEWATCH S1 Projector



 
Thank you for purchasing this product. To ensure proper use and trouble-free operation, please read this manual carefully and store it in a safe place for future reference.

Warning

Caution: Do not look directly into the beam.

To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture. Do not block any ventilation openings. To ensure reliable operation of the projector and to protect from over heating, it is recommended to install the projector in a location that does not block ventilation. The unit should only be repaired by appropriate service personnel.


Main Unit Function Overview

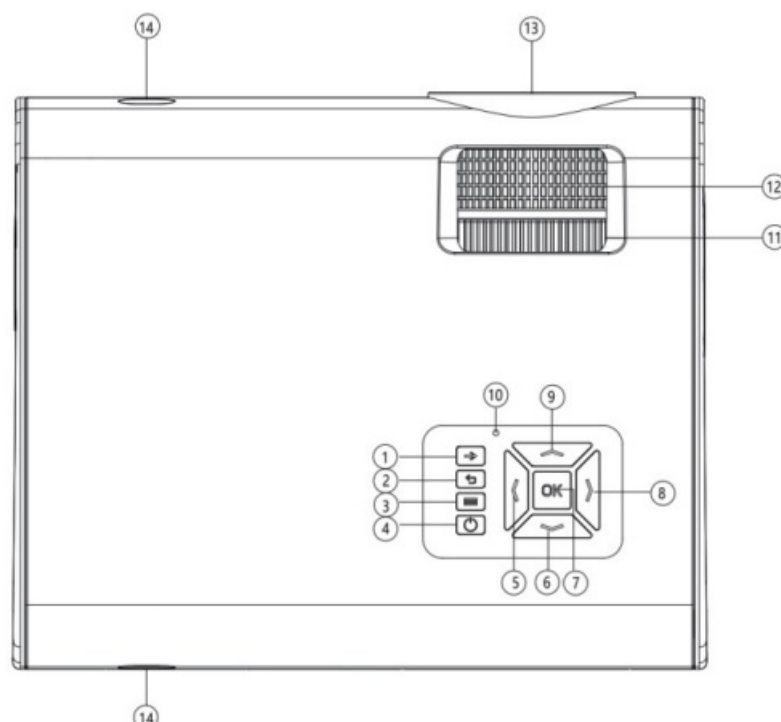

1. Signal source: Press this button to enter the signal source selection interface.
2. Return: Return to the previous state in the media player screen and menu setting screen.
3. Menu: Press this button to enter the setting interface.
4. Power: Control the on/ off of the power supply of the machine.
5. Left: Move the cursor to the left in the home screen / Browser/ menu.


6. Down: Move the cursor down in the home screen/ Browser/ menu.
7. OK: Confirm the selected item or mode.
8. Right Move the cursor to the right in the home screen/ Browser/ menu.
9. Up: Move the cursor upward in the home screen / Browser/ menu.
10. Indicator light: Red light for standby mode and green light for startup.
11. Trapezoidal correction: When the upper and lower widths of the projected picture are inconsistent, the distorted picture can be corrected turning the ring.
12. Focus Ring: Turn the ring to adjust the focus for a sharp image.
13. Lens: The position where the picture is projected.
14. IR: Remote control signal receiver. Operate the remote controller for the receiver and projection screen of the body.

 Input & Output Connection

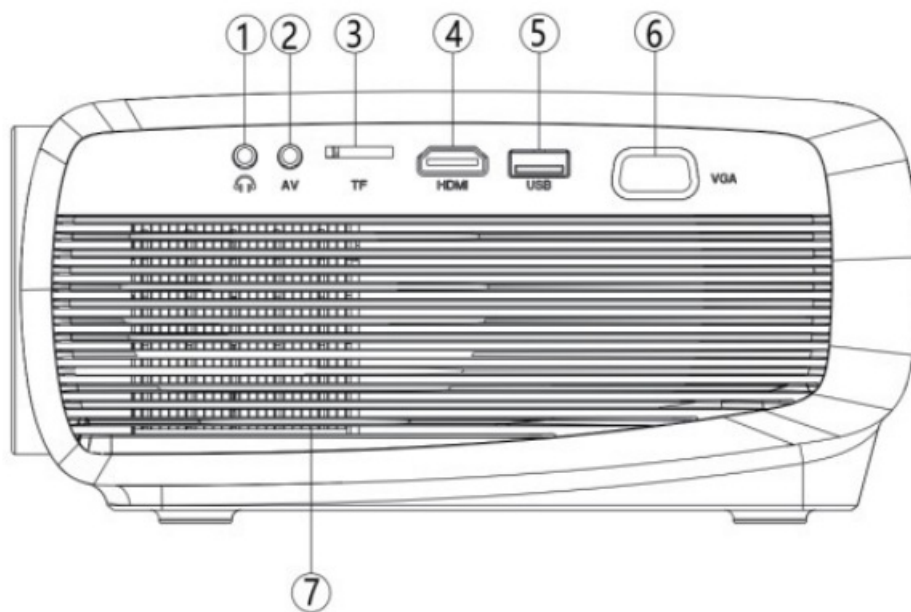

1. Earphone terminal: 3.5mm earphone plug hole.
2. Video image input terminal: Press the signal button on the projector or the source button on the remote control, select the AV function pop-up in the screen, and use the 3.5mm device to input image and sound.
3. TF card slot: Select multimedia function in the home screen. It can support up to 64GB.
4. HDMI: Input through HDMI line. Press the source button on the remote control and select the HDMI function on the pop-up screen.
5. USB: Insert USB memory and select multimedia function on the home screen. It can support up to 1TB hard disk.
6. Computer image input terminal: Input with VGA connector, press the signal button on the projector or the source button of the remote control, and select the VGA function pop-up in the screen.
7. Exhaust port: Do not block the suction port and exhaust port of the machine. If the suction port and exhaust port are blocked, it is easy to fail.

 Remote Control Operation

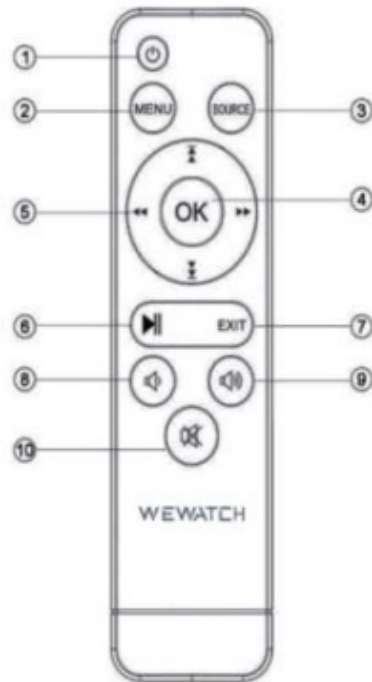


1. Power button: Turn on/off the device.
2. Menu: Enter the menu.
3. Signal source: Select the signal source.
4. OK: Enter.
5. Arrow keys: Up, down, left, and right selection functions.
6. Play/Pause.
7. Exit.
8. Volume down.
9. Volume up.
10. Mute.

Product Specifications

Model	S1		
Display Technology	LCD	Light Source	LED
Resolution	1920x1080P	Keystone Correction	Manual
Installation Type	Front/Rear/Ceiling	Aspect Ratio	4:3/16:9
Projection Size	35-200 inch	Recommend Projection Distance	6 ft-9 ft
Lamp life time	30000 hours	Built-in Speaker	403w
Bluetooth	Bluetooth 4.0	WiFi	Yes
Power Voltage	AC 100-240V	Projector Weight	About 1.45 kg
Input Interface	HDMI/USB/AV/f	Output Interface	3.5mm Audio out
Multimedia Supported Files			
Audio Format	MP3/MP4/FLAC/M4A/OGG		
Video Format	AVI/MP4/MKV/FLV/MOV/MPEG1/MPEG2/H.264/XVID		
Image Format	jpg/png/bmp/Jpeg		

Operating the Projector

 Turn on/Off the Projector

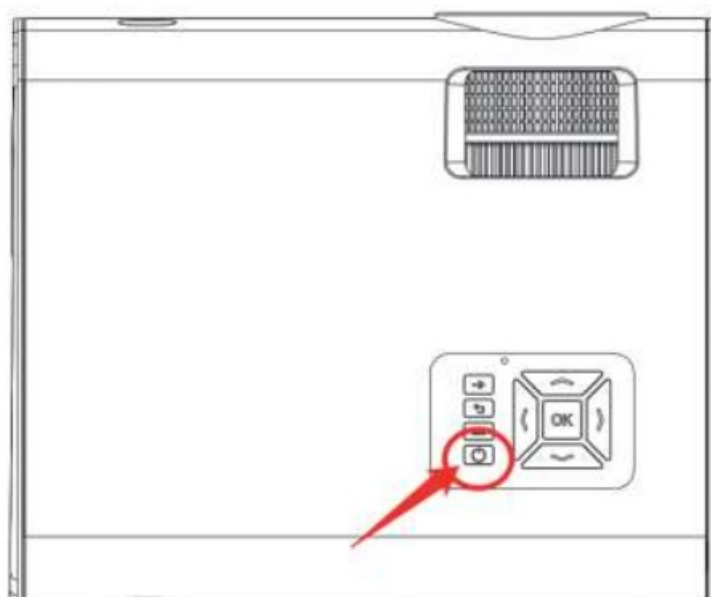


Turn on

Press the power button on the projector or on the remote to turn on the projector: The power indicator turns blue when the projector is on.

Turn off


Press the power button twice on the projector or on the remote to turn off.

 Manual Focus & Keystone Correction

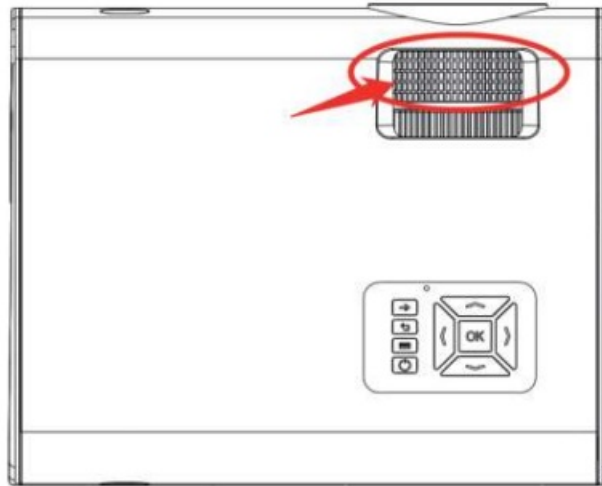


Turn the focus ring to adjust image focus for best image performance.
Turn the keystone correction ring to adjust a square image.

 Projection Settings

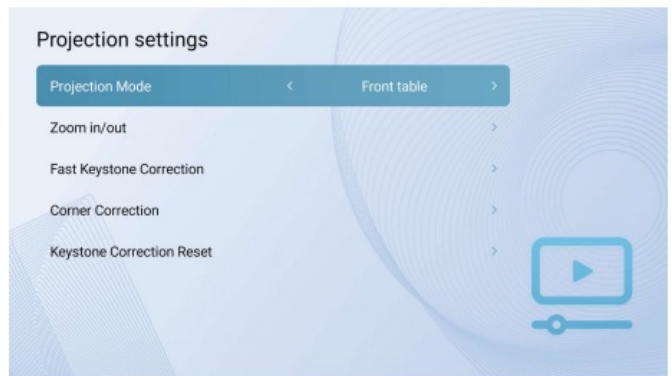


Select Setting—>Projection setting to choose your settings.

 Connecting Wi-Fi

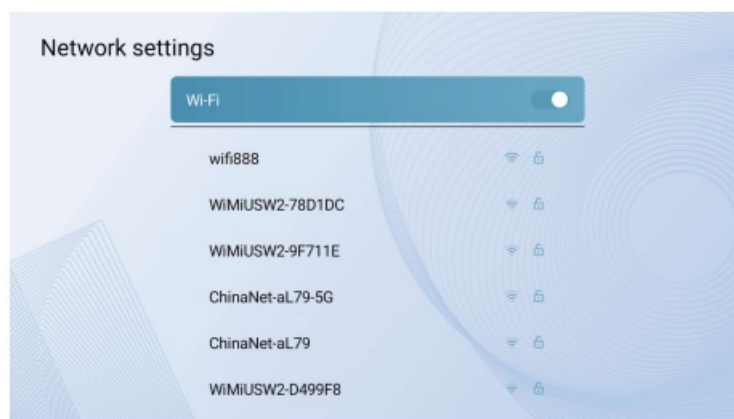

Select Setting—>Networking Settings—>Choose the network and enter the password to connect.

 Bluetooth

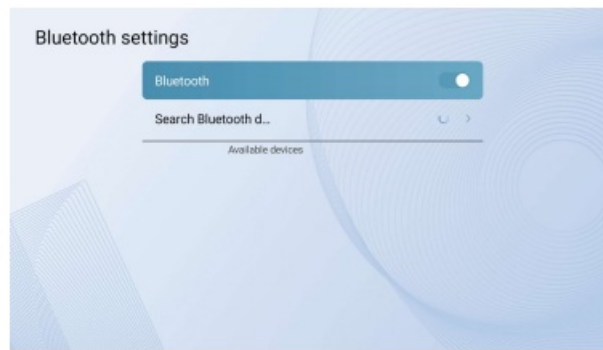


To enter and open Bluetooth: select Setting—+Bluetooth Settings then search for Bluetooth devices and select the devices that need to be matched.

Home



 
Input Source

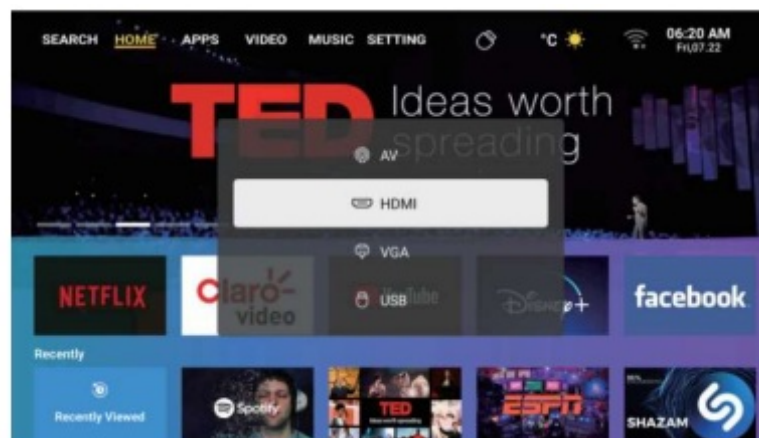

Press signal source button on the projector or the remote to choose input source.


Screen Mirroring

 For iOS

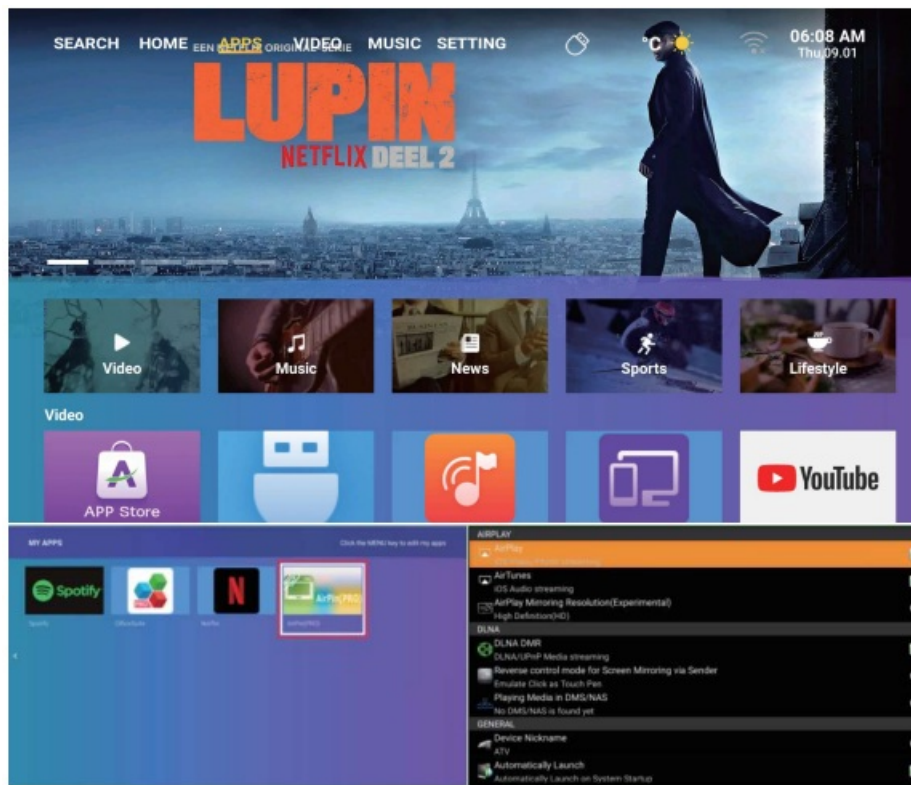

1. Connect the projector and the iOS device to the same WiFi Network.
2. Select APPS on the home interface and then select Airpin(PRO)
3. Activate Activate Screen Mirroring on your iOS device and search for the projector.
4. Choose the project name "S1-Projector" and connect.

 For Android

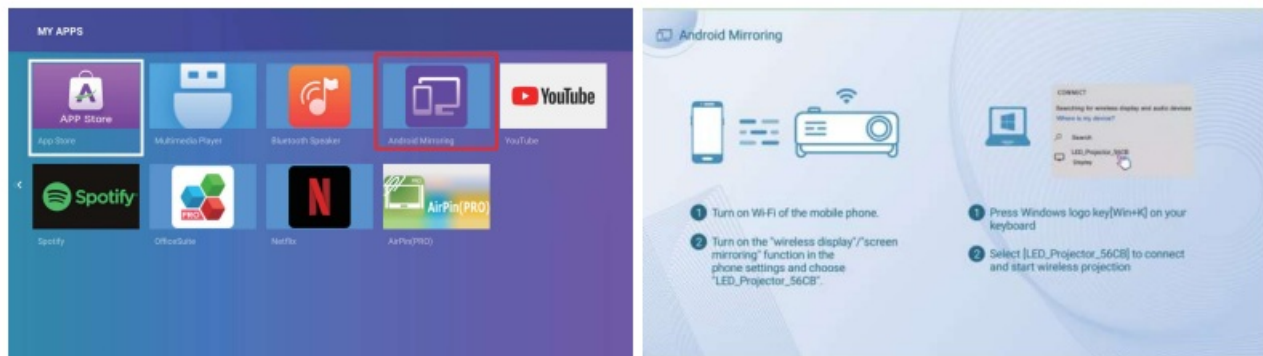

1. Select APPS on the home interface and then select Android Mirroring.
2. Turn on the WiFi of the Android device and activate Wireless Display.
(Note: For the wireless display function, the names may vary from different Android devices.)
3. Select the project device name "S1-Projector"" and connect.

Troubleshooting

Trouble	Possible Solution
Wi-Fi connection is not stable	Please check whether the network of your phone is well. Make sure the distance of the phone and projector is within 1 meter:
Indicator light is off when plugged into power supply	The power cable not connected well. The power button on projector is not pressed.
The projector does not turn on when pressing the power button on the remote control	The remote control is out of battery. Something obstructing the signal between the remote and IR. Strong light on IR directly.
No image on the screen	The channel set-up is not correct. There is no input signal. The input cable is not well plugged. The refresh rate < 75KHz under PC mode.
There is no sound when picture displayed	Input cable is not connected well. Volume at minimum or on mute.
The projector shuts off automatically after turning on for a while	There is a barrier around the ventilation. Low voltage or high voltage fluctuations. Check the over-heat protection system.
Can't find device when connected with hard drive or flash drive	Re-plug the device Check if the device is broken.
Cannot play the movies	The format of the video is not right. The movie files are broken. The device is broken.

Contact US

If you have any problems concerning the product, please contact us via support@wewatchtech.com. We will respond to you as soon as possible.



Scan the QR code to get the multilingual user manual.

FCC Warning Statement

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement

The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co – located for operating in conjunction with any other antenna or transmitter.

Documents / Resources

 The image shows the cover of a user manual for the WEWATCH S1 Projector. It features the brand name 'WEWATCH' at the top, followed by 'USER MANUAL' and a photograph of the projector. The model 'S1 Projector' is printed at the bottom.	<p>WEWATCH S1 Projector [pdf] User Manual S1, 2AYQZ-S1, 2AYQZS1, S1 Projector, Projector</p>
---	--