


WHADDA WPSE471 Electronic Scale Load Cell Sensor User Manual

[Home](#) » [WHADDA](#) » WHADDA WPSE471 Electronic Scale Load Cell Sensor User Manual 

WHADDA WPSE471 Electronic Scale Load
Cell Sensor User Manual

EN ELECTRONIC SCALE LOAD CELL SENSOR

WPSE471

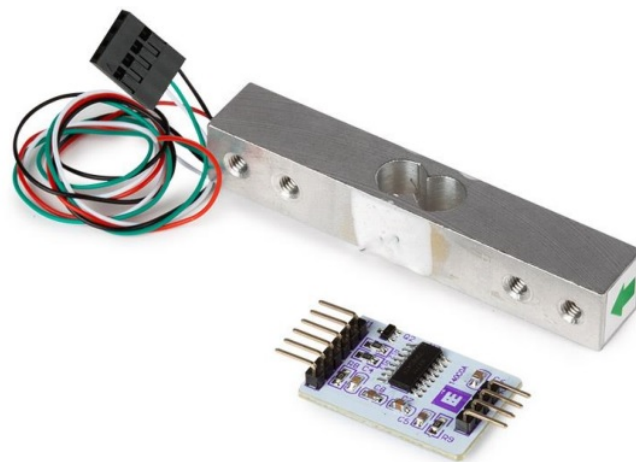

Contents

- [1 Introduction](#)
- [2 Safety Instructions](#)
- [3 General Guidelines](#)
- [4 What is Arduino®](#)
- [5 Product overview](#)
- [6 Specifications](#)
- [7 Example program](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)

Introduction



To all residents of the European Union
Important environmental information about this product

This symbol on the device or the package indicates that disposal of the device after its lifecycle could harm the environment. Do not dispose of the unit (or batteries) as unsorted municipal waste; it should be taken to a specialized company for recycling. This device should be returned to your distributor or to a local recycling service. Respect the local environmental rules.

If in doubt, contact your local waste disposal authorities.

Thank you for choosing Whadda! Please read the manual thoroughly before bringing this device into service. If the device was damaged in transit, do not install or use it and contact your dealer.

Safety Instructions



Read and understand this manual and all safety signs before using this appliance.



For indoor use only

- This device can be used by children aged from 8 years and above, and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the device in a safe way and understand the hazards involved. Children shall not play with the device. Cleaning and user maintenance shall not be made by children without supervision.

General Guidelines

- Refer to the Velleman® Service and Quality Warranty on the last pages of this manual.
- All modifications of the device are forbidden for safety reasons. Damage caused by user modifications to the device is not covered by the warranty.
- Only use the device for its intended purpose. Using the device in an unauthorised way will void the warranty.
- Damage caused by disregard of certain guidelines in this manual is not covered by the warranty and the dealer will not accept responsibility for any ensuing defects or problems.
- Nor Velleman nv nor its dealers can be held responsible for any damage (extraordinary, incidental or indirect) – of any nature (financial, physical...) arising from the possession, use or failure of this product.
- Keep this manual for future reference.

What is Arduino®

Arduino® is an open-source prototyping platform based on easy-to-use hardware and software. Arduino® boards are able to read inputs – light-on sensor, a finger on a button or a Twitter message – and turn it into an output – activating of a motor, turning on an LED, publishing something online. You can tell your board what to do by sending a set of instructions to the microcontroller on the board. To do so, you use the Arduino programming language (based on Wiring) and the Arduino® software IDE (based on Processing). Additional shields/modules/components are required for reading a twitter message or publishing online. Surf to www.arduino.cc for more information

Product overview

The Whadda electronic scale load cell sensor package combines both an accurate load cell rated up to 20 kg, and a sensitive A/D converter board that easily interfaces with a large variety of microcontrollers (such as an Arduino® compatible board).

In order to get accurate readings, the fixed side of the load cell should be mounted to a fixed, secure part. It is recommended to also mount a sturdy measuring surface where the weights can be placed upon to the measuring side of the load cell.

Specifications

Load cell model: YZC-131

Rated load: 20 kg

Nonlinearity: $\pm 0.05\%$ (Full-Scale)

Hysteresis: 0.0% (Full-Scale)

Repeatability: 0.05% (Full-Scale)

Creep (5 min): 0.05% (Full-Scale)

Temperature stability: 0.003% / °C (Full-Scale)


A/D converter IC: HX711

Supply voltage: 5 V DC

Weight: 35 g


Dimensions load cell (W x L x H): 13 x 75 x 12 mm

Dimensions sensor board (W x L x H): 40 x 20 x 7 mm

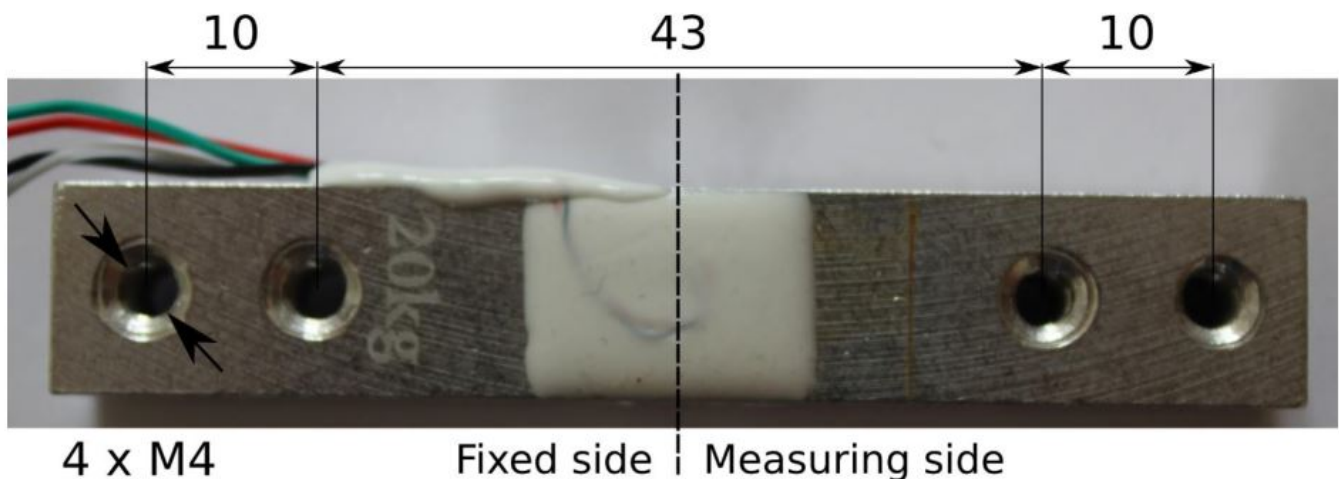

Note: all dimensions are in mm

Pin		Name	Arduino® connection
VCC		Supply voltage (5 V DC)	5V
SCK		Clock signal	Digital Pin (e.g. D3)
DT		Data signal	Digital Pin (e.g. D2)
GND		Ground	GND
B+		Load cell connection B+	-
B-		Load cell connection B-	-
A+		Load cell connection A+	-
A-		Load cell connection A-	-
E-		Load cell connection E-	-
E+		Load cell connection E+	-

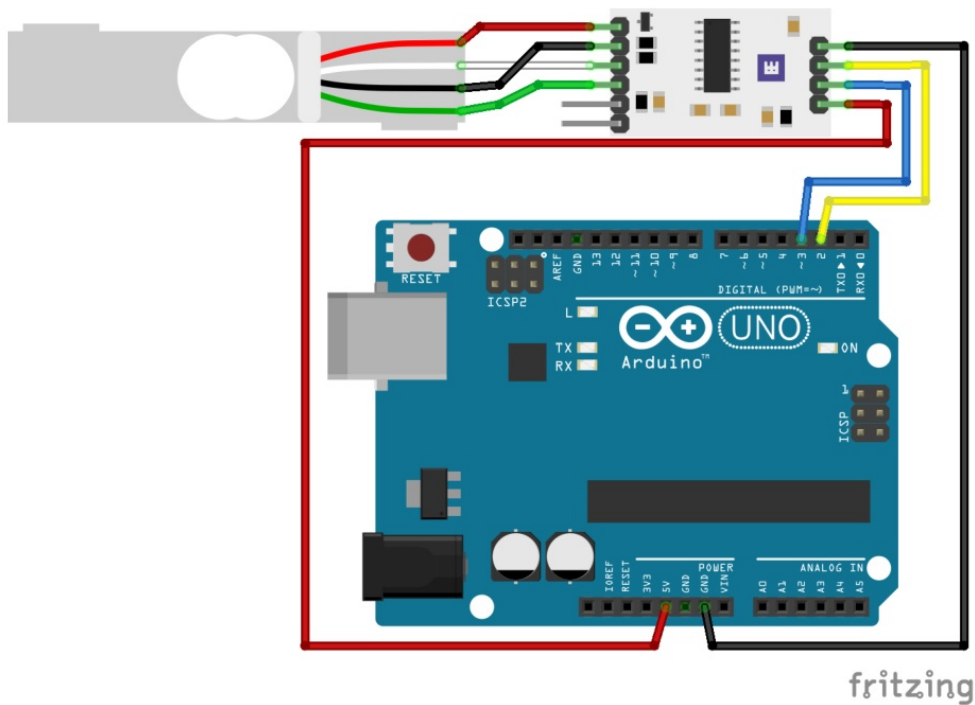


Example program

You can download the example Arduino® program by going to the official Whadda github page:


github.com/WhaddaMakers/Electronic-scale-load-cell-sensor

1. Click the “**Download ZIP**” link in the “**Code**” menu:

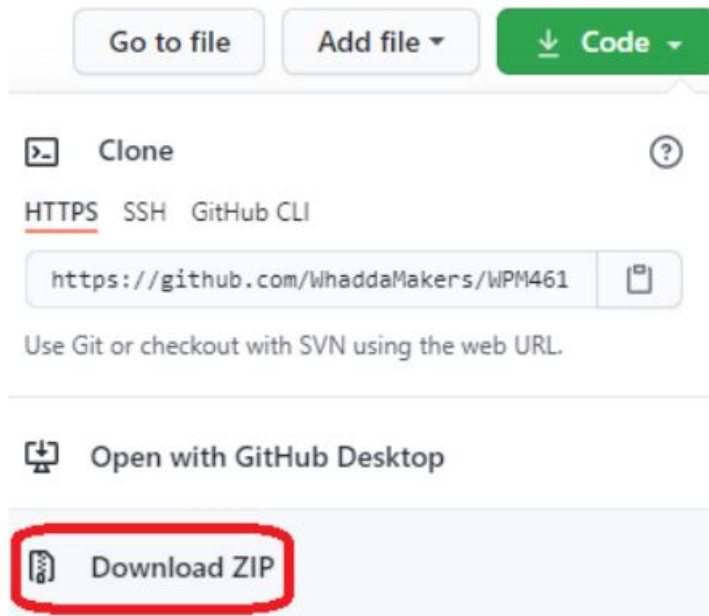

2. Unzip the downloaded file, and browse to the **calibrate_sensor** folder. Open the calibrate_sensor Arduino® sketch (**calibrate_sensor.ino**) located in the folder.

3. Use the **Arduino Library manager** to install the **HX711 Arduino Library**, by going to Sketch > Include Library > Manage Libraries..., typing in **HX711 Arduino Library** in the search bar and clicking "Install":

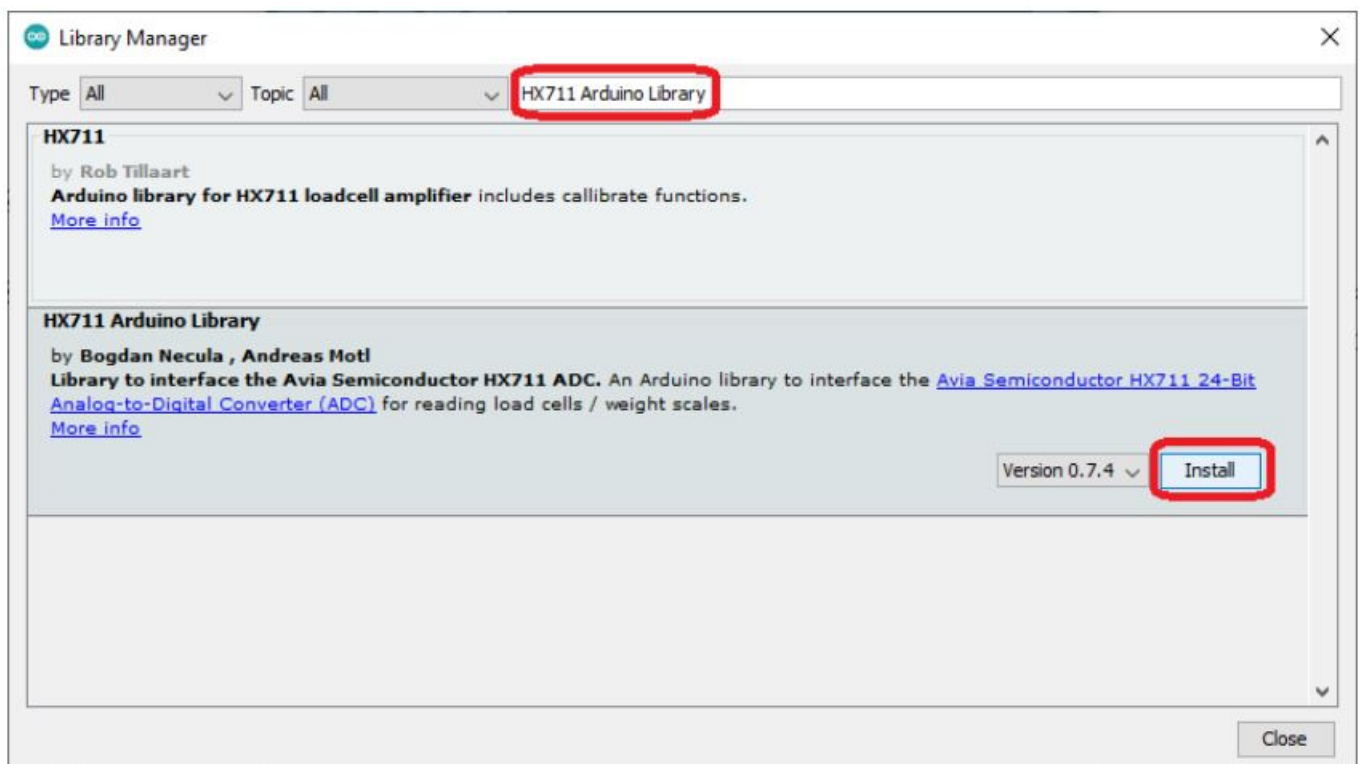

4. Connect your Arduino compatible board, make sure the correct Board and connection port are set in the tools menu, and hit

Upload 


5. Open the serial monitor by clicking the serial monitor button , make sure the baudrate is set at 9600 baud.

6. Follow the on-screen instructions to generate the required calibration parameters.. Once a few zero weight readings have been received, put a known weight on the measuring end of the load cell. You can adjust the calibration parameter to get an accurate reading of your known weight by sending the + and – characters using the serial monitor, which will increase and decrease the calibration factor by a set amount respectively.

```
1 d
2
Reading: 0.334 kgs calibration_factor: -105500.00
Reading: 0.333 kgs calibration_factor: -105500.00
Reading: 0.333 kgs calibration_factor: -105500.00
Reading: 0.333 kgs calibration_factor: -105500.00
Reading: 0.333 kgs calibration_factor: -105500.00
Reading: 0.333 kgs calibration_factor: -105500.00
Reading: 0.333 kgs calibration_factor: -105500.00
Reading: 0.333 kgs calibration_factor: -105500.00

Calibration procedure finished
Copy following define statements to read_weight sketch:
3 #define ZERO_FACTOR 68704.f
  #define CALIBRATION_FACTOR -105500.00f
4
```

```
28 #include "HX711.h"  
29  
30 // PASTE DEFINE STATEMENTS FROM CALIBRATION SKETCH HERE  
31 // VVVVVVVVVVVVVVVVVVVVVVVVVVVVVVVVVVVVVVVVVVVVVVVV  
32 #define ZERO_FACTOR 68704.f  
33 #define CALIBRATION_FACTOR -105500.00f  
34 // ^^^^^^^^^^^^^^^^^^^^^^^^^^^^^^^^^^^^^^^^^^^^^  
35  
36 // HX711 circuit wiring  
37 const int LOADCELL_DOUT_PIN = 2;  
38 const int LOADCELL_SCK_PIN = 3;
```

9. **Upload**  the **read_weight.ino** sketch, and open the serial monitor by clicking the serial monitor button



, make sure the baudrate is set at **9600 baud**. The module will now be initialized with the new calibration factors, after which both averaged and single weight measurements will be shown in the serial monitor.



whadda.com



Modifications and typographical errors reserved – © Velleman Group nv. WPSE471
Velleman Group NV, Legen Heirweg 33 – 9890 Gavere.

Documents / Resources

	WHADDA WPSE471 Electronic Scale Load Cell Sensor [pdf] User Manual WPSE471, Electronic Scale Load Cell Sensor
	WHADDA WPSE471 Electronic Scale Load Cell Sensor [pdf] Instruction Manual WPSE471, Electronic Scale Load Cell Sensor, WPSE471 Electronic Scale Load Cell Sensor, S cale Load Cell Sensor, Load Cell Sensor, Cell Sensor, Sensor

References

- [GitHub - WhaddaMakers/Electronic-scale-load-cell-sensor: Example code for the Whadda electronic scale load cell sensor \(WPSE471\).](#)
- [Whadda - Exciting Electronics](#)
- [Arduino - Home](#)
- [Arduino - Home](#)
- [GitHub - WhaddaMakers/Electronic-scale-load-cell-sensor: Example code for the Whadda electronic scale load cell sensor \(WPSE471\).](#)

