

WHARFEDALE 336AUR2STD Speaker Stands Installation Guide

Home » Wharfedale » WHARFEDALE 336AUR2STD Speaker Stands Installation Guide 🖫



Contents

- 1 WHARFEDALE 336AUR2STD Speaker
- **Stands**
- 2 PARTS
- **3 INSTALLATION**
- 4 Documents / Resources
 - 4.1 References


WHARFEDALE

WHARFEDALE 336AUR2STD Speaker Stands



-			
Α	-	Top plate assembly bolt	x8
В	I	Bottom plate assembly bolt	x8
С		Base spike lock cap	x8
D	S	Base spike	x8
E	0	Base spike lock wheel	x8
F	•	Optional hard floor protector	x8
G	0	Adhesive Pad	x8
	/	Also Included	X1

INSTALLATION

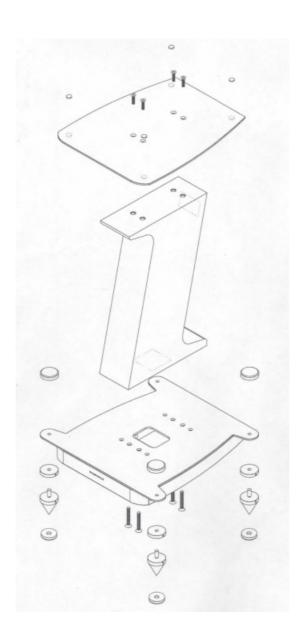

QR CODE



Scan the OR code using a smart-phone device, for product warranty registration online,

- IAG House, 13/14 Glebe Road, Huntingdon, Cambridgeshire, PE29 7DL, UK
- Tel: •44(0)1480 452561
- Email: <u>service@wharfedale.co.uk</u>
 http://www.wharfedale.co.uk
- IAG reserves the right to alter the design and specifications without notice.
- All rights reserved © IAG Group Ltd. Wharfedale is a member of the International Audio Group.
- CODE: WH14-MNL005a

Documents / Resources



WHARFEDALE 336AUR2STD Speaker Stands [pdf] Installation Guide 336AUR2STD Speaker Stands, 336AUR2STD, Speaker Stands, Stands

References

User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.