


Whele PXBR-000072 White Noise Generator Plus Wireless Speaker Owner's Manual

[Home](#) » [Whele](#) » Whele PXBR-000072 White Noise Generator Plus Wireless Speaker Owner's Manual 

Whele PXBR-000072 White Noise Generator Plus Wireless Speaker

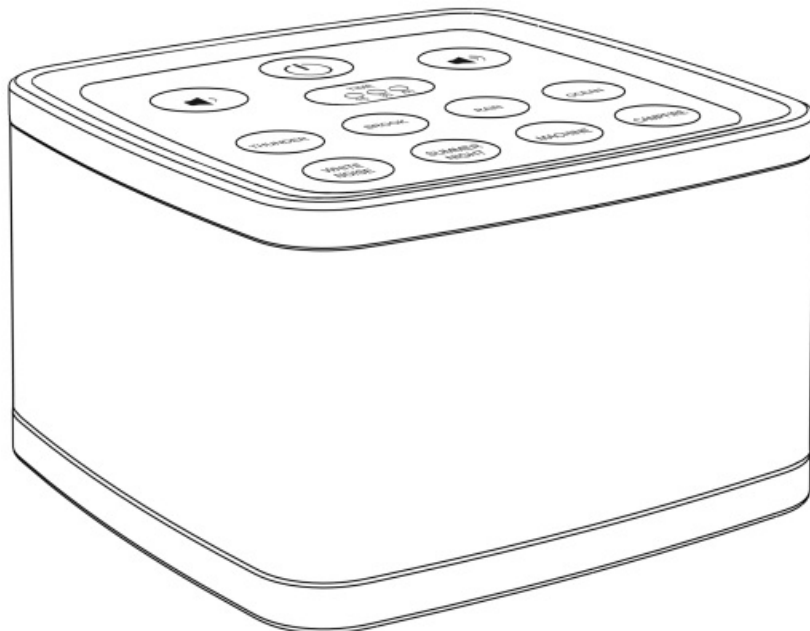

Contents

- 1 PACKING LIST
- 2 BUTTONS & INTERFACES
- 3 WIRELESS CONNECT
- 4 POWER
- 5 BATTERY PRECAUTIONS
- 6 ONE-YEAR LIMITED WARRANTY
- 7 PRECATIONS
- 8 FCC Warning
- 9 Documents / Resources
- 9.1 References

PACKING LIST

1. 1x Speaker
2. 1x Charging Cable
3. 1x User manual

BUTTONS & INTERFACES

1. On/Off – Play/Pause Button:

Press short to turn the device on. Press short again to turn the device off.

***Note:** In Bluetooth Mode the button functions are Play/Pause/Off:

Press short to pause. Press short again to play. Press long to turn the device off.

2. Minus Button: Single click to decrease volume, in all mode.

Only in Bluetooth Mode: Long press to skip to the previous track.

3. Plus Button: Single click to increase volume, in all mode.

Only in Bluetooth Mode: Long press to skip to the next track.


4. Timer Settings / Mode switch:

1. Short press to set a timer which turns the device off. Press the timer button once for 15 minutes, twice for 30 minutes or three times for 60 minutes. Press a fourth time to turn the timer off.
2. Long press to switch between Bluetooth Mode and White Noise Mode.

***Note:** The default mode after power on is White Noise Mode.

5. Sound Effect Selection button: Short press to select different white noise effects. (Only in White Noise Mode)

6. Charging Port: DC5V charging socket.

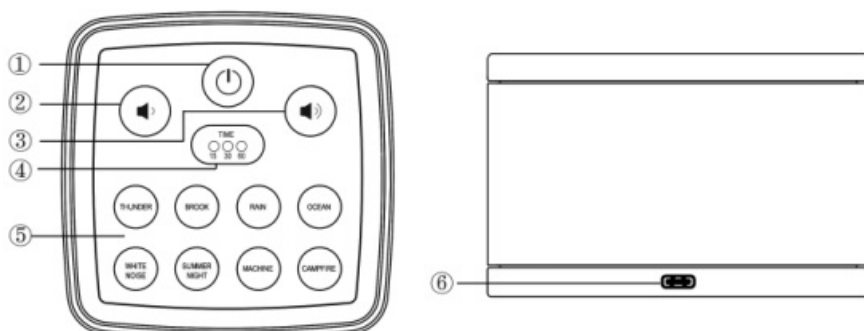

WIRELESS CONNECT

Turn on Bluetooth on your device and search for Bluetooth devices.

Find "COM X1" in the list of Bluetooth devices and click to connect.

Once the speaker emits a successful pairing tone, it indicates that the Bluetooth connection is successful (The Bluetooth speaker has a memory function, so you don't need to pair it again for next use).

*If you want to change the wireless device, you need to disconnect your first device and connect again with the new device following the steps above.

POWER

AC Adapter:

Plug the adapter into the DC power port (labeled), then insert the adapter plug into a power outlet. Only use the adapter included with the product or the warranty will be void.

Batteries:

Insert three new AAA batteries. Follow battery polarity guide.

BATTERY PRECAUTIONS

1. Use only the size and type of batteries specified.
2. Always purchase the correct size and grade battery most suitable for the intended use.
3. When installing batteries, pay attention to the positive and negative directions. Reverse installation may damage the device.
4. Do not mix alkaline, standard (Carbon-Zinc), or rechargeable (Nickel Cadmium) batteries.
5. Replace all batteries of a set at the same time. Do not mix old and new batteries.

ONE-YEAR LIMITED WARRANTY

This product comes with a one-year limited warranty from the date of purchase, covering defects in materials and workmanship.

PRECAUTIONS

ⓘ ATTENTION

1. Do not attempt to disassemble or replace any part of the product except as specifically indicated in the manual;
2. This product is not waterproof, do not put the product into water or any other liquid;
3. If any liquid accidentally enters the product, disconnect and remove the product immediately;
4. In order to avoid electric shock, please ensure that your hands are free of water when installing or uninstalling the product;
5. Please do not discard the product at will, and please do not place it near a heat source or expose it directly to a fire source, so as not to cause danger;
6. Do not place the product in an environment with strong electromagnetic force, otherwise it will cause product failure.
7. If you need to return and replace any problems, please protect the packaging, otherwise the manufacturer will not guarantee.

READ MANUAL BEFORE USE. SAVE THESE INSTRUCTIONS.

MADE IN CHINA

FCC Warning

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.

Documents / Resources

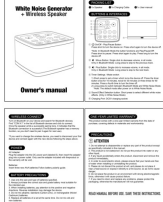	<p>Whele PXBR-000072 White Noise Generator Plus Wireless Speaker [pdf] Owner's Manual PXBR-000072, PXBR-000072 White Noise Generator Plus Wireless Speaker, White Noise Generator Plus Wireless Speaker, Noise Generator Plus Wireless Speaker, Generator Plus Wireless Speaker, Wireless Speaker, Speaker</p>
---	--

References

- [User Manual](#)