

whisker Litter-Robot 4 Automatic Litter Box User Guide

[Home](#) » [whisker](#) » whisker Litter-Robot 4 Automatic Litter Box User Guide 

Contents

- [1 whisker Litter-Robot 4 Automatic Litter Box](#)
- [2 Installation Instruction](#)
- [3 Control panel icons](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)

The Whisker logo, featuring the word "whisker" in a bold, lowercase, sans-serif font.

whisker Litter-Robot 4 Automatic Litter Box



Installation Instruction

- **Ensure Proper Placement**

1

Ensure Proper Placement



- If possible, place the Litter-Robot in the same location as the old litter box (at least during transition).
- Make sure the unit is indoors on a firm, level surface and in a cool, dry location. Must not be touching any walls.

- Place litter mats or rugs in front of the unit.

- **Add Litter**



- Use clumping litter or litter beads and crystals that are small enough to pass through the screen.
- Add litter until it meets the raised MAX fill line when spread flat (8-10 lbs or 3.6-4.5 kg). Be careful not to overfill.

- **Power On**



- Plug the small end of the power supply into the power input on the back of the base.
- Plug the AC/DC adapter into a wall outlet.
- Press the Power button on the control panel.

- **Download The App**



- Download the Whisker app and follow the onboarding instructions.

Control panel icons

• Power

- Press the Power button to turn the robot ON or OFF.
- The robot will begin a clean cycle
- when power is turned on.

• Cycle

- Press the Cycle button to start a clean cycle.
- If already cycling, press Cycle to pause; press again to resume a cycle.
- A long press, while at the home position, will enter sleep mode.

• Reset

- Press the Reset button to zero the weight scale.
- A long press, while at the home position, will enter night light setting mode.
- If already cycling, press Reset to pause a cycle; press again to cancel a cycle.
- If already cycling, a long press will reset the cat sensor weight scale


• Empty

- Press the Empty button to start an empty cycle.
- If already cycling, press Empty to pause.
- A long press, while at the home position, will enter wait time setting mode.

• Connect

- Press the Connect button to turn the WiFi ON or OFF.
- A long press, while at the home position, will initiate the onboarding process.

What do the lights mean?

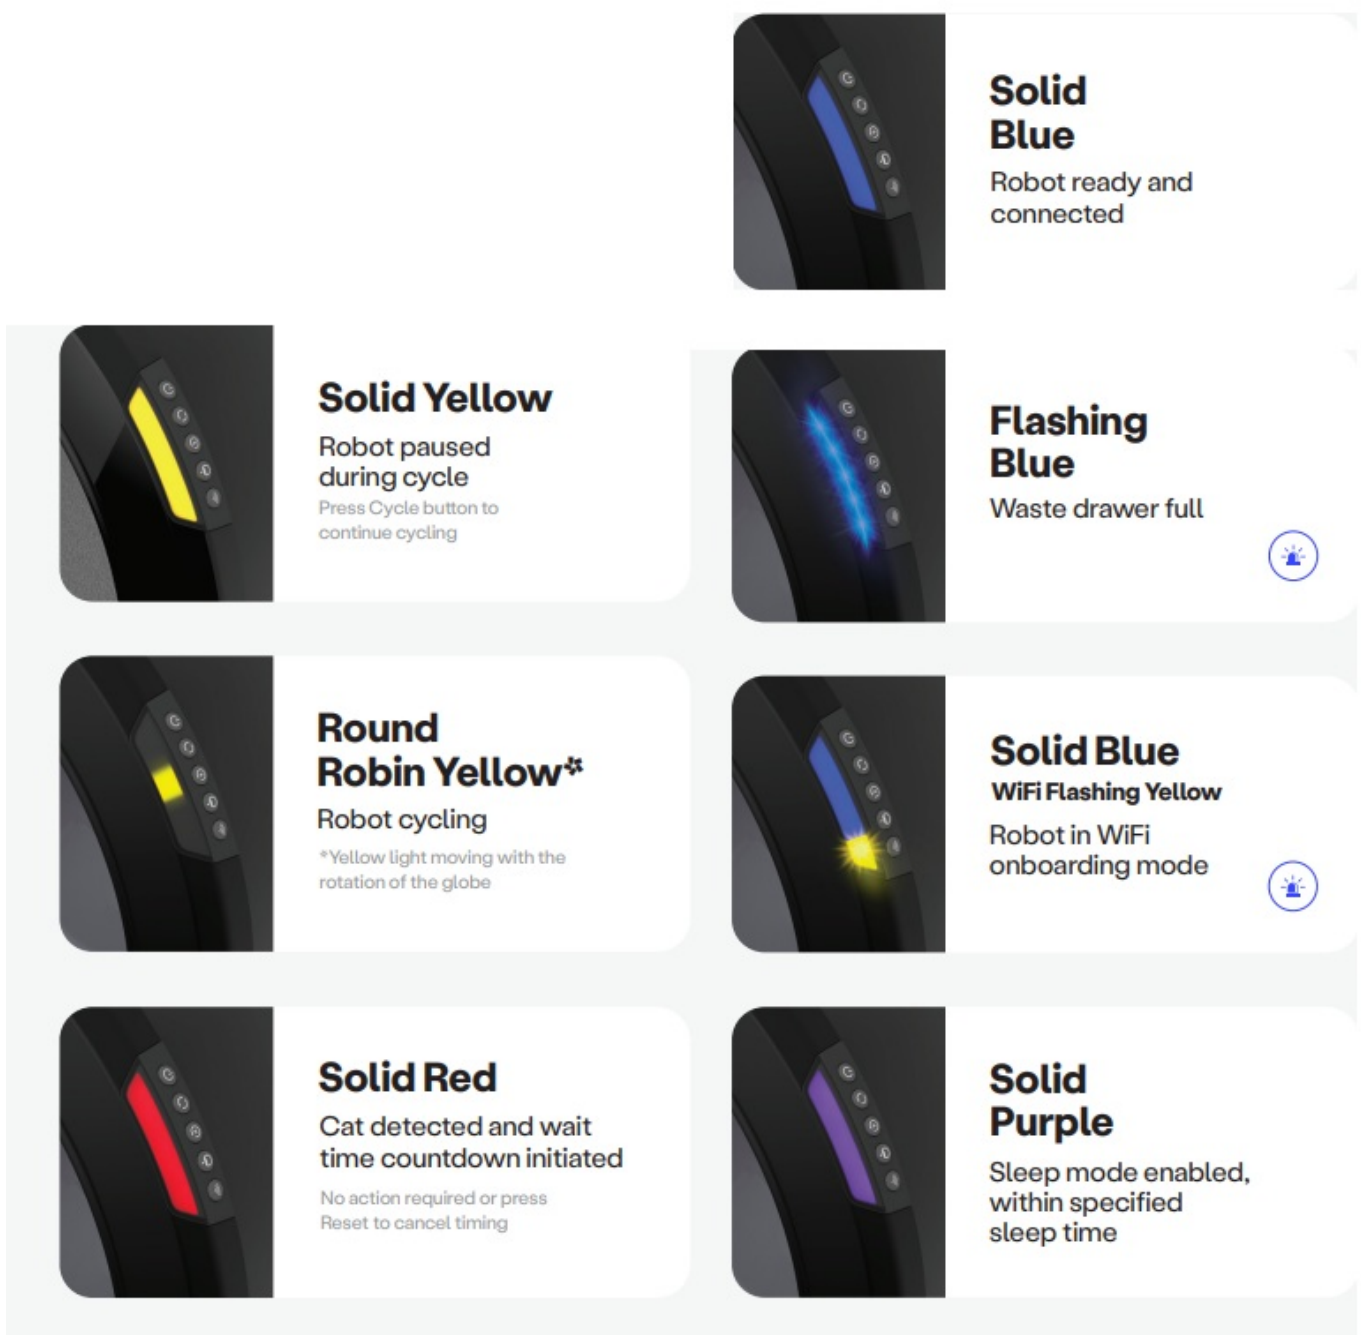

Scan to access our online setup guide (including tips to acclimate your cat), the user manual, and accessory installation guides, or visit litter-robot.com/gettingstarted


Download the Whisker app.

The Litter-Robot will now perform an initial clean cycle.

Note: During initial clean cycle, the cat sensor weight scale is disabled to ensure proper calibration

Need help? Visit whiskersupport.com

Documents / Resources

	<p>whisker Litter-Robot 4 Automatic Litter Box [pdf] User Guide Litter-Robot 4, Automatic Litter Box, Litter-Robot 4 Automatic Litter Box</p>
---	---

References

-  [Getting Started](#)
-  [Litter-Robot Support Community](#)