



White Knight CPT-1 Cycle Rate Translators Instruction Manual

[Home](#) » [WHITE KNIGHT](#) » White Knight CPT-1 Cycle Rate Translators Instruction Manual 

White Knight CPT-1 Cycle Rate Translators Instruction Manual



To configure your Cycle Rate Translator with different connection methods, a power supply or request a specific revision level, please select options from the appropriate additional options (1-3).

Contents


- [1 Connection Method](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)
- [3 Related Posts](#)

Connection Method

- **W**= 44 male pin to 1-Meter Wire Lead Cable



- **Q**= Quick Connect Plugs
- **S**= 44 male pin to Screw Terminals

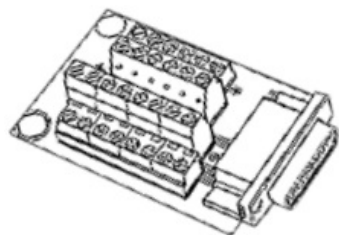

Revision Level : Contact factory for copy exact code activation information.

White Knight Fluid Handling, Inc. wkfluidhandling.com

Documents / Resources

	White Knight CPT-1 Cycle Rate Translators [pdf] Instruction Manual CPT-1 Cycle Rate Translators, CPT-1, Cycle Rate Translators, Rate Translators, Translators
---	--

References

-  [White Knight Fluid Handling | High Purity Chemical Solutions](#)
-  [White Knight Fluid Handling | High Purity Chemical Solutions](#)
- [User Manual](#)