



WHITE SHARK GP-2038 For PC X Input and D Input Android Gamepad User Manual

[Home](#) » [WHITE SHARK](#) » WHITE SHARK GP-2038 For PC X Input and D Input Android Gamepad User Manual 

Contents

 
- [1 WHITE SHARK GP-2038 For PC X Input and D Input Android Gamepad](#)
- [2 Key Instruction](#)
- [3 X-Input Mode](#)
- [4 Android Controller Mode](#)
- [5 Turbo & Adjustment](#)
- [6 Macro Function](#)
- [7 Specification](#)
- [8 Documents / Resources](#)



WHITE SHARK GP-2038 For PC X Input and D Input Android Gamepad




Key Instruction

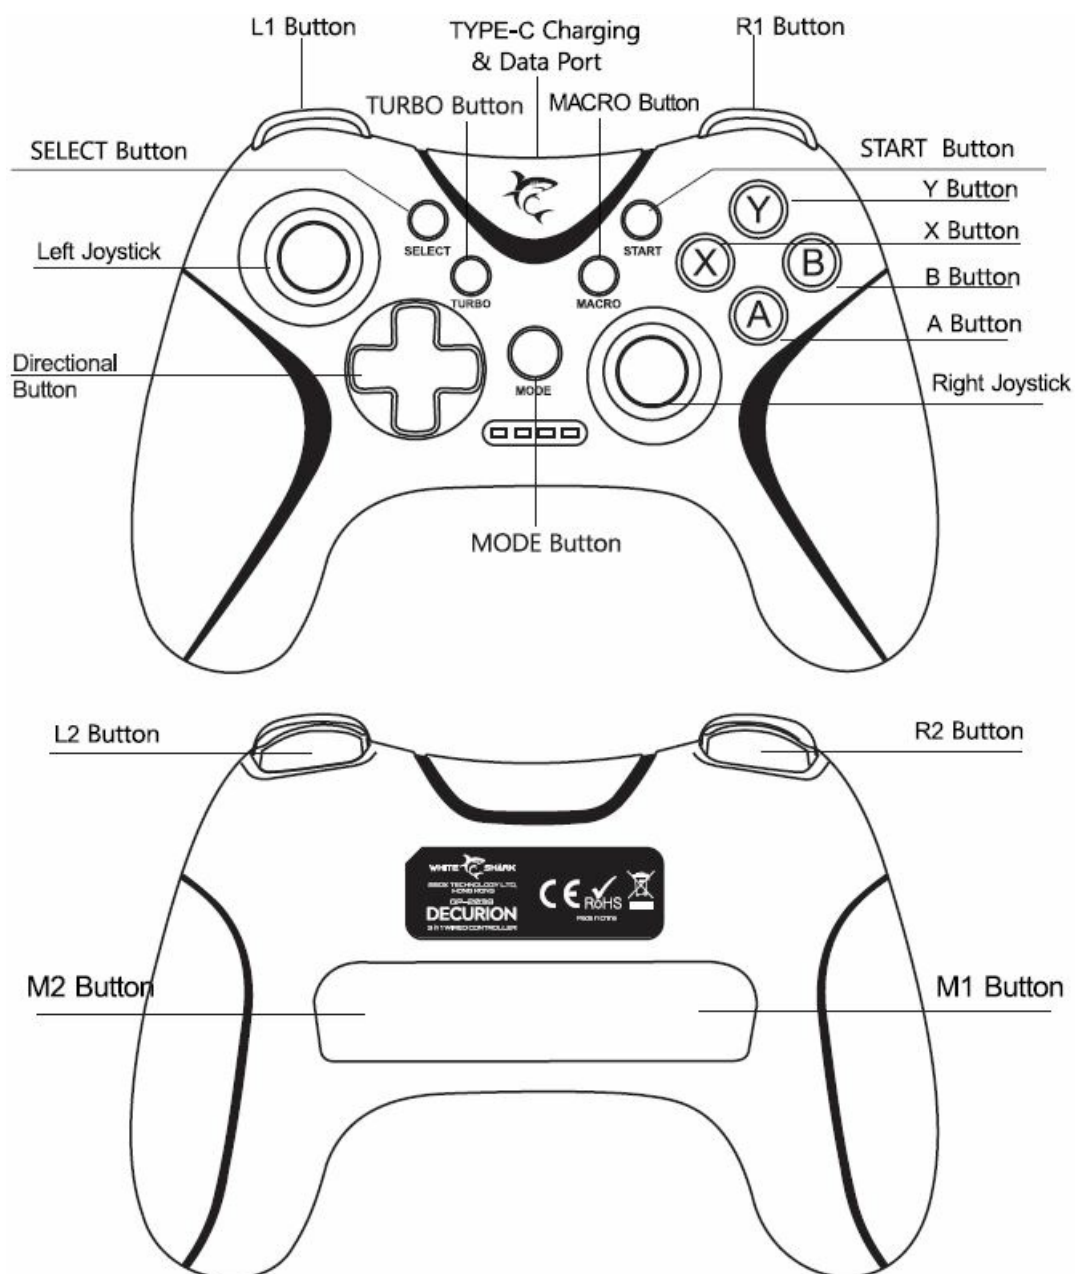

X-Input Mode


- Connect for Windows 7 / 8 / 10 / 11 system

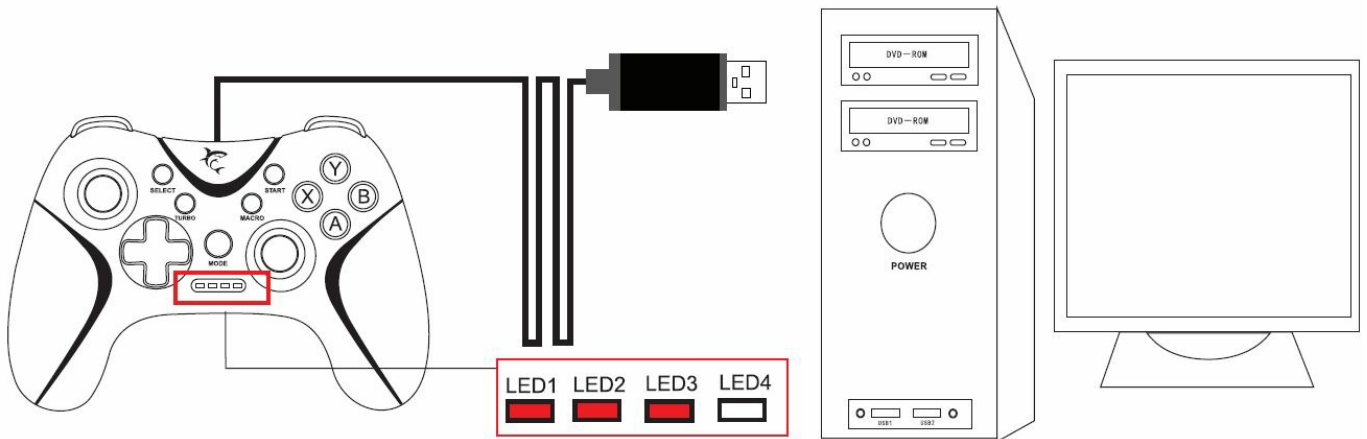


- Connect the gamepad to the PC computer, and the LEDs will flash fast, after the system recognizes the game controller, the controller connects to the computer successfully, and the LED will turn to LED1, LED2, and LED3 light long together with a short vibration.
- The default mode is X-Input mode.

D-Input Mode

- Long press the MODE button with 3-5S, and the game controller will switch to the D-
- Input ANALOG mode. The LED will turn to LED1+LED4.
- Press the MODE button shortly, the controller will switch to DIGITAL mode from
- ANALOG mode. The LED will turn to LED1 after being switched.

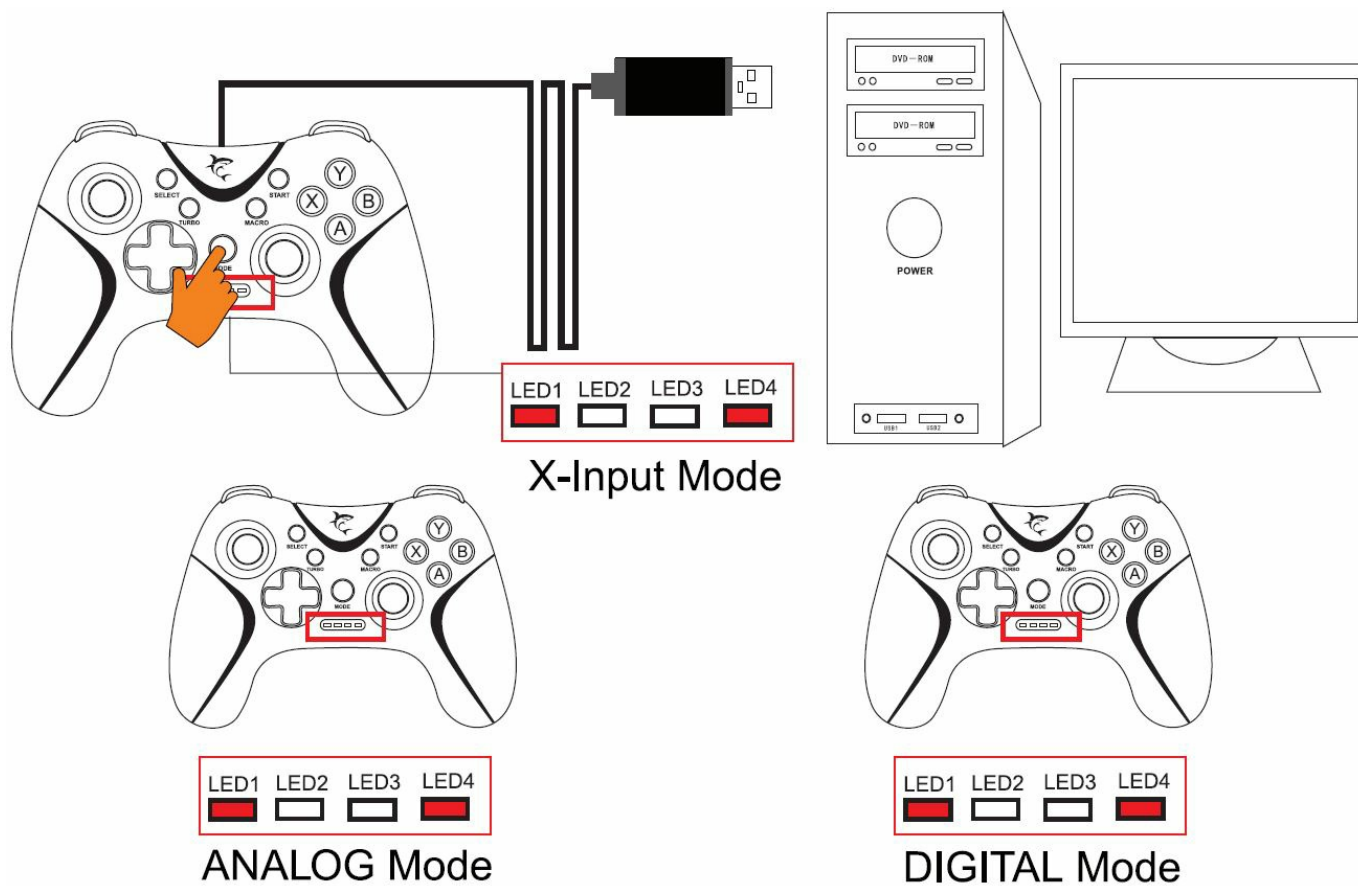


Android Controller Mode

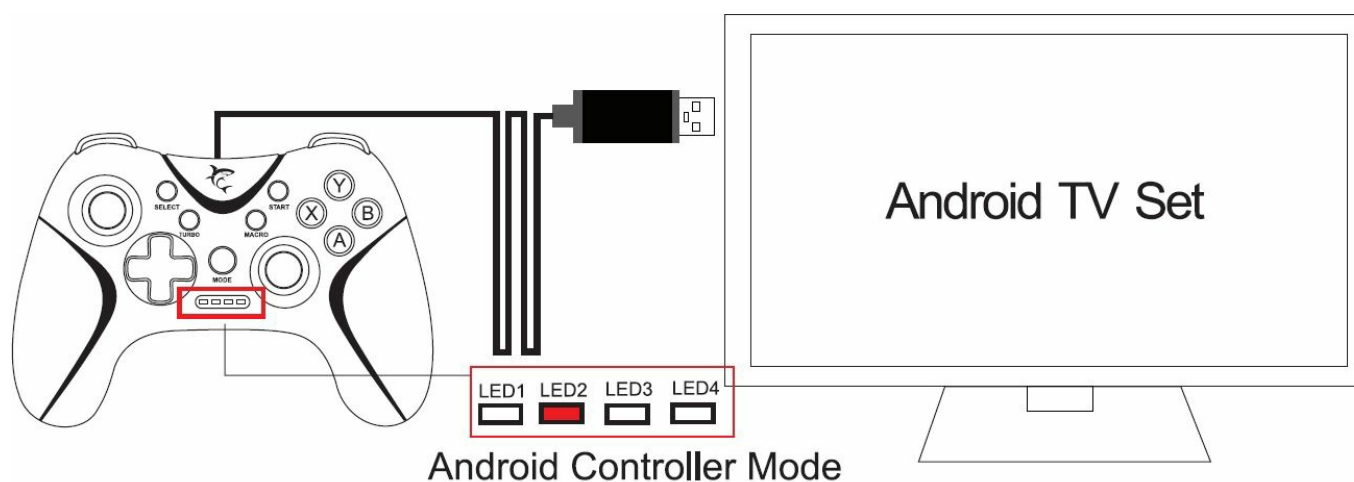

- Connect the gamepad to an Android TV set, or Android Media set, and the LEDs will flash fast, after the system recognizes the game controller, the LED will turn to LED2 light long.
- The game mode is Android controller mode.

Ps3 Controller Mode

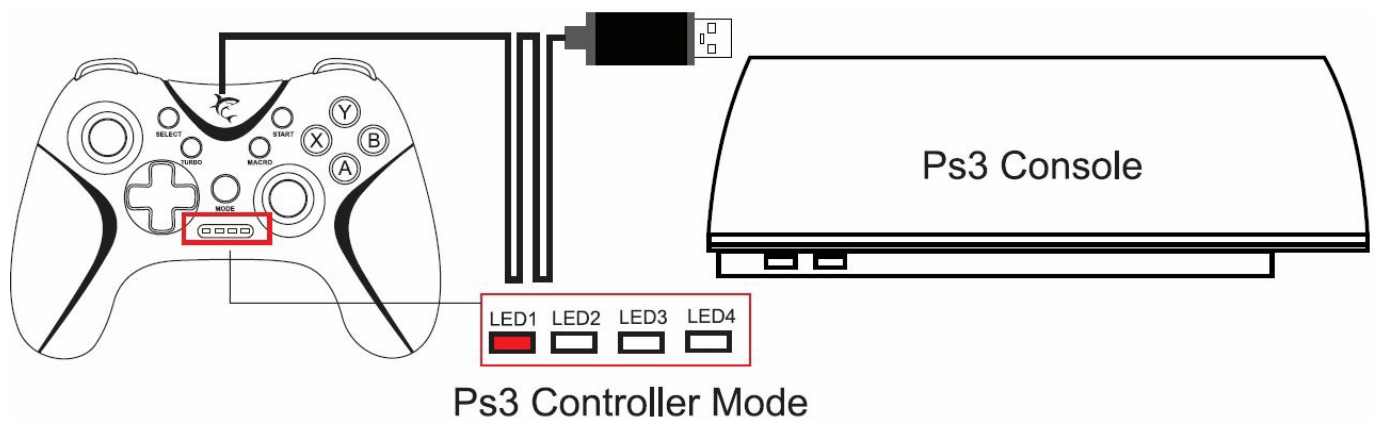

- Connect the gamepad to the PS3 gaming console, and the LEDs will flash fast, after the system recognizes the game controller, the LED will turn to LED1 light long. The game mode is ps3 controller mode.

Turbo & Adjustment

Buttons can be set to the TURBO function (which is called for short function buttons): A/B/X/Y/LZL/LZR/R button
Enable / Disable the TURBO function:

- **Step1:** Press the TURBO button with one of the function buttons simultaneously to enable the TURBO function;
- **Step 2:** Repeat the step to cancel the TURBO function.

Adjust TURBO speed:

- Press the TURBO button with a directional button simultaneously Up / Right / Down.
- Directional button Up is the faster TURBO speed;
- Directional button Right is the middle TURBO speed;
- Directional button-down is the slower TURBO speed;



Macro Function

Programmable Buttons

A/B/XY/L1/L2/R1/R2/up/down/left/right buttons

1. Enter the MACRO Mode

1st. In the connected state, press MACRO Button+M1 or M2 (on the backside of the controller) that needs to be programmed, to enter the programming mode, the LED will flash slowly to indicate the programming status;
 2nd. Press the function keys that need to be set in turn, the programming button will record the time interval of each button (for example Press Macro+ M1 to turn on the programming mode. Press the B button, wait for 1 second to press the A button, then wait for 3 seconds to press the X button. Lastly press the M1 key to save and exit after the setting is completed. At this time the function M1 key is B, 1 second later is A, and 3 seconds later is X), each programmable button can be set up to 16 buttons.



- **Clear MACRO function**

In the connected status, press MARCO Button+M1 or M2 (on the backside of the controller) that needs to be cleared. The LED will flash slowly, and then press the Back button again to clear the record;

- **Clear all MACRO functions**

Under connection status, press the MACRO Button long to wait for the LED1,2,3,4 to flash slowly, then dear all the programming records;

Specification

- **Product name:** Multifunctional gamepad
- **Model number:** STK – 2038X
- **Product size:** 152×115×58mm
- **Product weight:** 220g
- **Power supply:** Cable Connection to the console
- **Packing:** color box
- **Package Contents:** gamepad, instruction manual

NOTE

D-Input Vibration issue:


You should install the driver before gaming, run the “2038 Driver” in the folder to install the driver to your PC by following the instructions, and then your gamepad will support dualvibration on your PC. After installing the driver, connect the controller to your PC, after gamepad mode is switched to D-Input mode, run your favorite game and

start playing.

PC-BOX360 Games issue:

1. If your PC system is below Win 7, run the “Xbox360_32chs” in the folder “PC360 test and vibration driver” to install the driver to your PC by following the instructions, then your gamepad will support X-input mode accordingly. After installing the software, connect the joystick to your PC, and run your favorite Xbox 360 games to play.
 2. If your PC system is above Win 7, connect the joystick to your PC, shift to X-input mode, and run your favorite Xbox 360 games to play.
-

Documents / Resources

	WHITE SHARK GP-2038 For PC X Input and D Input Android Gamepad [pdf] User Manual GP-2038 For PC X Input and D Input Android Gamepad, GP-2038, For PC X Input and D Input Android Gamepad, Input Android Gamepad, Android Gamepad, Gamepad
---	---