



Whitecroft lighting Selene 2 Surface Modular Linear Luminaire for Surface Mounting Instruction Manual

[Home](#) » [Whitecroft lighting](#) » Whitecroft lighting Selene 2 Surface Modular Linear Luminaire for Surface Mounting Instruction Manual 

Whitecroft lighting Selene 2 Surface Modular Linear Luminaire for Surface Mounting Instruction Manual



Contents

[1 GENERAL SAFETY INFORMATION](#)

[2 Installation Instructions](#)

[3 Documents / Resources](#)

[4 Related Posts](#)

GENERAL SAFETY INFORMATION

1. A qualified electrician, in accordance with IEE wiring regulations should carry out connection to the mains wiring.
2. Ensure that the rated voltage and the frequency requirements are compatible with the available mains supply.
3. This luminaire must be earthed.
4. Observe ESD precautions during installation.
5. The Luminaire must be isolated before commencing any necessary maintenance work or emergency battery connection.
6. Do not carry out high voltage insulation test, i.e. 500/1000v this may damage internal components.
7. The light source within this luminaire shall only be replaced by the manufacturer, their agent or a suitably qualified person.
8. Batteries used in emergency versions of this luminaire range are replaceable by a qualified electrician only.
9. Dali control cables must be double insulated & have an equivalent insulation rating to the supply cable.
10. Ensure that the ceiling is of sufficient strength to support the luminaire weight. Fit secondary suspensions where necessary.
11. It is recommended that a minimum of two people undertake installation of luminaires.
12. Battery access for maintenance & replacement purposes is the reversal of steps 11,10,9,7 (Infills can remain in situ)



High Voltage LED's




Electrostatic Sensitive Device

Installation Instructions

1. Remove the luminaire from packaging and inspect the contents for damage.
2. Ensure that the supporting ceiling structure is of adequate strength to support the weight of the luminaire and mark recommended fixing centres & cable entry position:

Variant	Model	Height (mm)	Width (mm)	Length (mm)	Mounting Centres (mm)	Weight (kg)	
						Standard	Emergency
Standalone Luminaire	1200	68	210	1322	1180	6.6	7.1
	1500			1607	1465	7.7	8.2
	1800			1887	1745	8.8	9.3


LUMINAIRE DIMENSIONS & SPECIFICATION

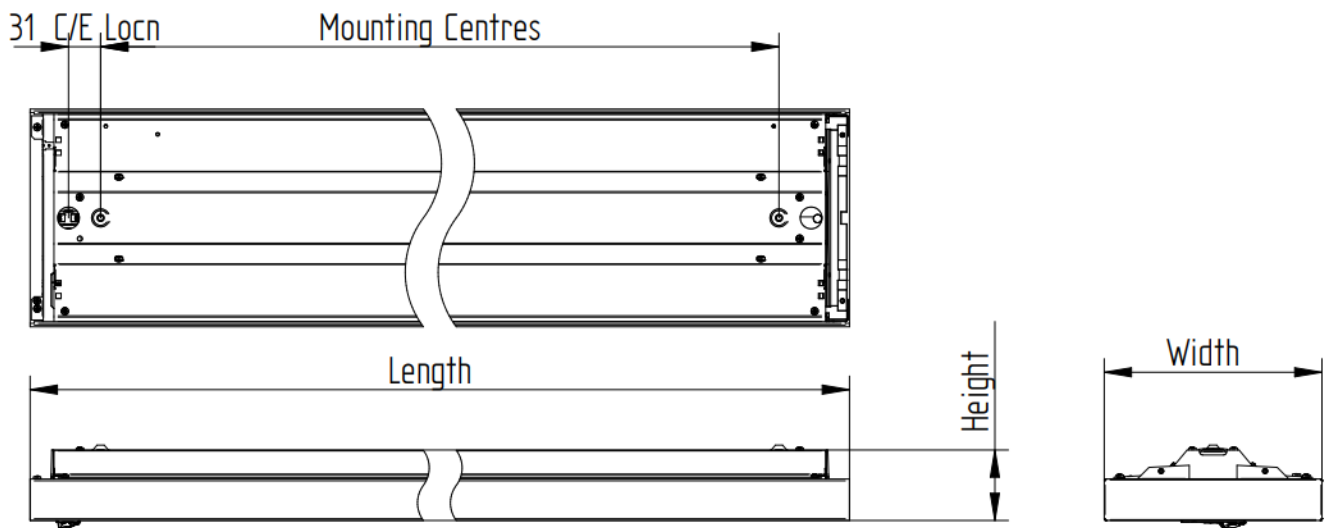

Specification – All variants


Finish	RAL9003 White, RAL9016 Silver
Materials	Steel body, polycarbonate endcaps, acrylic diffusers.
Supply	220-240v AC50-60Hz
Connection	Cable section: 3-6 core-0.5mm ² to 2.5mm ² (6mm strip length)
Operating Temp	0°C to + 25°C
IP Rating	IP44

IP44 WATER DRAINAGE PATH

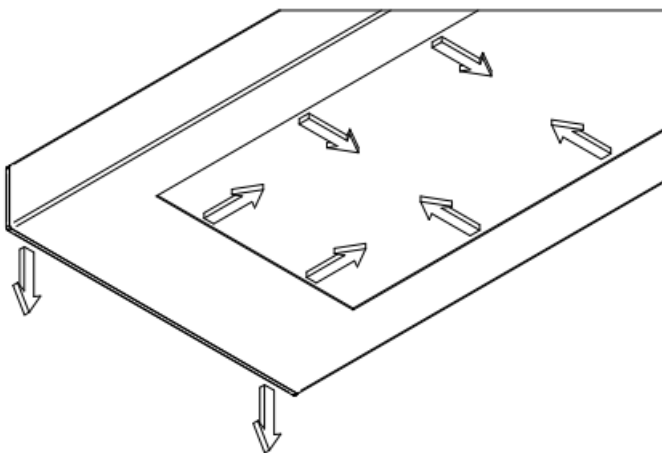


Drainage Path for any ingress of water via diffuser & endcap joint as indicated right.


- Remove the front diffuser optic assembly from the product by pushing up vertically & unhooking edges.
Disconnect the safety & earth cords & sensor connection plug where fitted & set assy aside.

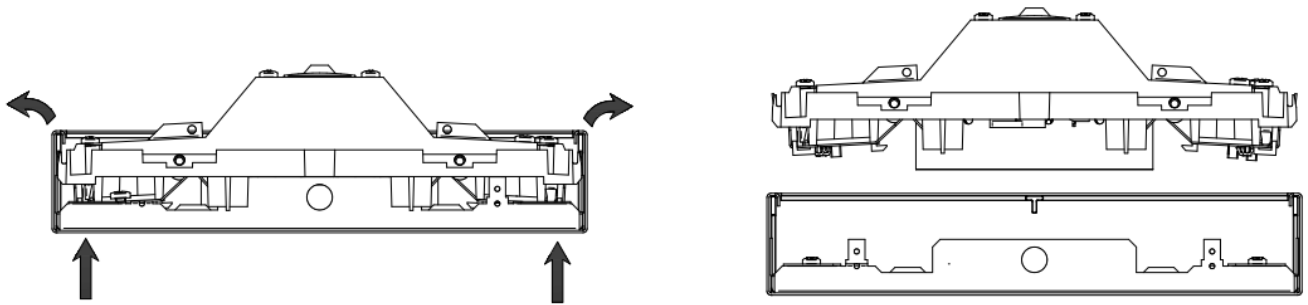


4. Remove geartray assembly by unhooking clips and allowing geartray to hinge & rotate to vertical position. Disconnect earth lead & remove geartray from back body. Set aside to prevent damage.

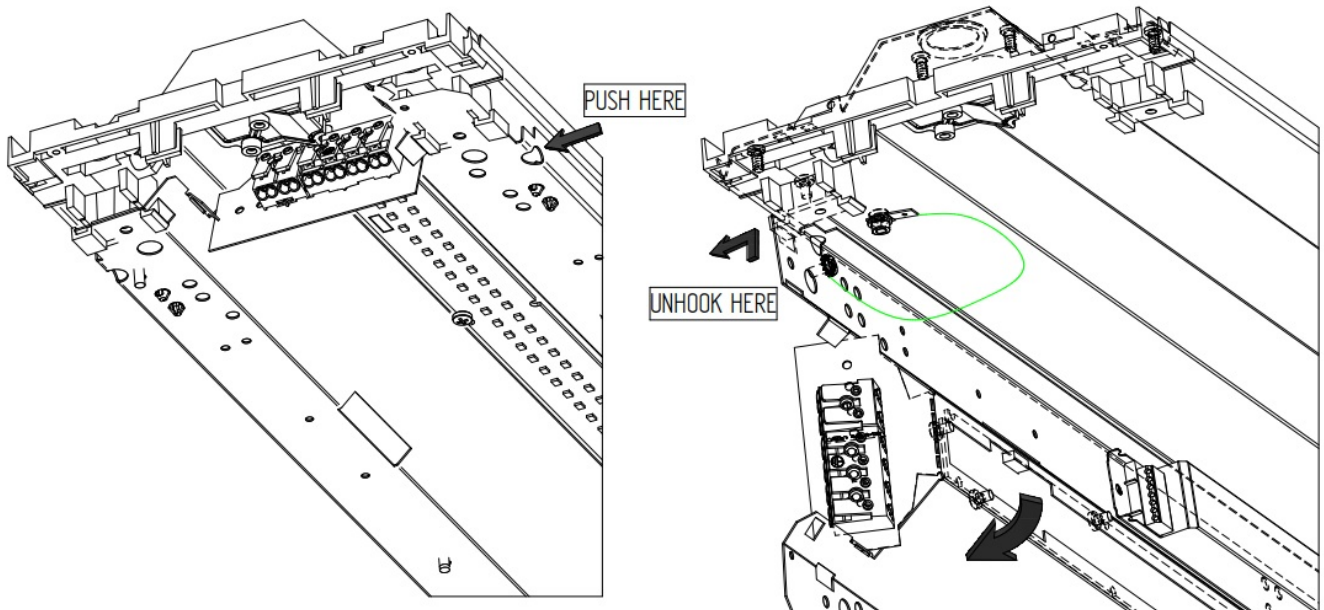


5. Pierce the grommet and feed cable into luminaire before securing to endcap using clamp & screws provided. Ensure that there is 150mm of stripped cable available after the clamp.
(See note re separate emergency Dali cable entry) 5b Fit the supplied sleeving over stripped cables between cable clamp & terminal blocks

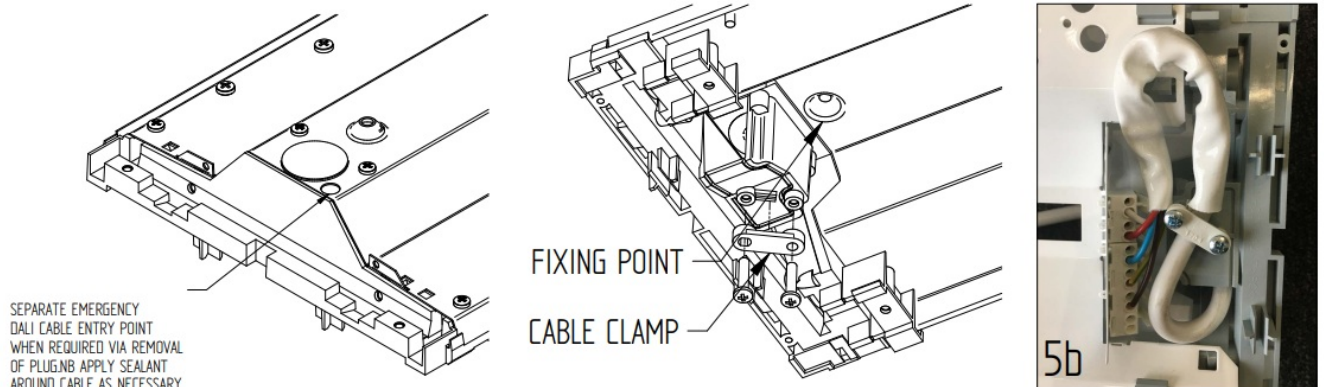


6. Screw the canopy to the ceiling using appropriate fixings (supplied by others) through the 5mm mounting holes at the centres indicated & prepare ceiling cable entry hole aperture
7. Re-hang geartray assembly onto the endcap clips at both ends & re-connect the earth lead.

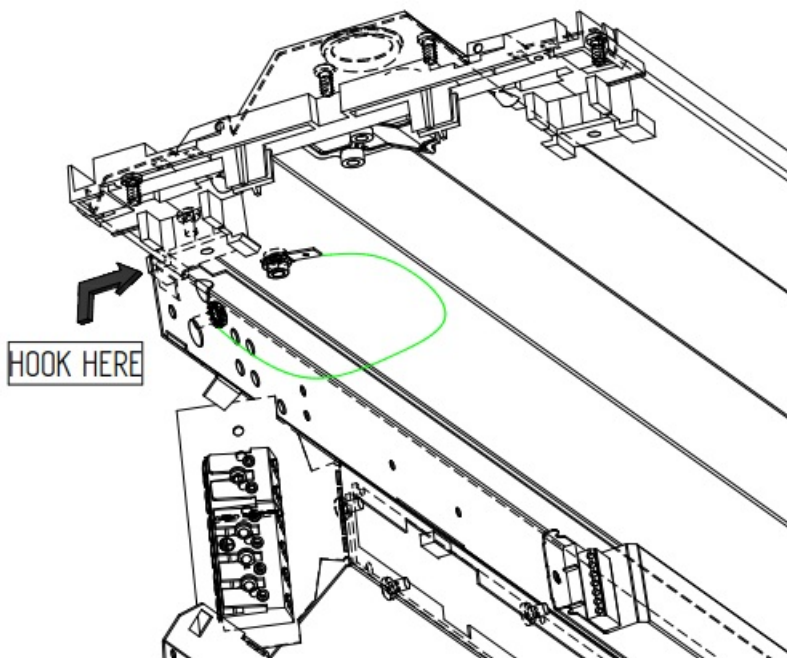


8. Wire mains / Dali cable into the Luminaire terminal blocks as per below (variant dependant)

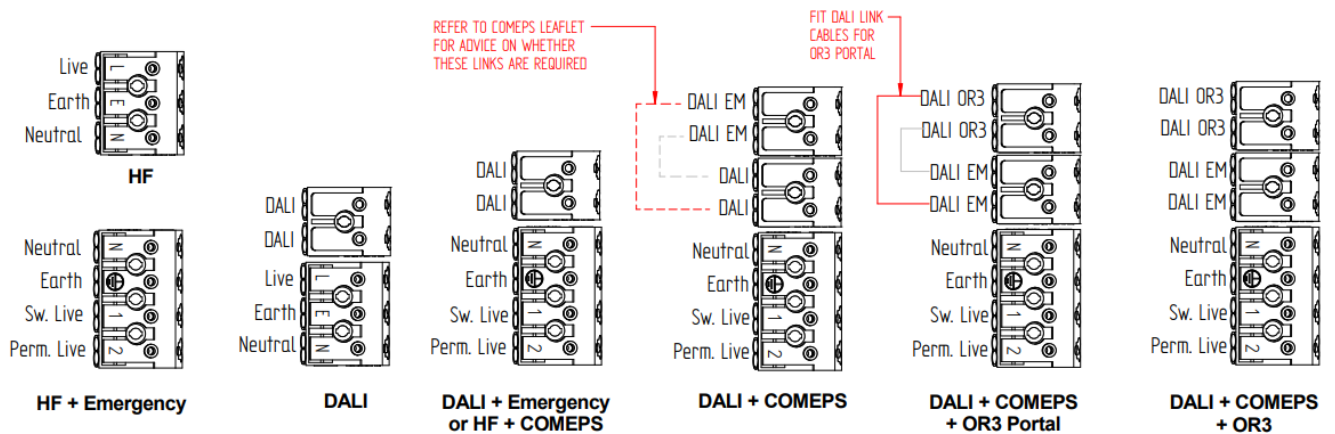


9. If emergency product connect battery plug & socket & note commissioning date.

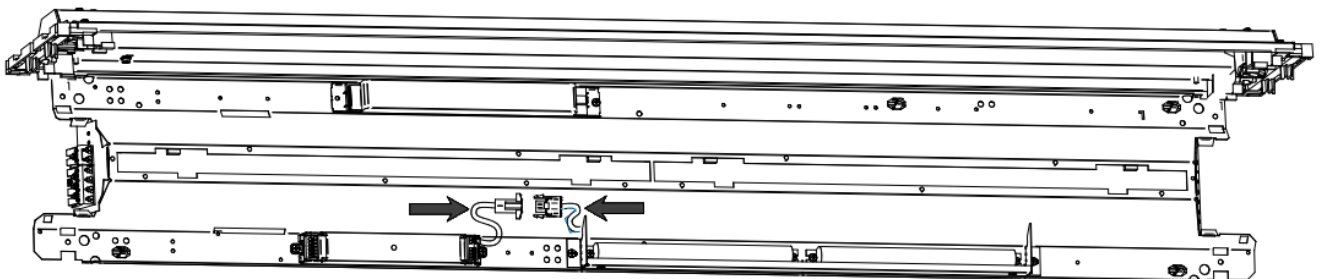


10. Refit gear tray to horizontal position ensuring Earth lead is connected & clips are fully engaged.

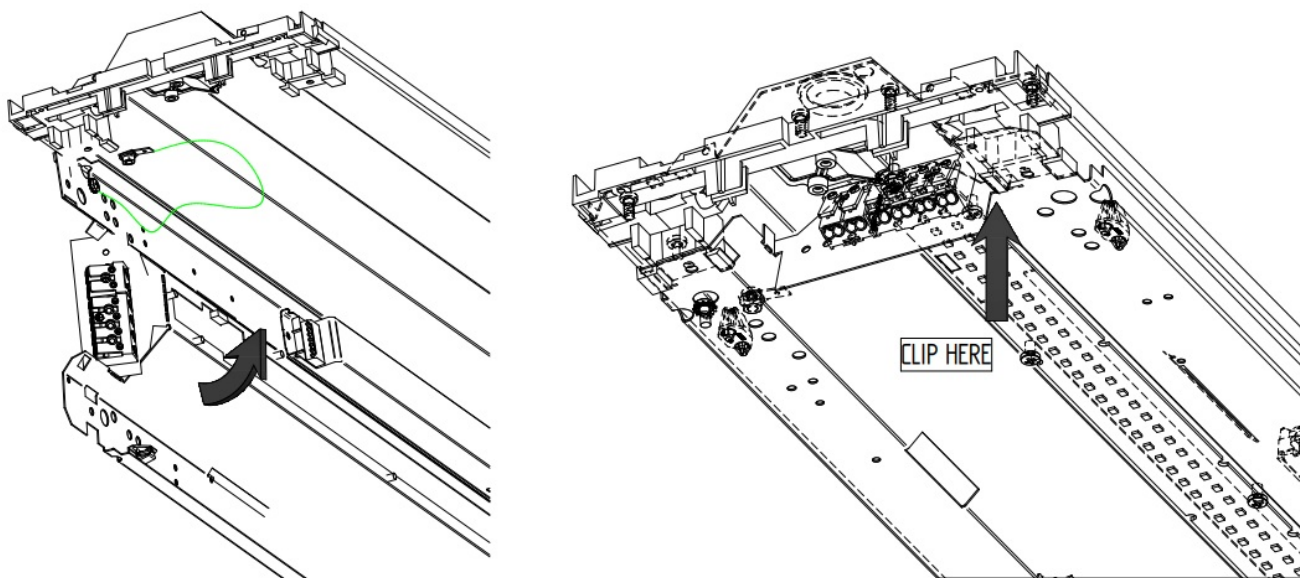

11. Re-attach earth & safety cords to the diffuser assembly & connect Sensor plug where fitted.
 12. Align the front diffuser assembly with the canopy & re-attach to canopy by pushing up from the front until hook on both sides are fully clipped over the canopy edge along the entire length .
- Nb Care should be taken to ensure that no cables are trapped during the fitting process.

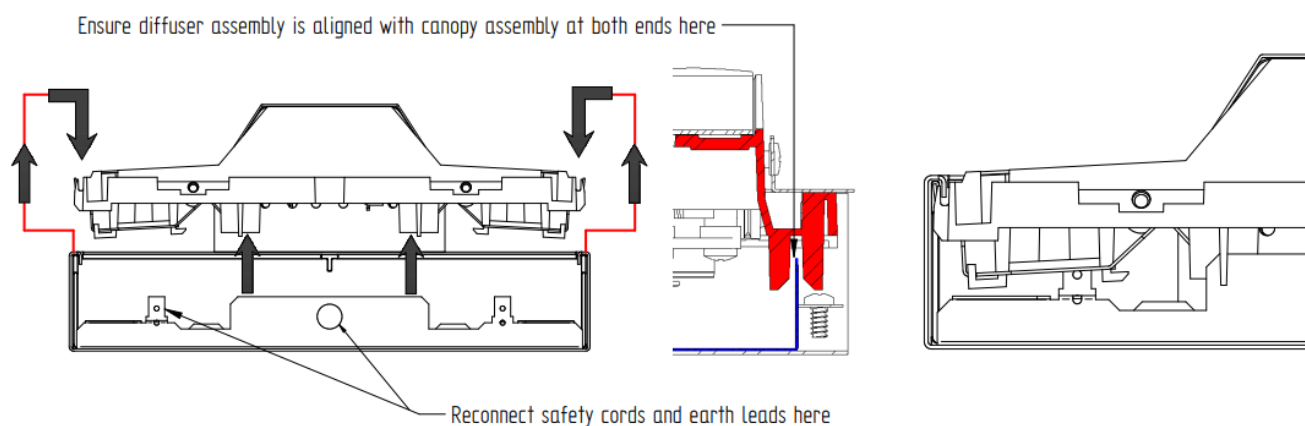

13. Fit locking plates at each end of luminaire with screws provided.

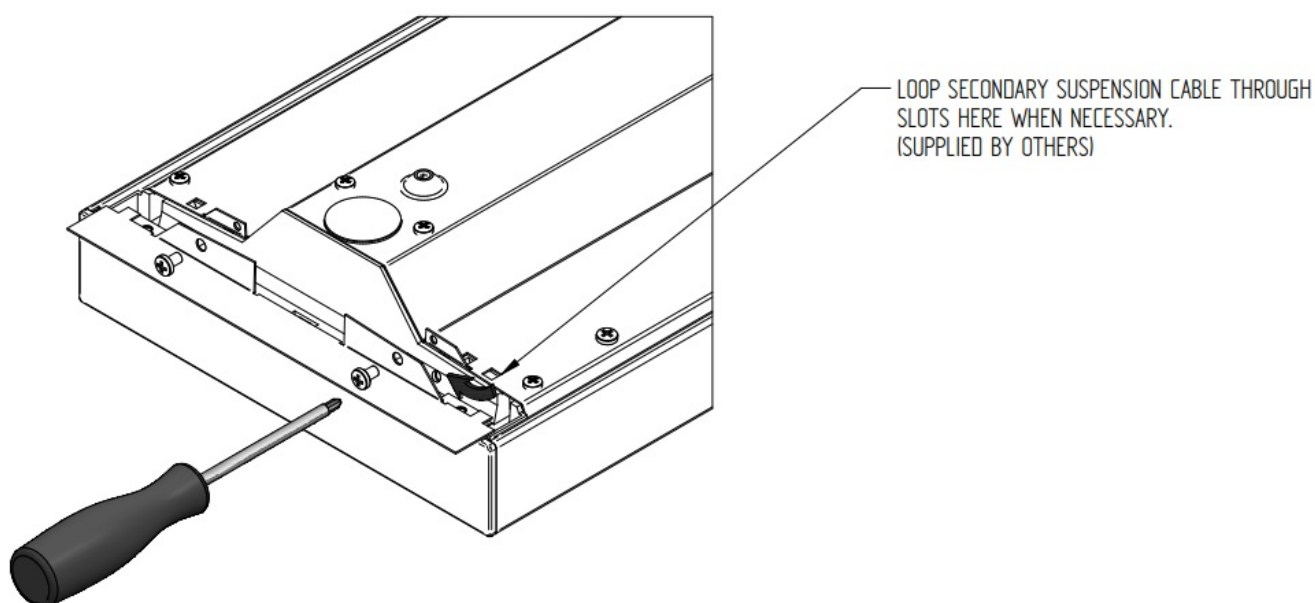

Whitecroft Lighting Limited

Burlington Street, Ashton-under-Lyne, Lancashire OL7 0AX
 Telephone: +44 (0)161 330 6811

Registered No: 3848973 England
Technical Support
Telephone: 0161 331 5700
Email: technical@whitecroftlight.com


UK
CA

CE



Burlington Street, Ashton-under-Lyne, Lancashire OL7 0AX
Telephone +44 (0)161 330 6811
Email: email@whitecroftlight.com
Registered No. 3848973
England Registered Office: As above

Documents / Resources

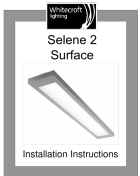 <p>The image shows the cover of the 'Selene 2 Surface' installation instructions. It features a photograph of the luminaire and the text 'Selene 2 Surface', 'Installation Instructions', and 'Whitecroft Lighting Limited'.</p>	<p>Whitecroft lighting Selene 2 Surface Modular Linear Luminaire for Surface Mounting [pdf] Instruction Manual Selene 2 Surface, Modular Linear Luminaire for Surface Mounting, Selene 2 Surface Modular Linear Luminaire for Surface Mounting</p>
--	--

Manuals+