



## Wicked Audio JEKYLL Wired Earbuds User Manual

[Home](#) » [WICKED AUDIO](#) » Wicked Audio JEKYLL Wired Earbuds User Manual 

### Contents

- [1 Wicked Audio JEKYLL Wired Earbuds User Manual](#)
- [2 SPECS](#)
- [3 FEATURES](#)
- [4 IN-LINE MIC](#)
- [5 REMOVING THE EARBUDS](#)
- [6 3 CUSHION SIZES FOR MAXIMUM COMFORT](#)
- [7 REPLACING THE CUSHIONS](#)
- [8 THE Y-SPLITTER](#)
- [9 PRECAUTIONS](#)
- [10 LIFETIME WARRANTY](#)
- [11 DOWNLOAD](#)
- [12 Related Posts](#)

Wicked Audio JEKYLL Wired Earbuds User Manual



## SPECS

- DRIVER/ BOBINA: 10 mm Neodymium
- SENSITIVITY/ SENIBILIDAD: 102 dB
- FREQUENCY/ FRECUENCIA: 20-20,000 Hz
- IMPEDANCE / IMPEDANCIA: 16 Ohms
- CORD LENGTH / LONGITUD DEL CABLE: 4 ft / 1.2 m

## FEATURES

- ANGLED HOUSING
- ENHANCED BASS
- HIGH FIDELITY
- FLAT CORD
- HANDS FREE
- MIC AND TRACK CONTROL
- 45° SMART PWG
- NOISE ISOLATION
- 3 CUSHION SIZES
- GOLD-PLATED PLUG



Enhanced Bass



High Fidelity



Flat Cord



Hands Free



45° Smart Plug



Noise Isolation



3 Cushion Sizes

## IN-LINE MIC

THE IN-LINE MIC HAS MAGICAL PROPERTIES



The in-line mic is great for hands-free communication but it also has some other great secret features that can be activated by pressing the button.


The recipes for magic are as follows:

<p>● = one press of the button</p> <p>⦿ = long press of the button (Hold for three seconds)</p>		
	<b>i O S</b>	<b>ANDROID</b>
●	Answer or End a call Play/Pause your music	Mute/Unmute mic in call Play/Pause your music
● ●	Go to next track	Go to next track
● ● ●	Previous track	N/A
⦿	Activate voice control	Answer or End a call Activate voice control

The in-line mic button may act differently on different Android devices.

## REMOVING THE EARBUDS

Gently twist the earbud from side to side as you slowly pull it out. Do not pull on the cord to remove the earbud. This can damage the earbud.

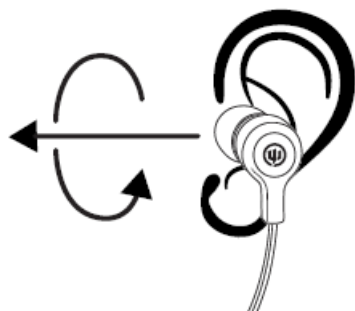

## 3 CUSHION SIZES FOR MAXIMUM COMFORT

For the best sound performance, outside noise cancellation, and the most comfortable fit, try out each ear cushion. Choose a cushion that easily fits into your ear, feels comfortable, and is easy to remove.




## REPLACING THE CUSHIONS

- 1) Simply pull on the cushion you wish to remove until it comes off
- 2) Select the cushion you wish to put on, then twist and ease it on.

## THE Y-SPLITTER

- 1) Remove the upper part of the Y-splitter by pulling it upwards.
- 2) Pull it up to the mic to help reduce tangles.

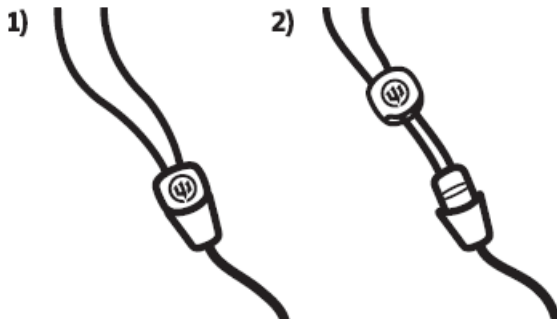

## PRECAUTIONS

**LISTENING TO AUDIO AT EXCESSIVE VOLUMES CAN CAUSE PERMANENT HEARING DAMAGE. USE AS LOW A VOLUME AS POSSIBLE.**

Over exposure to excessive sound levels can damage your ears resulting in permanent noise-induced hearing loss (NIHL). Please use the following guidelines established by the Occupational Safety Health Administration (OSHA) on maximum time exposure to sound pressure levels before hearing damage occurs.

## SAFE USE & HAZARD WARNINGS

90 dB SPL at 8 hours,	95 dB SPL at 4 hours	100 dB SPL at 2 hours	105 dB SPL at 1 hours
110 dB SPL at 30 min.	115 dB SPL at 15min. 120 dB SPL: Avoid as damage may occur		

## LIFETIME WARRANTY

Keep your receipt to obtain warranty service.  
Go to [www.wickedaudio.com](http://www.wickedaudio.com) for more details.



## LIFETIME WARRANTY

Keep your receipt to obtain warranty service.  
Go to [www.wickedaudio.com](http://www.wickedaudio.com) for more details.  
Developed in Utah, U.S.A.  
Made in China



**WICKED AUDIO, INC.**  
875 W 325 N  
Lindon, UT 84042  
[WICKEDAUDIO.COM](http://WICKEDAUDIO.COM)



---

## DOWNLOAD

Wicked Audio JEKYLL Wired Earbuds User Manual – [[Download PDF](#)]

---