



wiiyii G1 GPS Speed Meter Instruction Manual

[Home](#) » [WiiYii](#) » wiiyii G1 GPS Speed Meter Instruction Manual 

GPS Speed meter: G1

Warning: This product's working voltage is 5V, and it is forbidden to use a voltage higher than 5V for a power supply.

Contents


- 1 Display functions
- 2 Wave button function
- 3 Enter setting mode
- 4 Troubleshooting
- 5 Documents / Resources
- 6 Related Posts

Display functions



1. Satellite icon: After the satellite is found, the GPS light stops flashing and stays on for normal use.
2. Vehicle speed display
3. **Compass:** N (North) E (East) W (West) S (South)
4. Speed unit: KM/H (kilometers) MPH (miles)



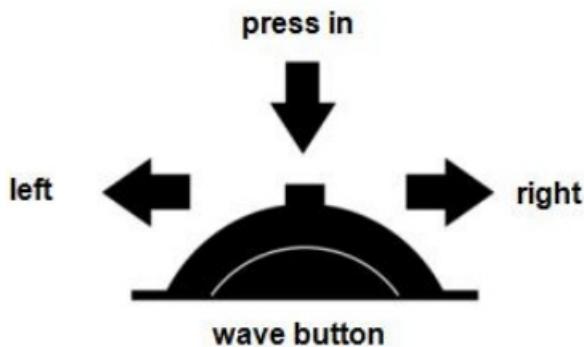









Wave button function



1. **Short press in:** confirm the option after entering the setting menu.
2. **long press in:** entering the setting, after adjusting, press vertically for 2 seconds to save and exit.
3. **Push left:** move options after entering the setting.
4. **Long push left:** push left for 2 seconds to turn off the buzzer alarm, do it again to turn it on.
5. Push right: switch between concise mode and standard mode, move option after entering the setting.

Enter setting mode

Long press in to enter into the setting mode, press right to choose the menu, and short press in to confirm. Once finishing the setting, long press into the exit.

menu	Function Parameters	Adjustment range	Explanation	Default value	Set parameter value interface
	speed	50-150	Adjust the parameter value when there is an error between HUD and dashboard. Ex: dashboard displays 100 KM/H, HUD displays 105 KM/H. Please adjust the parameter value to 102. (107-5)	107	
	Over speed alarm	30-250	When the vehicle speed reaches 150, HUD will give the alarm	150	
	Fatigue driving alarm	1.0-8.0	HUD will give a fatigue driving alarm each 4 hours	4.0	
	Brightness adjustment	0-11	0=automatic sensitivity adjustment 1-11=manual adjustment 1=darkest, 11=brightest 1411 is increasing	0	
	Speed unit	0-1	0=KM/H (kilometers) 1=MPH (miles)	0	
	Factory reset	0-1	default=0, 41, long press in for 3 seconds to save and exit	0	

Troubleshooting

1. The screen without any display, and no power

Check whether the USB cable is damaged, replace the USB cable for testing, and prohibit the use of voltage higher than 5V for the power supply

2. Without car Speed

After HUD power-on, the satellite icon flashes will start to find the satellite. Please drive the car to the road. It will work after it stops flashing

3. Inaccurate Speed

A. the First check whether the speed unit is correct or not, the speed unit includes KM/H and MPH, please refer to the setting to switch the unit.

b.The car manufacturers usually make the dashboard speed 5-7% higher than the ECU. The international standard is based on satellite data. (if the dashboard shows 100, and the device shows the 105, change the default value to 102)

4. Driving direction display error

After the vehicle speed exceeds 5KM / H, the direction can be displayed normally.

5. Speed is still displayed after the car stops

Under the underground parking lot, tunnel, and under the overpass, there will be unstable satellite drift when there is obstruction.

6. Turn off the buzzer

Push left for 2 seconds to turn off the buzzer, do it again to turn it on.

Selling point:

Applicable to all models, easy to install, plug and play

Function:

Functions: speed, compass, number of satellites, single mileage, speeding alarm, fatigue reminder in time, automatic light sensing, kilometer switching parameter:

Function: speed, mileage per trip, the direction of travel

Alarm: Speeding alarm, fatigue driving reminding alarm

Language selection: Chinese Simplified Chinese Traditional English

Display size: 2.1. Inch

Display: white light, green light

Weight: 158g

Product size: 61.7×63.8×47.1 mm

Remarks: Our speed display is GPS/Beidou display, so it can be used normally under the condition of a satellite link. Generally, it can't be displayed in the tunnel. Places with dense floors are also affected.

In the starting phase and acceleration phase, there will be an error of 1-2KM, which is very OK during normal driving


1X host

1XUSB line

1X Anti-slip mat

1X manual

Documents / Resources

	wiiyii G1 GPS Speed Meter [pdf] Instruction Manual G1, GPS Speed Meter, G1 GPS Speed Meter
---	---