



## willz WLTB60BKE08 High Speed Blender User Manual

[Home](#) » [willz](#) » willz WLTB60BKE08 High Speed Blender User Manual 

willz WLTB60BKE08 High Speed Blender User Manual



### Contents

- [1 IMPORTANT SAFEGUARDS](#)
- [2 WORKING HOURS](#)
- [3 PARTS ITEM](#)
- [4 BEFORE FIRST USE](#)
- [5 TECHNICAL INFORMATION](#)
- [6 SYMBOLS](#)
- [7 HOW TO USE YOUR APPLIANCE](#)
- [8 OPERATION](#)
- [9 CLEANING AND STORAGE](#)
- [10 PRODUCT WARRANTY](#)
- [11 WARRANTY REGISTRATION](#)
- [12 Documents / Resources](#)
  - [12.1 References](#)
- [13 Related Posts](#)

### IMPORTANT SAFEGUARDS

When using the Willz High Speed Blender, basic safety precautions should always be followed including the following:

1. Read all instructions before using the machine.
  2. Unplug from outlet when not in use or before cleaning/ maintaining.
  3. Always avoid contact with any moving parts.
  4. To protect yourself against risk of electrical shock, do not put cord, plug or main body in water or any other liquid.
  5. Do not operate the appliance if the cord or plug is damaged. Please refrain from usage if the appliance is dropped or damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or electrical mechanical adjustment.
  6. Close supervision is necessary when the appliance is used by or near children.
  7. This appliance is for indoor use only.
  8. Do not let the cord touch hot surfaces, including the stove.
  9. Do not place on or near a hot gas or electrical burner or in a heated oven.
  10. Always keep hands and utensils out of the feed opening to reduce risk of severe injury or damage to the unit.
  11. Always ensure that all parts are dry before storing in clean dry place.
  12. Never blend hot liquid ingredients in the unit.
  13. Always turn off the unit after each use.
  14. To disconnect from the outlet, grip the plug. Never pull the cord.
  15. After the appliance has been operated for 1 minute, switch it off until the motor has cooled down.
- WARNING:** There is a potential injury if the appliance is under misusing situation.
16. Never leave the appliance alone while on.
  17. To reduce risk of electrical shock, do not modify the plug.
  18. Switch off the appliance and disconnect from supply before changing accessories or handling parts that move in use.
  19. Care shall be taken when handling sharp blades, emptying the jar, and while cleaning.
  20. Do not operate the appliance without food in the jar for more than 10 seconds.
  21. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
  22. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
  23. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
  24. Children shall not play with the appliance.
  25. This appliance is intended to be used in a household.

**Warning:**


When the blender is in the state of idle operation, e.g. The blade fails to touch the foods, unplug the unit until the blades have stopped.

**THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY.**

**WORKING HOURS**

When using the blender, do not use for more than 40 seconds at a time. Wait at least 1 minute for blades to cool before using again.

## PARTS ITEM

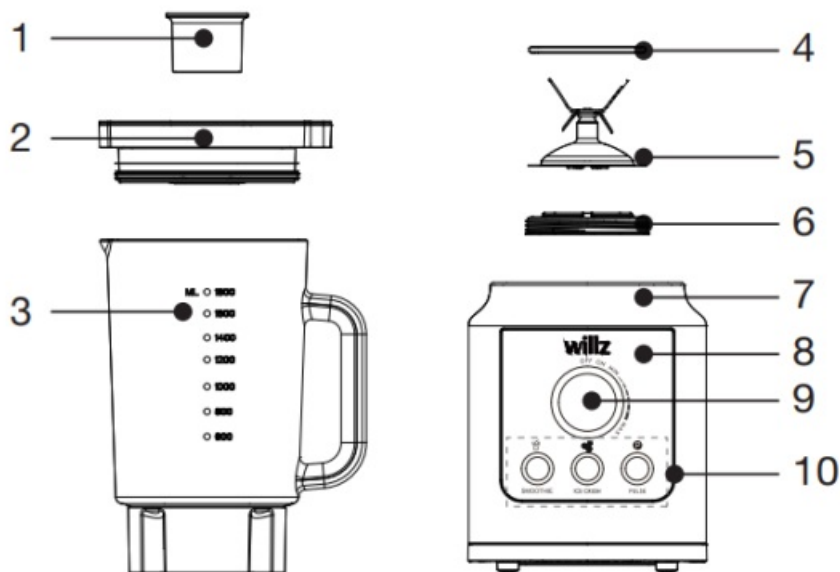

1. Measuring Cup
2. Jar Lid
3. Glass Jar
4. Sealing Ring
5. Blade
6. Mounting Cover
7. Main Body
8. Blue Light
9. Rotary Switch
10. Program Function

## BEFORE FIRST USE

1. Take the appliance out of the packaging and remove any stickers or accessories.
2. Clean all of the detachable parts then dry completely before using.

## TECHNICAL INFORMATION

- **Input Voltage** 120 V~
- **Power** 800 W
- **Capacity:** 1800 ML

## SYMBOLS

- **Rotary Switch**

ON/OFF The On/Off switch control power to the machine.

Min/ Max A variable speed dial which gives you manual control from slowest to highest.

- **Program Function** Only can work when the Rotary Switch point to Symbol-ON. The blender will stop at the end of the program automatically.



Smoothie



Ice Crush



Pulse

## HOW TO USE YOUR APPLIANCE

1. Clean the jar, jar lid, and measuring cup before using.

**Attention:** The blade base and sealing ring can be detached by turning the mounting cover before cleaning.

2. Make sure the unit is turned off and not connected to power supply before installation. Please install the unit as the following step.

### STEP 1:

Mount the sealing ring, blade base, and mounting cover into jar base as shown in Picture 1. Turn mounting cover until locked.

### STEP 2:

Place the glass jar onto the main body as shown in Picture 2. Next, add foods that you would like to blend into the glass jar.


**CAUTION:** Food cannot exceed the maximum capacity of 1800ml as indicated on the jar. Do not use blender with out any liquid.

### STEP 3:

Place the jar lid onto the glass jar as shown in Picture 3


3. After finishing Step 3, plug the blender into the power supply. **CAUTION: DO NOT USE THE UNIT WITHOUT ANY LIQUID INSIDE THE GLASS JAR.**
4. Plug the appliance into the power supply, and switch to Symbol ON. The blue light will then turn on, and the blender is ready to use.
5. This unit has a safety design. It does not work if the glass jar is not installed on main body properly.

**The illustration of installation is following:**

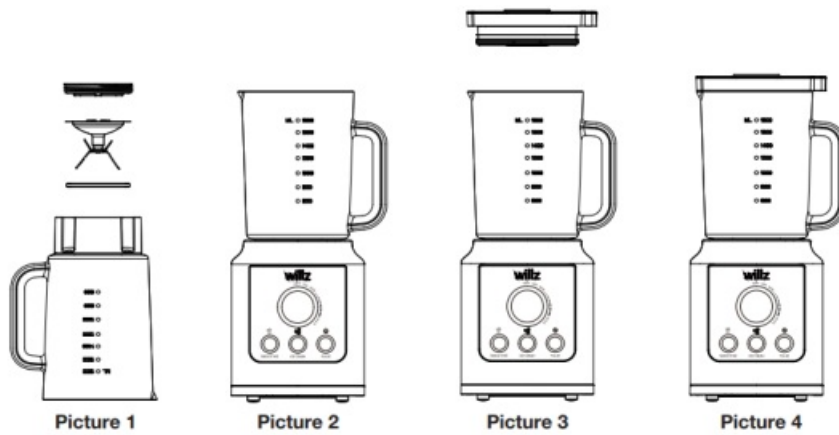

## OPERATION

1. The blender is used to blend food including fruits, vegetables, ice cubes etc. Before blending, you must cut the food into small slices. If needed, please peel, skin, or remove the pit from the fruit or vegetable. If you want to blend carrots, you should add water into the glass jar at the same time.
2. Before using the blender, you must clean the glass jar with water as follows:
  - a) Turn the Rotary Switch to Symbol-OFF in order to make sure the unit is turned off.
  - b) Remove the lid and measuring cup.
  - c) Fill 800ML water into the glass jar and turn on the appliance. Blend for about 10-20 seconds and then turn off.
3. Blend other foods as follows:
  - a) Turn the Rotary Switch to Symbol-OFF in order to make sure the unit is turned off.
  - b) Put the small pieces of food into the glass jar, then add some water properly but not higher than the maximum level. Then close the lid and measuring cup. Please note there is a micro-switch with the blender, the blender cannot work until the glass jar is installed onto main body properly.
  - c) Turning the Rotary Switch to required speed position
4. If you want to crush ice cubes, place appropriate amount into glass jar and use Program
 


: Ice Crushing

## CAUTION:

1. An over-filled glass jar can prevent the blender from operating properly. If this happens, please turn off the unit, unplug, and remove some of the food.
2. Do not use for more than 40 seconds at a time.
3. Please do not use the blender when the glass jar is empty.

## CLEANING AND STORAGE

- Before cleaning, turn off and unplug the appliance.
- Do not submerge the main body, power cord or plug into water.
- Clean the main body, power cord and plug with a soft wet cloth and a mild cleaning solution.
- Fill the glass jar half-full with warm water and a little cleaning solution. Turn the unit on until the glass jar is clean.

- To remove the sealing ring and blade base, unplug and turn off the appliance and take out the blade base and the sealing ring.
- The glass jar, lid, blade base, blade, and sealing ring call all be cleaned with warm water and a gentle cleaning solution. Dry well before reusing.

**Caution:** The blades are very sharp. Please use precaution when handling.

- Use light or gentle cleaning agents.

## **WARNING**

1. The appliance is suitable for household use.
2. Do not touch the sharp blades. When cleaning, wipe with soft cloth to avoid injury.

## **PRODUCT WARRANTY**

This warranty applies to products sold by Galanz Americas in the U.S. This warranty is in lieu of any other warranty and expressly applies to the individual product only.

Galanz product is warranted for one year following purchase for defects in material and workmanship. Please save your receipt as proof of purchase is required to make a warranty claim. During this period, we will provide the purchase price of this product, a replacement or the equivalent, or repair per our discretion.

The warranty cannot be transferred through resale, including the resale through a 3rd party unauthorized retailer and is only bestowed upon the original consumer purchaser upon purchase from an authorized retailer

**This warranty does not cover and excludes damage or defects caused by:**

- Consumer misuse
- Abuse
- Neglect including the failure to clean and/or provide adequate regular maintenance as outlined in the user manual
- Commercial use
- Subjecting the product to any voltage outside the specified range
- Loss of parts
- The affixing of any attachments not provided with the product
- Use in a manner not intended and outlined in the user manual

Any subsequent damages caused by the above listed exclusions will not be covered and any claims determined to meet the above exclusions will be denied. All liability is limited to the purchase price and does not include any:

- Retail offered extended warranties
- Tax
- Other charges(including postage to send required materials) Incidental and/or consequential damages associated with the product in question

Every implied warranty, including any statutory warranty of merchantability or fitness for a particular purpose is disclaimed except to the extent prohibited by law, in which case such warranty is limited to the duration of this

written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states do not allow limitations on implied warranties or special, incidental, or consequential damages, so the above limitations may not apply to you.

If you have a claim under this warranty, please call our Customer Service number: 1-800-562-0738.

For faster service, please have the model number, serial number, and receipt ready for the operator to assist you.

## WARRANTY REGISTRATION

Please mail this warranty card to the address below within 30 days of purchase. Or you can register your product on line by going to <https://willzappliances.com/>. Galanz Americas, 55 Challenger Road, Suite 503, Ridgefield Park, NJ 07660.


### PLEASE PRINT CLEARLY.

Name  
Address  
City  
State  
ZIP  
Phone  
Email  
Model Number  
Serial Number  
Purchase Location

**You must attach a copy of your purchase receipt to validate your registration.**

Distributed by Galanz Americas Co., Ltd.  
All Rights Reserved. Willz Is a Registered Trademark of Galanz  
55 Challenger Rd. Ridgefield Park NJ 07660  
**Customer Service Call:** 1-800-562-0738

## Documents / Resources

	<a href="#">willz WLTB60BKE08 High Speed Blender</a> [pdf] User Manual WLTB60BKE08, High Speed Blender
---	---

## References

- [willz Willz Appliances](#)