



Wilson MTR4 Mini Time Recorder Instructions

[Home](#) » [Wilson](#) » Wilson MTR4 Mini Time Recorder Instructions 

Wilson MTR4 Mini Time Recorder



Contents

- 1 WILSON
MINIRECORDERVERSION4
- 2 Documents / Resources
- 2.1 References

WILSON MINIRECORDERVERSION4

Congratulations on purchasing The Wilson Mini Recorder, a state-of-the-art digital voice recorder. The following are instructions for its use:

Description of controls

Hold the Wilson Mini Recorder so that the key ring is located at the upper right corner. There are five buttons located on the front surface of the Wilson Mini

Recorder arranged In two rows.

- (A) The left button on the top row is the Volume button.
- (B) The right button on the top row is the Check Message (CM) button.
- (C) The left button on the bottom row is the Record button.
- (D) The middle button on the bottom row is the PLAY/STOP button.
- (E) The right button on the bottom row is the Delete button.

On the right edge of the Wilson Mini Recorder is the charging cable connector. Below the charging cable connectors the ON/OFF switch. Slide the ON/OFF switch up for ON and slide the ON/OFF switch Down for OFF.

The Wilson Mini Recorder does not consume battery power while it is idle; however, you may wish to switch off the Wilson Mini Recorder to prevent accidental recording or playback.

Recording:

To record, press the Record button (REC). After a beep, speak in the direction of The Wilson. A LED light will flash, indicating that The Wilson is recording. To stop recording, press the Play/Stop button. The Wilson will beep twice, indicating that the recording has stopped. Alternatively, The Wilson will automatically delete the oldest message when the memory is full.

TO PAUSE THE RECORDING: Simply press the record(REC) button again; the LED light will stop blinking, indicating that the recording has been paused. To resume recording, press the button again; the LED will begin flashing again, indicating that the recording has resumed. You can record messages of total length/recording time of up to 6 hours.

Check messages (CMKey)

Press the CM key, located on the side of the unit, and it will announce how many messages are stored on The Wilson.

Play Back: to play back your message, simply press the Play/Stop button.

To stop playing message, press the Play/Stop button while playing. Once a message has been played in its entirety, The Wilson will beep once and the LED light will blink once. If more than one message has been recorded, The Wilson will playback the most recently recorded message first. Each time the Play/Stop button is pressed thereafter, The Wilson will play all recorded messages, oldest to newest.

To Pause the Play Back: Simply press the Play/Stop button again; the LED light will stop blinking, indicating that the message has been paused. To resume playback, press the button again; the LED will begin flashing again, indicating that the message has been resumed.

Play Selected Messages:

Press and hold the CM button to hear the message count forwards “one, two, three...etc.” Release the CM button when you have reached the number of the message you want to play back.

Playback wards Selected Messages:

Press and hold the VOL button to hear message count backwards “four, three, two.....” etc. Release the VOL button when you have reached the message you want to play back.

Deleting Messages:

To delete a message, press the Delete button(DEL) twice in quick succession while playing the message you wish to delete. The Wilson will beep twice to indicate the message is deleted

Delete All Messages:

To delete all messages, press and hold the Delete (DEL) button until a voice asks you: "Delete All?" Press the delete (DEL) button again to confirm you are deleting all messages. The Wilson will then delete all the messages.

Volume Control: (Digital Volume Control) Push the VOL button until desired volume is set.

Important Note: If the recorder is not working for 5 minutes, switch the power OFF.

Documents / Resources

[illegible]

References

- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.