



## WILTRONICS GT4282 Wireless Retro Arcade Game Console User Manual

[Home](#) » [WILTRONICS](#) » WILTRONICS GT4282 Wireless Retro Arcade Game Console User Manual 



**2 CONTROLLER  
WIRELESS RETRO ARCADE**

# GAME CONSOLE WITH 638 GAMES USER MANUAL


## Contents

- [1 Box Contents](#)
- [2 Product Diagram](#)
- [3 Operation](#)
- [4 Functions](#)
- [5 Troubleshooting](#)
- [6 Safety](#)
- [7 Specifications](#)
- [8 Documents / Resources](#)
  - [8.1 References](#)
- [9 Related Posts](#)

## Box Contents

- 1 x Wireless HDMI Dongle
- 2 x Wireless Controllers
- 1 x USB Power Cable

## Product Diagram

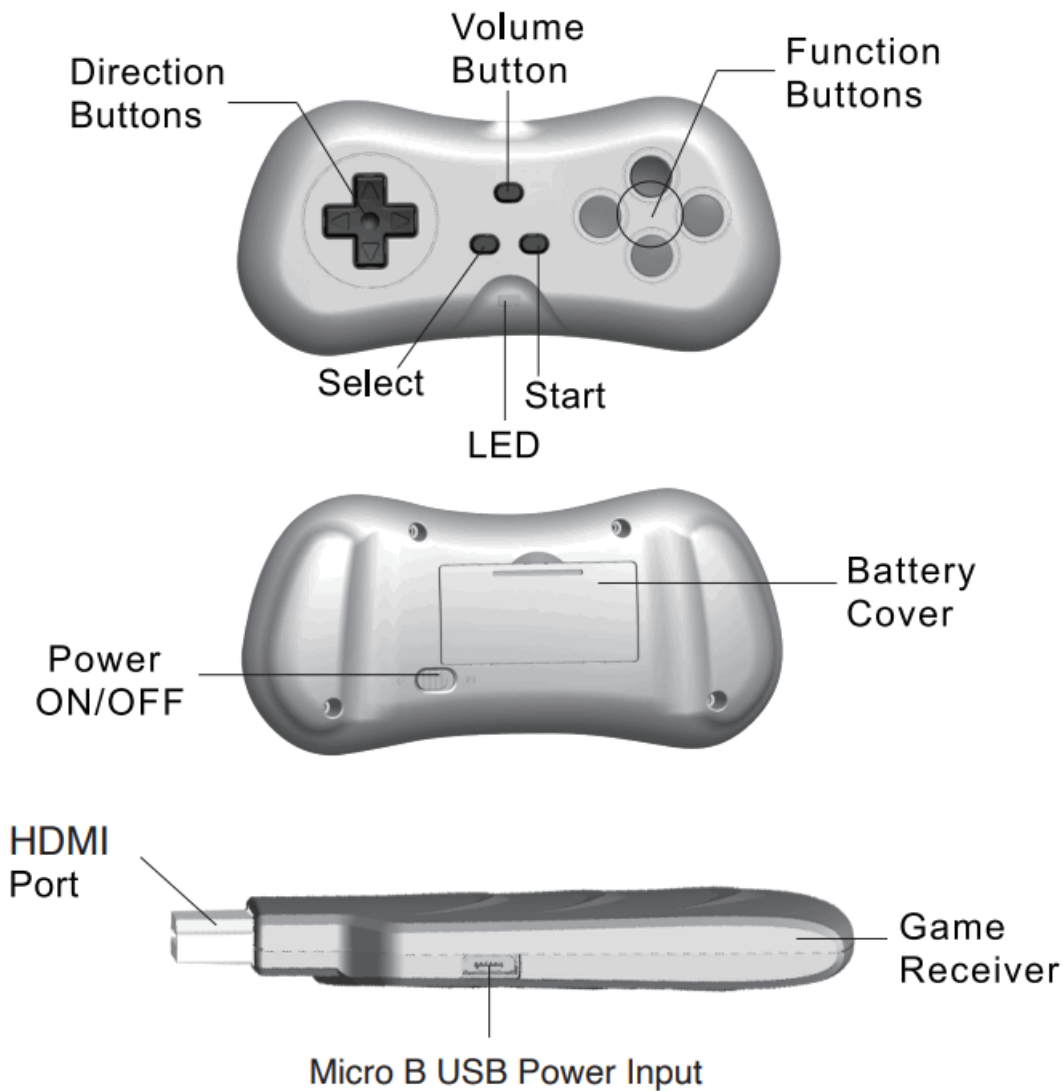

## Operation

1. Plug the wireless HDMI dongle in to the HDMI port of your TV or monitor.
2. Plug the USB micro B plug of the power cable to the power socket of the wireless HDMI dongle.
3. Plug the opposite end of the USB power cable to the USB port of your TV or a USB mains power adaptor (Not Included).
4. The LED indicator of the wireless HDMI dongle will light up once powered.
5. Remove the battery cover from the wireless controller and install 2 x AAA(Not Included) batteries using the correct polarity.
6. Place the battery cover back over the wireless controller and press the power switch to On, repeat steps 5-6 for the second wireless controller.

## Functions

**Page Up:** Press the right direction button to go to the next page of games.

**Page Down:** Press the left direction button to go to the previous page of games.

**Return Home:** Press and hold the START & SELECT buttons for up to 2 seconds.

**Standby Mode:** The unit will automatically enter standby mode after 7 minutes of no use, press the START button to reconnect the device.

## Troubleshooting

### **The game console won't start.**

– Check to see that the wireless HDMI dongle is powered correctly, it requires a 5VDC, 500mA USB port so your TV may not support this. Try a USB mains power adaptor of at least 500mA charging.

### **The game console is frozen.**

- The controller battery is too low; check and replace the batteries in the controllers.
- Disconnect and reconnect the USB power cable of the wireless HDMI dongle to restart the device.

## **Safety**

1. Do not open the case of the wireless HDMI dongle or controllers to avoid damage and injury.
2. Keep the wireless HDMI dongle or controllers away from high temperatures as it may cause damage to the battery.
3. Do not expose the wireless HDMI dongle or controllers to water, moisture or liquids to prevent the unit from damage.

## **Specifications**

Frequency: 2.4GHz

Resolution: Up to 1080i

Play Time: Up to 6 Hours

Battery: 2 x AAA Each Controller (Not Included)

Power: 5VDC, 500mA (Micro B USB)

Dimensions:

88(L) x 34(W) x 10(D)mm (Wireless Dongle)

143(L) x 68(W) x 28(D)mm (Controller)

Distributed by:

Electus Distribution Pty Ltd

46 Eastern Creek Dr,

Eastern Creek NSW 2766 Australia


Ph 1300 738 555

Int'l +61 2 8832 3200

Fax 1300 738 500

[www.electusdistribution.com.au](http://www.electusdistribution.com.au)

## **Documents / Resources**

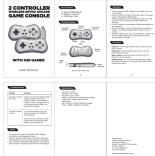	<p><a href="#">WILTRONICS GT4282 Wireless Retro Arcade Game Console</a> [pdf] User Manual GT4282 Wireless Retro Arcade Game Console, GT4282, Wireless Retro Arcade Game Console, Retro Arcade Game Console, Arcade Game Console, Game Console, Console</p>
---	--

## **References**

- [E Electus Distribution - Home](#)