

WiMiUS K8 WiFi Projector User Manual

[Home](#) » [Wimius](#) » WiMiUS K8 WiFi Projector User Manual 

 
WiMiUS

K8 WiFi Projector User Manual

Contents

- 1 K8 WiFi Projector
- 2 WiMiUS 7/24 Professional Support
- 3 PACKAGE LIST
- 4 PROJECTOR SPECIFICATIONS
- 5 INSTALLATION
- 6 STARTING PROJECTOR
- 7 IMAGE ADJUSTMENT
- 8 SETTING UP THE PROJECTOR
- 9 Projector Image Setting
- 10 Other Setting
- 11 OTHER SETTINGS
- 12 SAFE SHUTDOWN
- 13 TROUBLESHOOTING
- 14 Documents / Resources
 - 14.1 References

K8 WiFi Projector

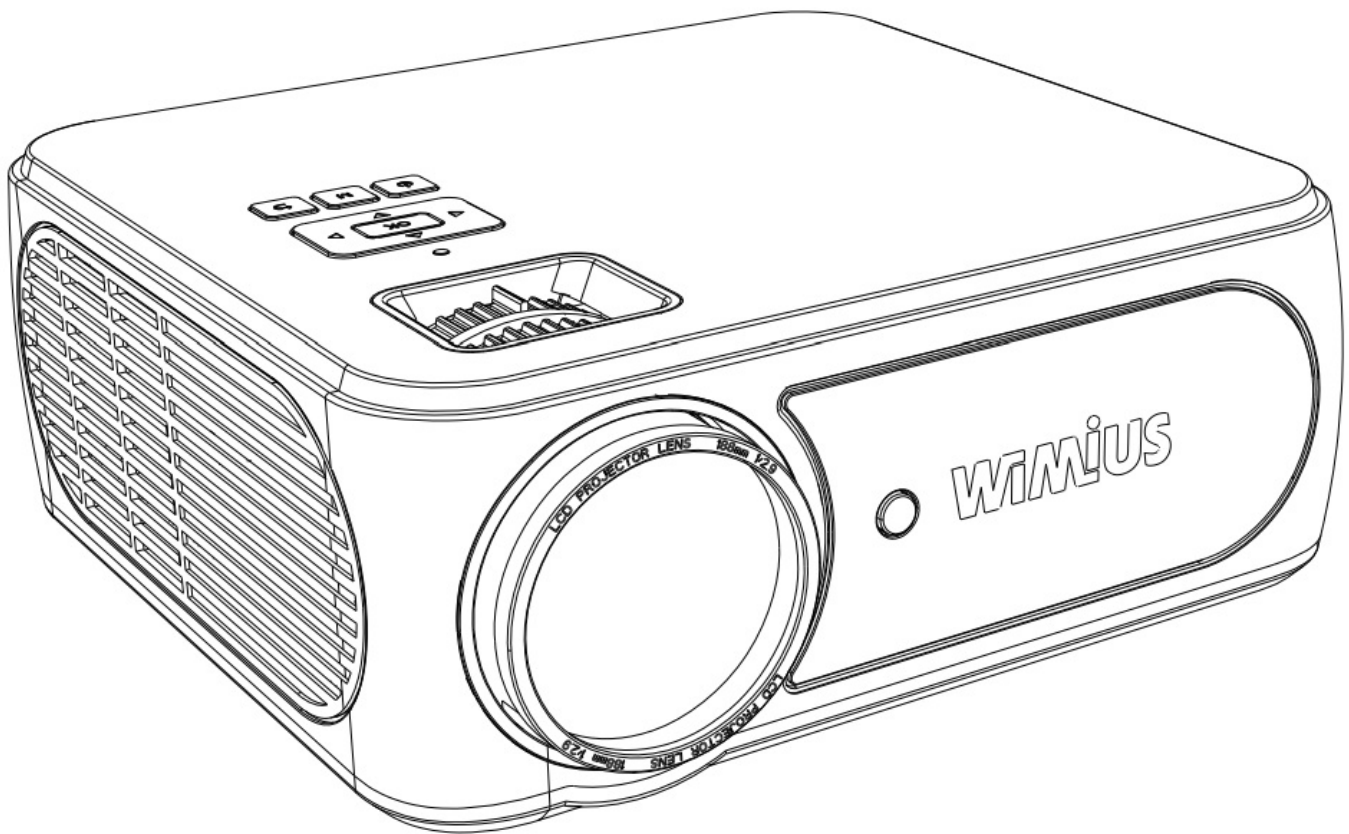

USER MANUAL K8 PROJECTOR

WiMiUS 7/24 Professional Support

Dear customer,

Thank you very much for supporting WiMiUS!

Please read this manual thoroughly before using the projector. If you have any issues, email your order number and the problem to support01@wimius.com. We will provide a fast solution within 24 hours.

Actually, many problems can be easily solved by setting, such as no signal, no sound, Bluetooth connection failed, WiFi connection failed, dark spots, choppy animation etc. We promise all the projectors have been 100% carefully checked and packaged before shipping.

If you have any questions, could you please contact us so that the problem can be solved. And give us an opportunity to improve. We guarantee we will provide you a satisfactory solution.

Thanks for your understanding!

WiMiUS Service Team


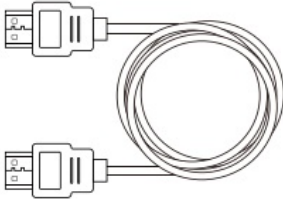
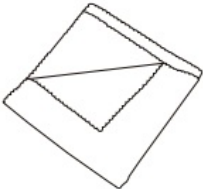

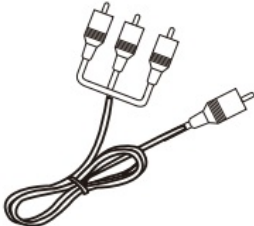

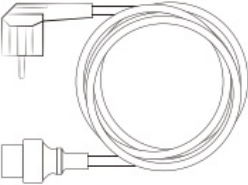

TIPS:

1. Do not place projector in too warm or too cold room, because the high temperature or low temperature will shorten lifespan of the device. The working environment would be 5 °C~35 °C better.
2. If there are black spots on the projection screen, please don't worry, please contact support01@wimius.com via email, we can send you a video about how to remove the dust.
3. The ventilation is equipped for the projector to work stably. Don't cover the vent with cloth, blanket or other things. Don't insert anything into the slit of the projector, or it may produce a short circuit or an electric shock to your device and cause damage.
4. The projector shall be strictly protected from strong impact, extrusion and vibration. Do not try to move and on strong impact, extrusion and vibration.
5. Do not try to move and the internal circuit faults.

Lens, as the core component of the projector, is directly related to the picture definition and effect. The excessive dust thereon will affect image quality. The dirty lens shall be wiped with soft cotton cloth for the glass lens surface.


Hard cloth or abrasives shall not be used.

PACKAGE LIST

 <p>WiMiUS K8 Projector*1</p>		 <p>HDMI Cable*1</p>
 <p>Cleaning Cloth*1</p>	 <p>Remote Control*1</p>	 <p>3-in-1 AV Cable</p>
 <p>User Manual*1</p>	 <p>Power cable*1</p>	 <p>Projector case*1</p>


PROJECTOR SPECIFICATIONS

Model No.: K8			
Display Technology	LCD	Light Source	LED
Native Resolution	1920x1080P	Focus	Manual
Installation Type	Front/Rear on Desk, Front/Rear on Ceiling	Aspect Ratio	16:9/4:3/Auto
Projection Distance	1.6-5.5m	Power Voltage	AC100-240V
Product Size	260x245x100mm	Product Weight	2kg
Input Interface	HDMI*2/USB*2/AV/ 3.5mm audio	Picture File	JPG/GIF/BMP/PNG
Video File	MP4/MKV/MOV/3GP		
Audio File	MP3/MP2/AAC/PCM/FLAC/WMA		

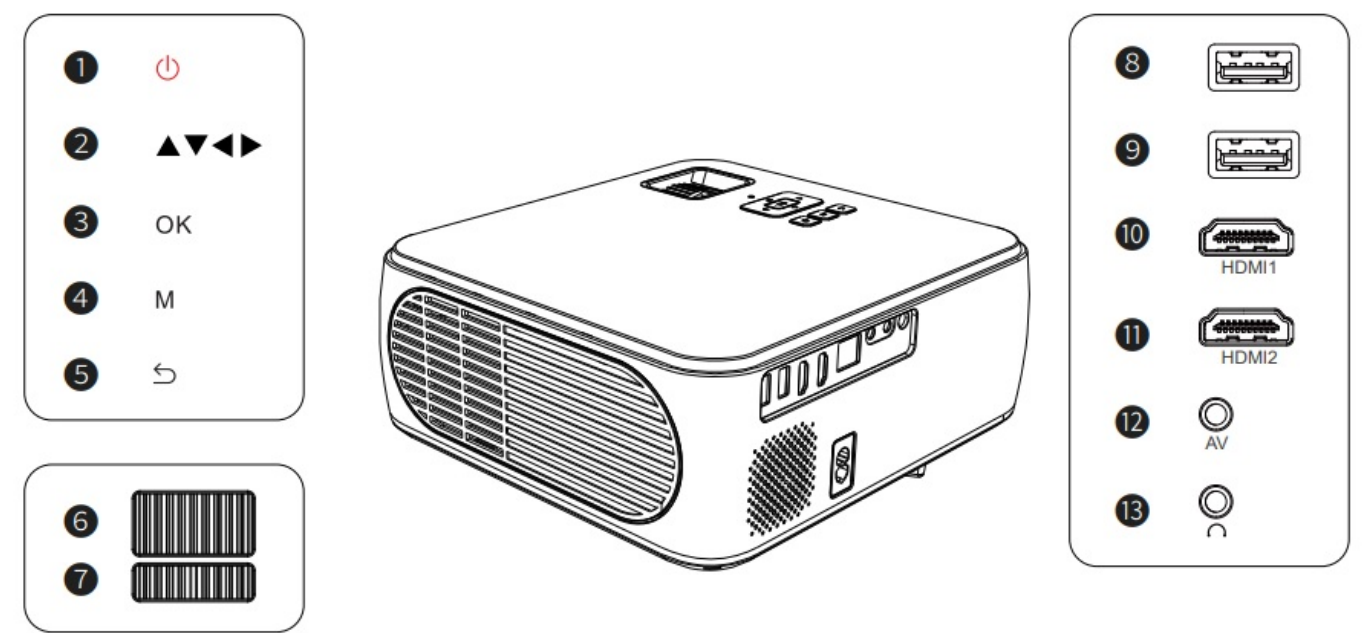 

Note:
please refer to the product appearance, this figure is for reference only.

1 . Power 4 . Menu Button 7 . Keystone Correction . AV Port	2 . Arrow Keys 5 . Back 8/ 9 . USB Ports . 3.5mm Headphone jack	3 6 10/
---	---	------------------------------------

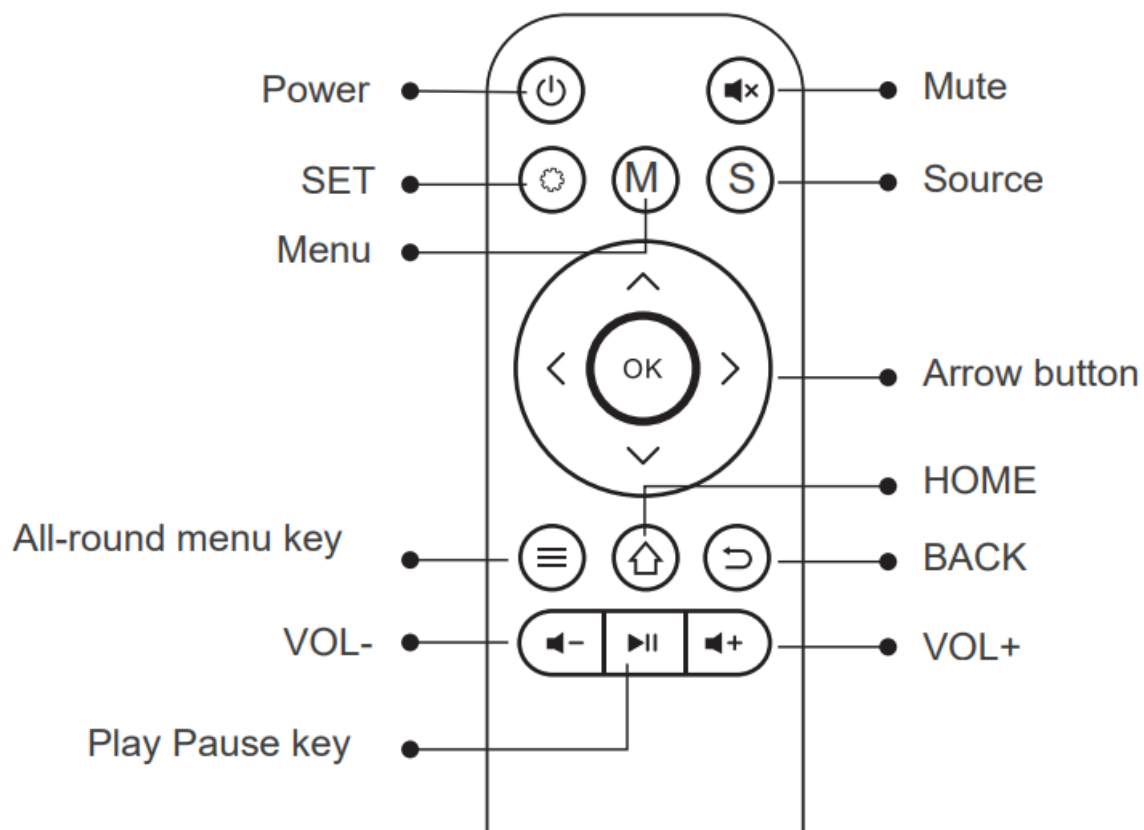 


Note:

1. Install 2 pieces of AAA batteries(not included) into the remote before using it, do not combine new batteries with old ones in remote control, which can cause operation failure due to insufficient power supply.
2. When using the remote control, please make sure that the signal transmitter of the remote control aims at infrared signal of the projector.
3. When you are not using the remote control for a long period. Please take out the batteries to prevent it from leakage.

INSTALLATION

1. Installation Method

 The projector can be hanged on the ceiling with special hanger frame, and placed on the stable desk to project the image according to the operating environment and requirements. In addition, the projector can be installed with following methods:

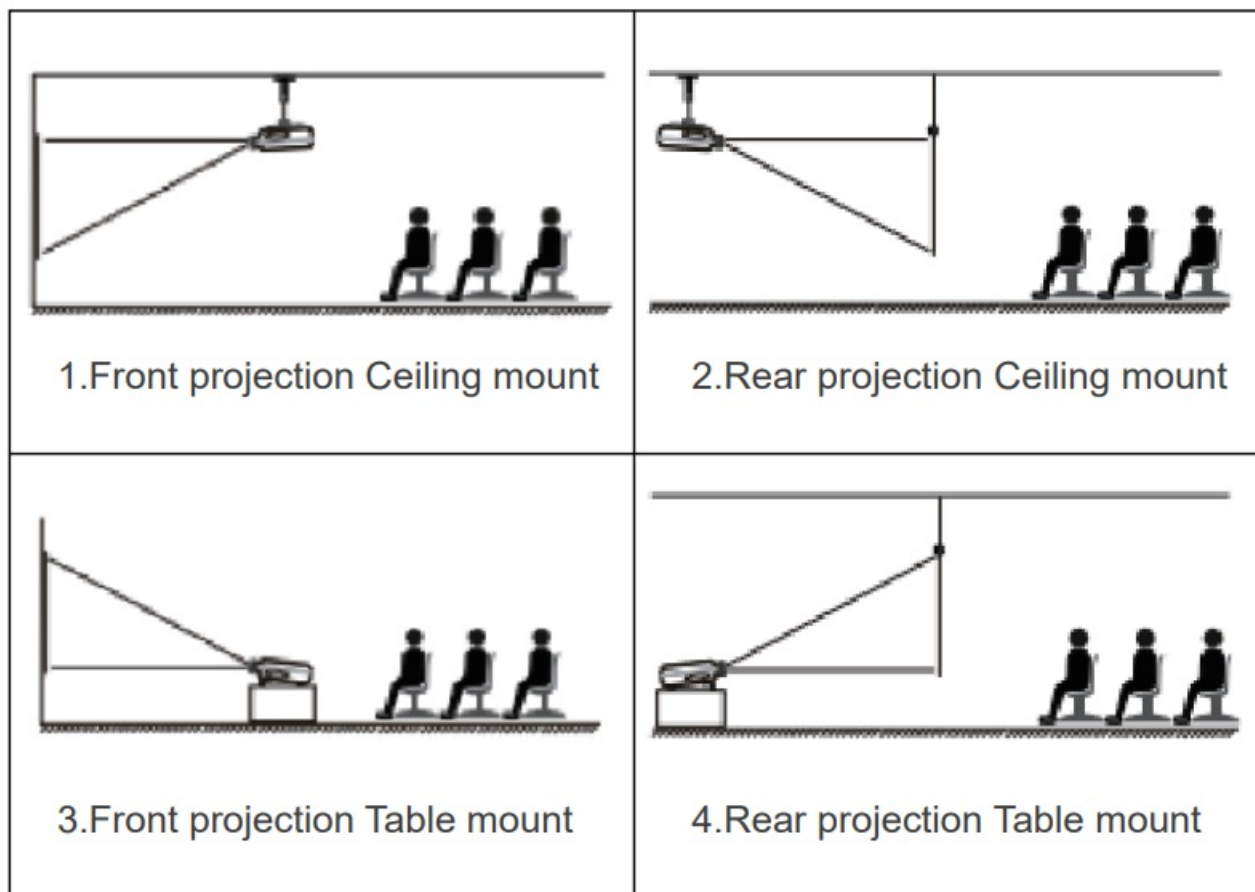

Keep the projector at a height where its lens is axial symmetry to the screen. If this is not possible, use the keystone correction function to adjust the projection image.

Aspect Ratio: 16:9t	
Distance	Screen Size
1.6m	49"
2m	60"
2.5m	75"
3m	93"
3.5m	109"
4m	125"
4.5m	141"
5m	157"
6m	300"

* The image size depends on the distance between projector and screen. there may be 3% measure difference among above listed data.

* The recommended projection distance is 2.5-3m.

* Ambient darkness will improve the clarity of the projected images.

 
2. Install on the Ceiling

Keep the projector vertical and towards the mid of projector screen, keep the projection image flat on the screen.

1.To adjust the tilt base, unscrew the support rod at the bottom of the projector, see below picture.

2.For Ceiling mount, there are 4 holes at the bottom of the projector (M4*10mm). Please slowly unscrew the 4 black rubbers, then you can find the holes for ceiling mount, see below picture.

NOTE: The hanging bracket or ceiling mount stand is not packaged.

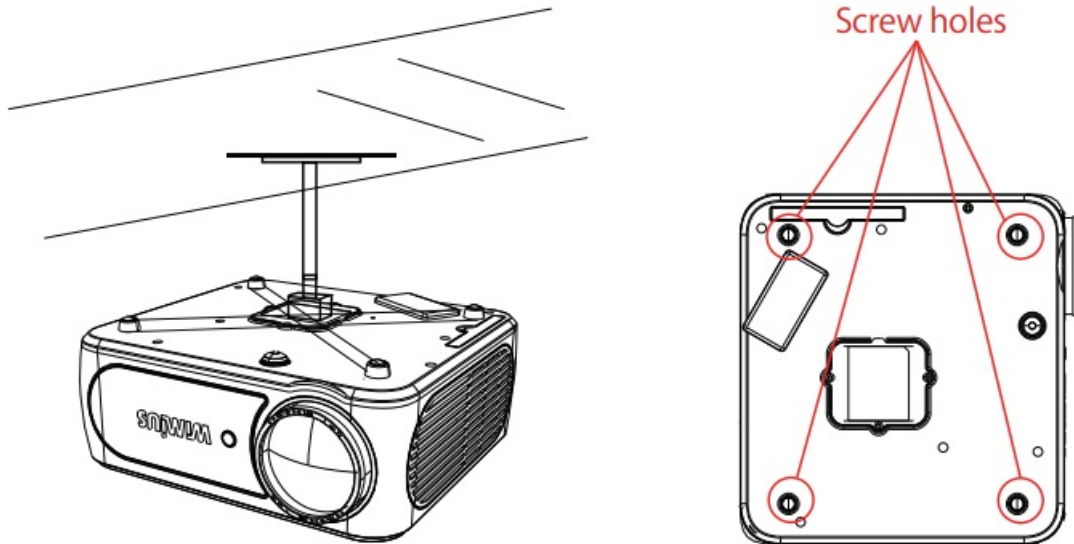

STARTING PROJECTOR


 
1. Press the power key on the remote or projector, the indicator light will turn green;
2. Adjust the focus ring on the right side of the projector to get the best image performance; (If it is still blurry, please try to adjust the projection distance).
3. Use the 4D keystone function of the projector to get a rectangle projection screen;
4. Connect the external device (Smart phone, iPad, Amazon Fire TV, TV box, DVD player, Computer, etc.in the corresponding interfaces of the projector, please be sure to select the corresponding source. If you do not select the correct source, the projector will not be able to detect the signal;.
5. Select the "⚙️" menu, enter the [Language],then you can set your preferred language.

IMAGE ADJUSTMENT

When using the projector for the first time, it normally displays an unclear image. This is due to the lens being out of focus or the incorrect trapezoid setting.

Please follow the below steps to correct:

 1. Focus Adjustment

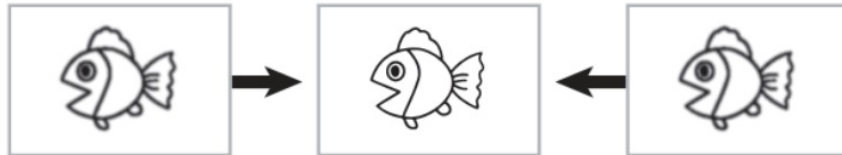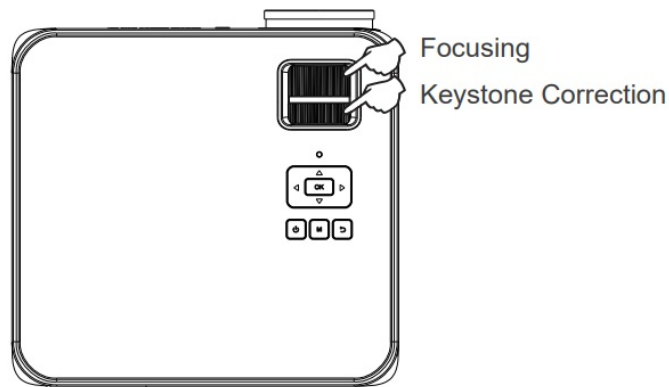

Rotate the focus ring or lens slowly. At the same time, check the focus point carefully. The best focus point for the lens would be where the image most clear.

 
Note: If it is still blurry, please try to adjust the projection distance.

2. Digital 4D Keystone Correction.

Use the digital 4d keystone correction of the projector to change the image to be rectangle(vertical and horizontal). Detail please refer the page of this manual.


SETTING UP THE PROJECTOR

The projector's home page is as follow.

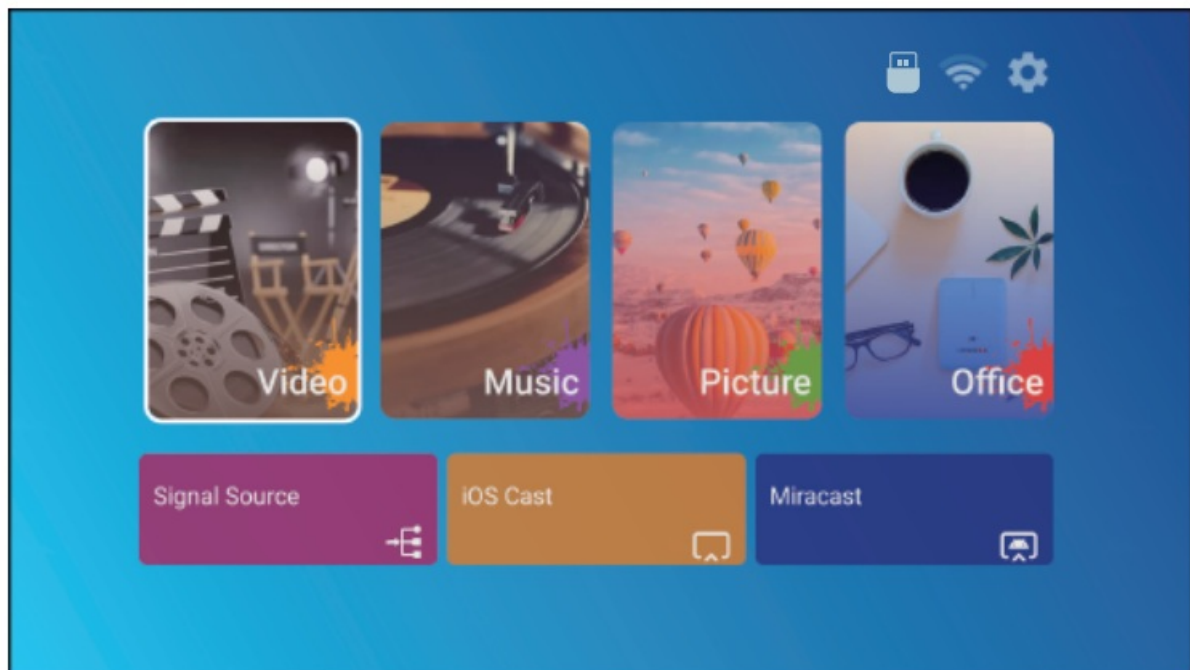

1. Select The Input Signal Source

 Select the desired input signal source (HDMI1/HDMI2/AV) on the home-page

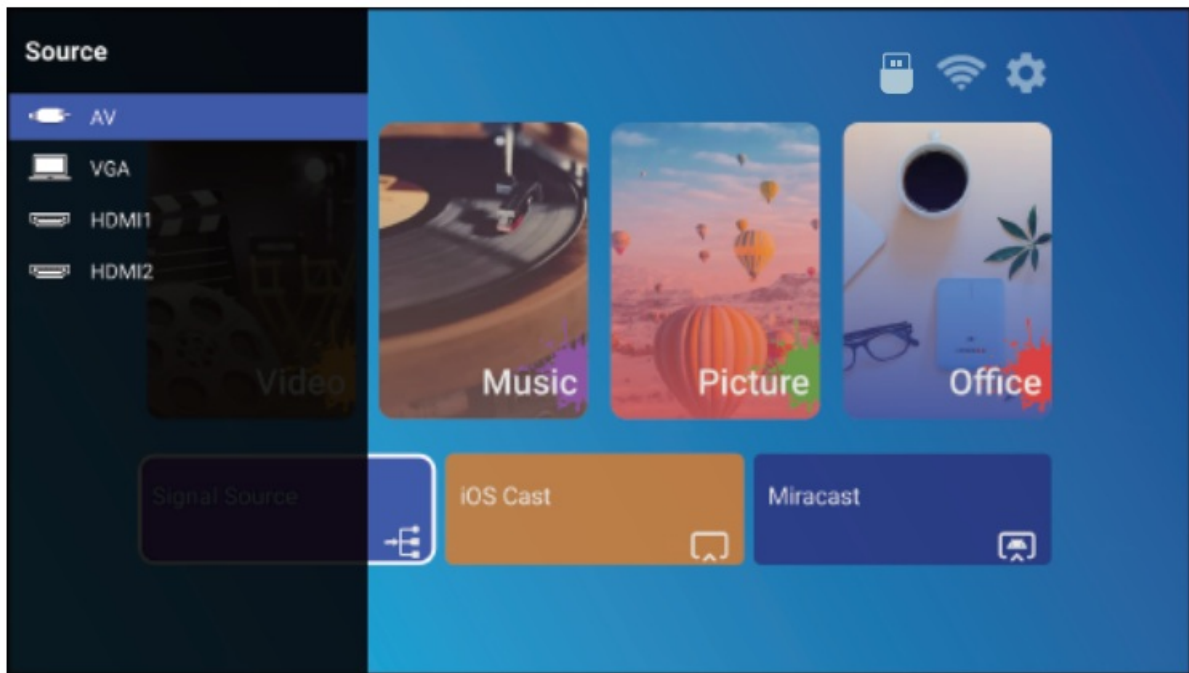

2. USB Disk Input Mode

2.1. Play Movie/Music/Photo/Office Suite in the USB Disk Input Mode

- 1). Input the USB Disk;
- 2). Select the option [Video/Music/Picture/Office] 3). Select the desired file (or folder to enter the sub folder) in the USB disk, then press the [OK] button to play it.




3. WiFi Setting

 
 
 
Wireless Connection

Warming Tips:


- ① The fluency of screen mirroring with wireless connection will be affected by the network environment. A bandwidth of 100Mbit or more is recommended when using screen mirroring.
- ② Make sure your mobile device is close to the projector when using wireless connection. A distance within 1 meter is recommended.
- ③ Some mobile devices may not support screen mirroring due to the compatibility.
- ④ Any questions, please feel free to email WiMiUS via support@wimius.com.

3.1. iOS Cast (for iOS Devices)

1. Go to home page — Select the [] menu — Select the [WiFi] menu — Open the WiFi function — Select your home WiFi from the list — Connect the K3 projector to your home WiFi.

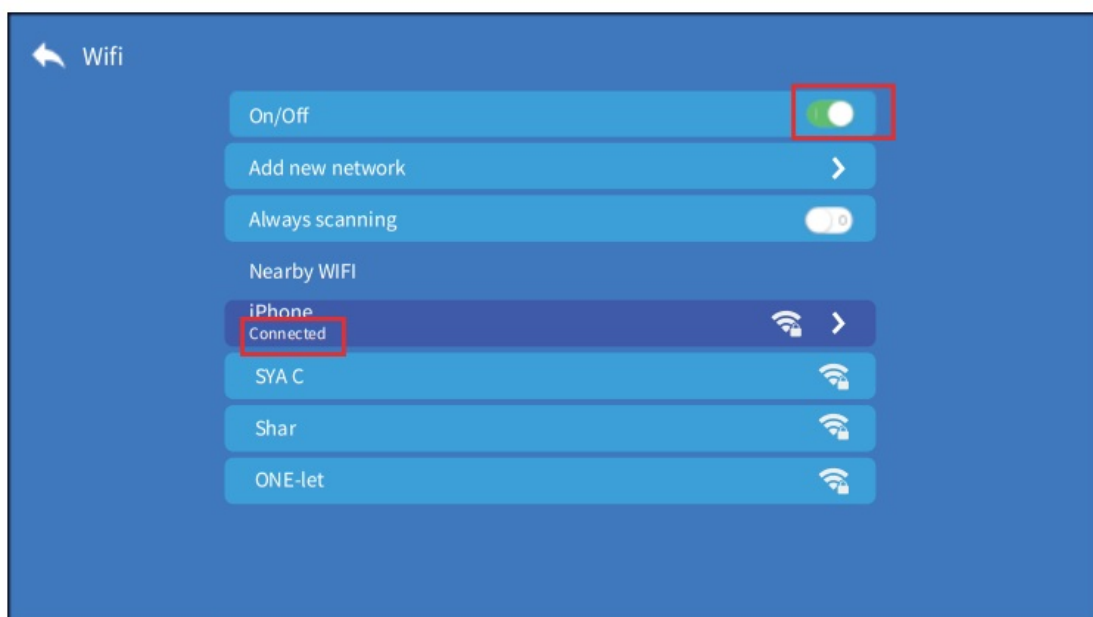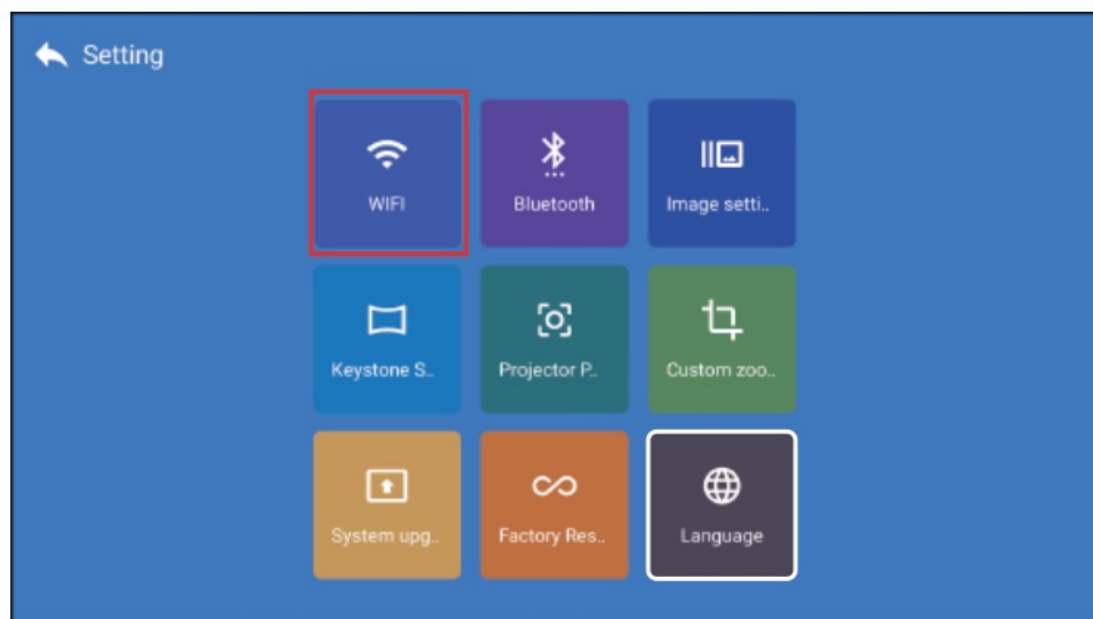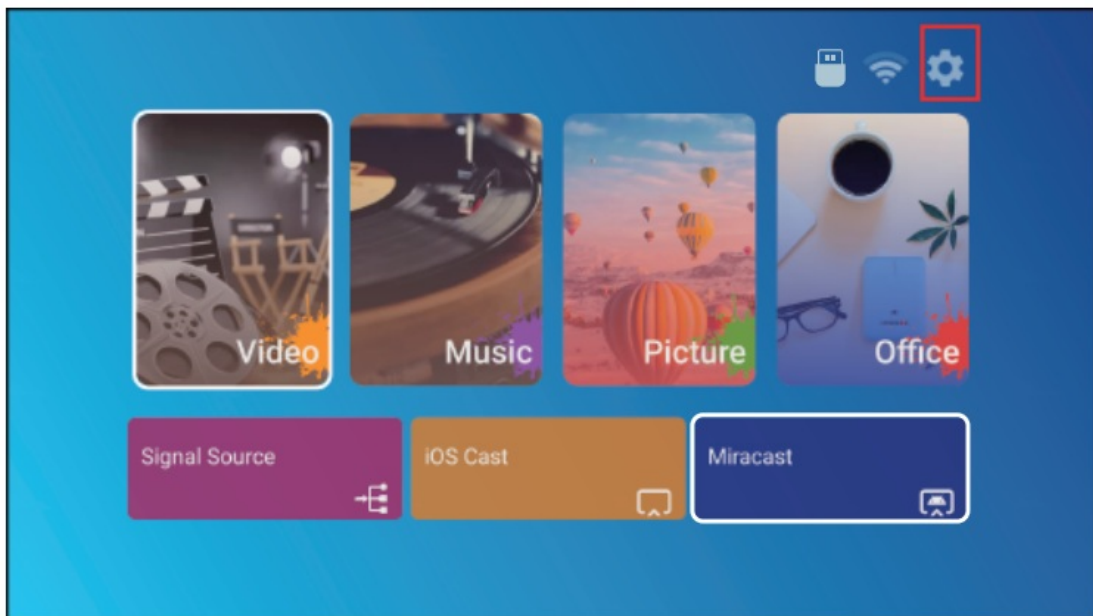

 2.Back to home page — Select [iOS Cast] menu — Press the OK button to enter the [iOS Cast] menu.


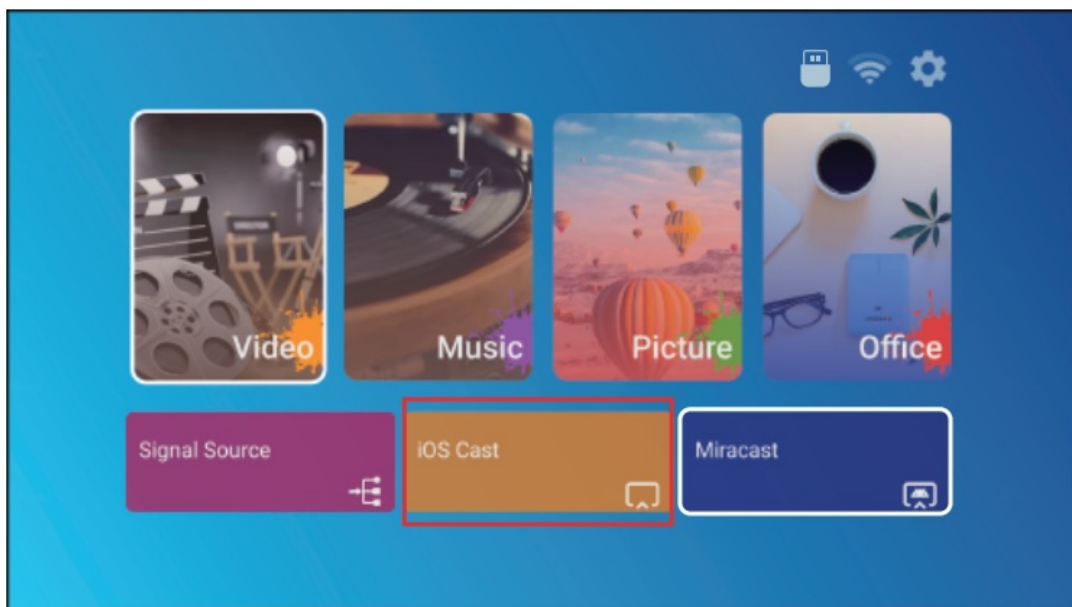


3. Select the [Settings] menu on your iOS device — Turn on the [Wi-Fi] function — Connect your iOS device to the same home network as the projector.

4. Open the [Control Center] on your iOS device — Select the [Screen Mirroring] function — Select and connect the iOS Cast receiver named [BJJ_39127] — your iOS device screen will be displayed on the projection screen after 3 seconds.

3.2. Miracast (for Android Devices)

  1. Go to home page — Select the [Miracast] menu — Press the OK button to enter the [Miracast Setting] Menu.

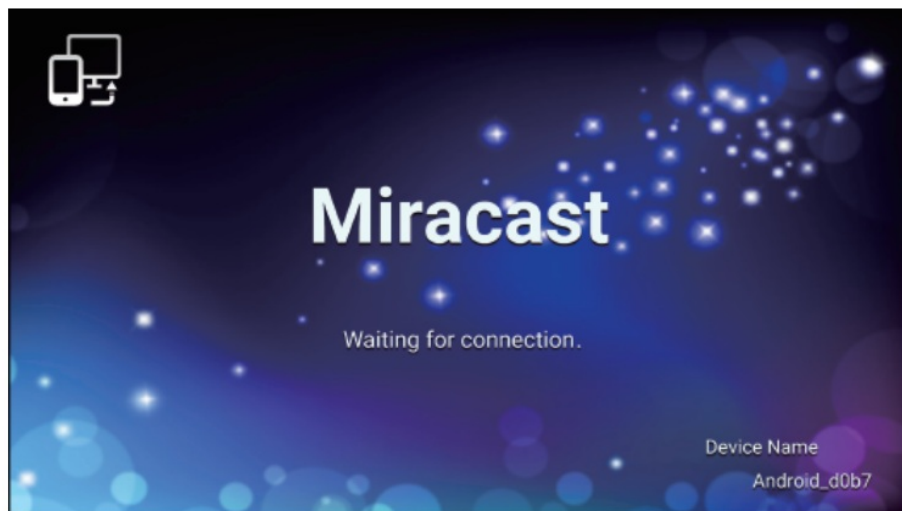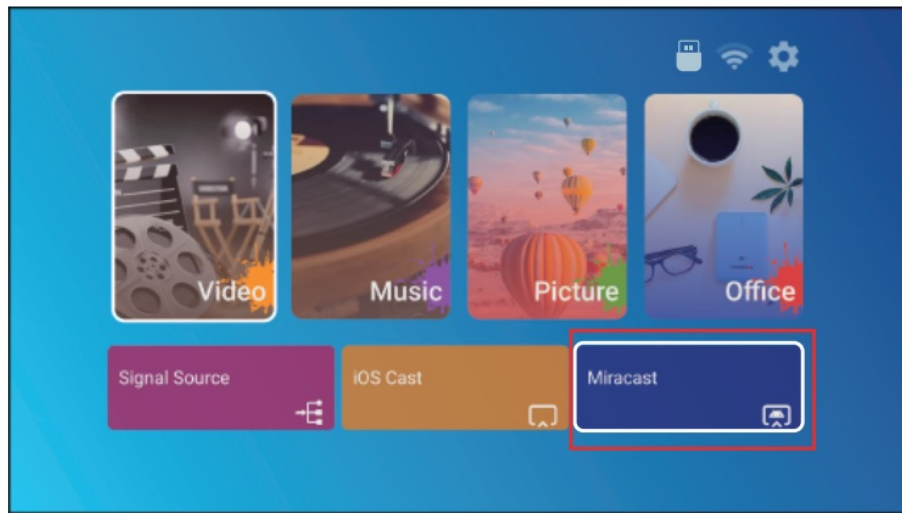



2. Select the [Settings] menu on your Android device — Select the [Screen mirroring] function — Select your Miracast receiver named [BJ_39127] — your Android device screen will be displayed on the projection screen after 3 seconds.

 
 
3. On your Android device, tap [Settings] -[WLAN Display] -Turn [Wi-Fi] ON, Connect your home WiFi.

Note:

1. Different brands of Android phones have different operations for select Screen Mirroring Display, please refer to your phone's manual. [Multiscreen/Wireless display/WLAN display/Screen mirroring/Wireless projection/Smart view etc.] 2. Not all Android phones support this function. Please make sure it is supported before use.

4. Bluetooth Setting

Go to home page — Select the [] menu — Select the [ Bluetooth] Option — Open the Bluetooth function and your Bluetooth device — Scan the Bluetooth devices nearby automatically — Choose the Bluetooth device desired — it will be paired and connected automatically.

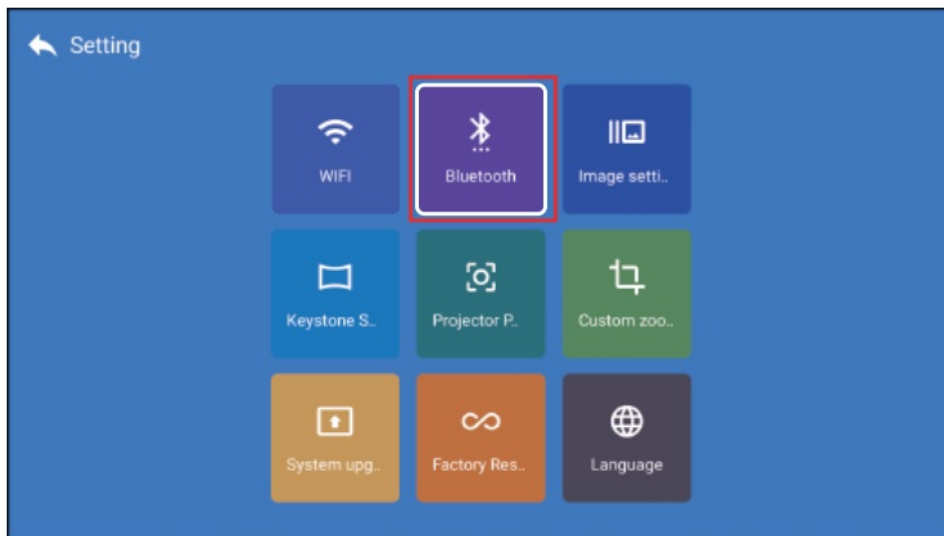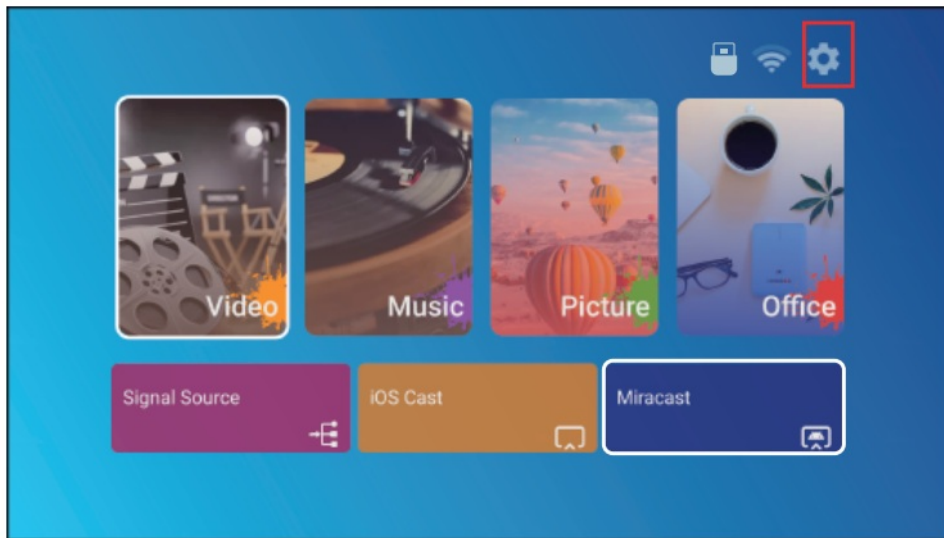


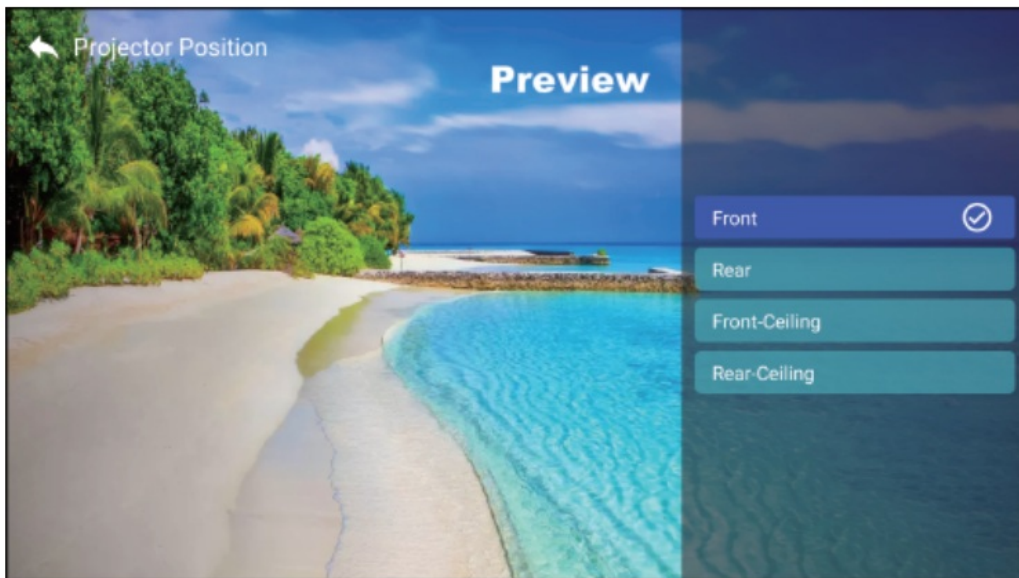 
Note:

- 1.The K8 projector is compatible with the Bluetooth headsets, Bluetooth speakers and AirPods, but not the Bluetooth keyboards or Bluetooth phones.
- 2.If you have any question, please feel free to email WiMiUS via: support01@wimius.com.

Projector Image Setting

5.1.Projection Mode

 
Select the [] menu — Select the [Projection Position] Option Press arrow key to select and press “OK” to confirm projection position.



5.2.Keystone Advanced & 4-Point Keystone


1. Keystone correction

Select the [⚙️] menu — Select the [Keystone Setting] Option

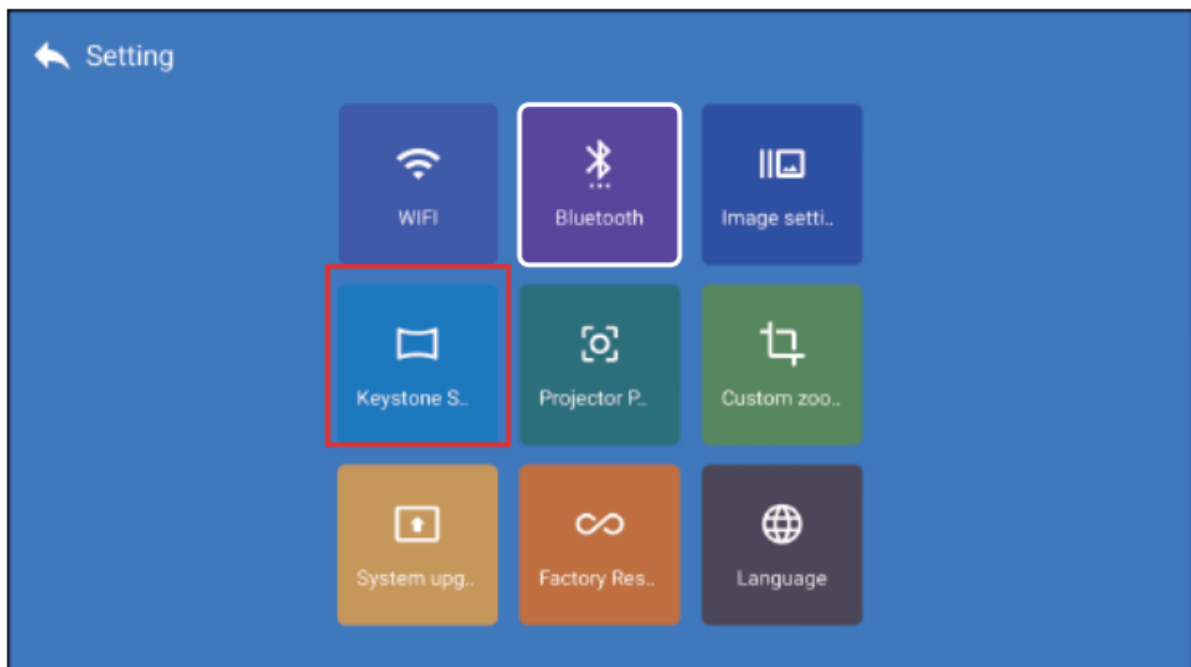


The projector has both 4-sided trapezoidal and 4-corner trapezoidal correction functions. You can not only adjust the image horizontally or vertically, but also adjust the four points to make the projected image a rectangle.

 (1)4-side keystone correction: use the arrow keys to adjust the screen angle horizontally or vertically until the guide rail is adjusted to a rectangle.

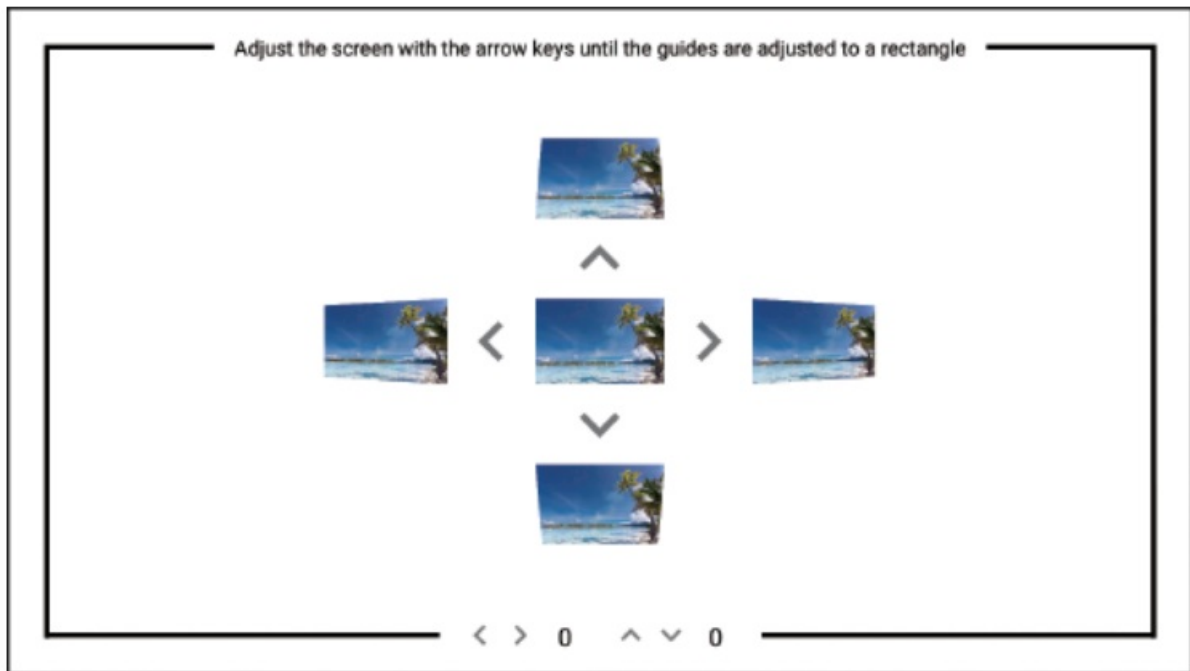


 (2)4-corner keystone: adjust the screen with the arrow keys until the guides are adjusted to a rectangle.

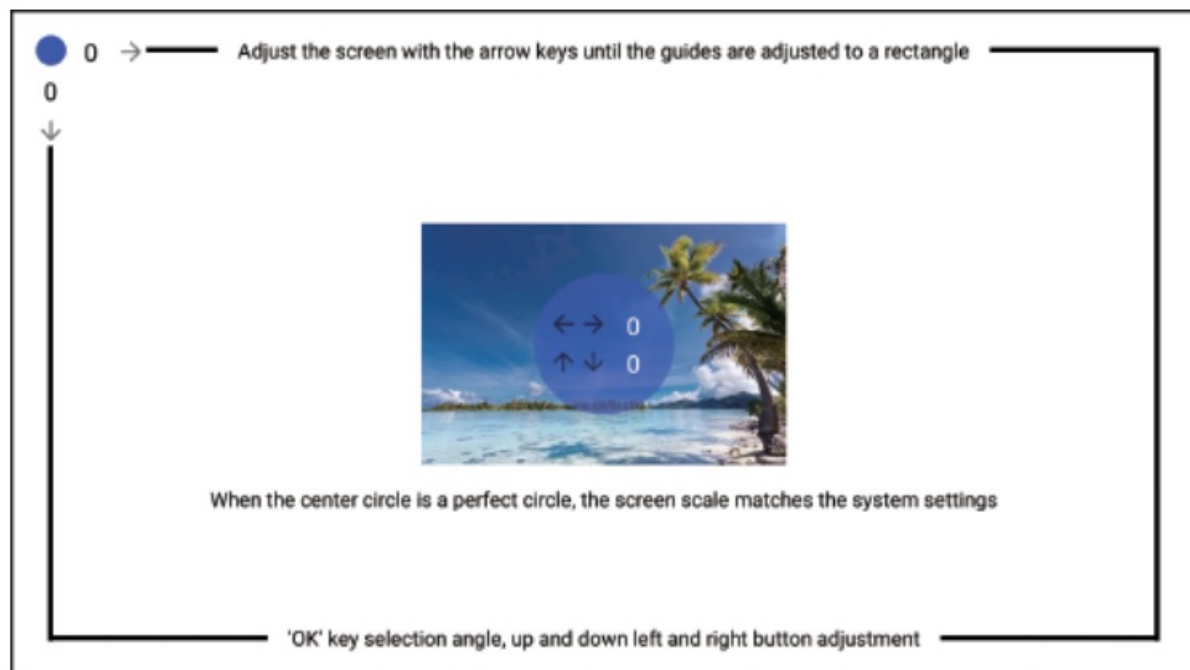


5.3.Digital Zoom

 Select the [⚙️] menu — Select the [Custom zoom] Option

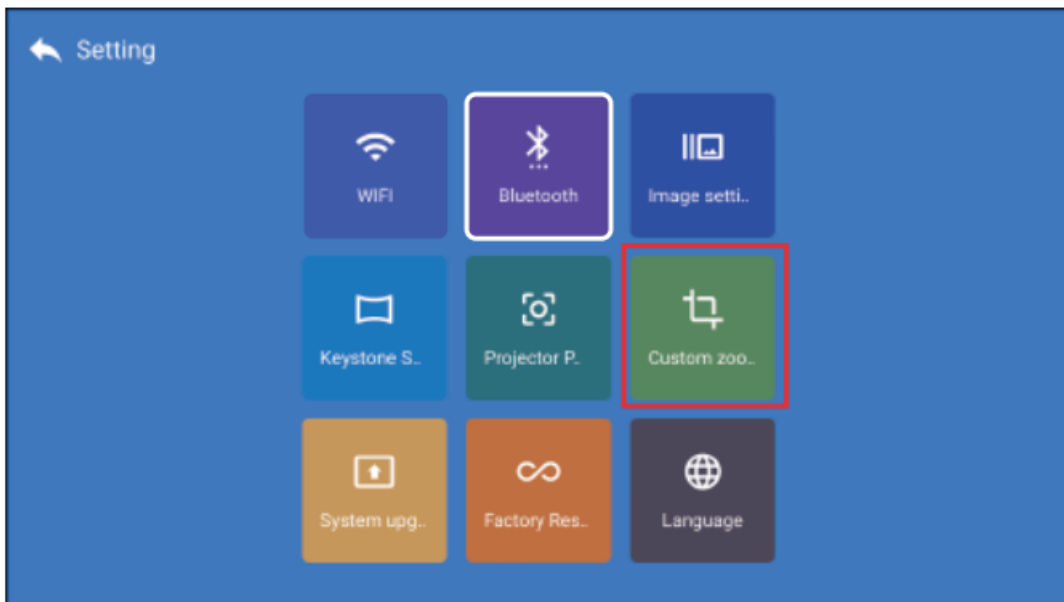

 Turn on [Custom zoom] button, and turn on [Scaling] button, the projection screen can be zoomed 50%~100%

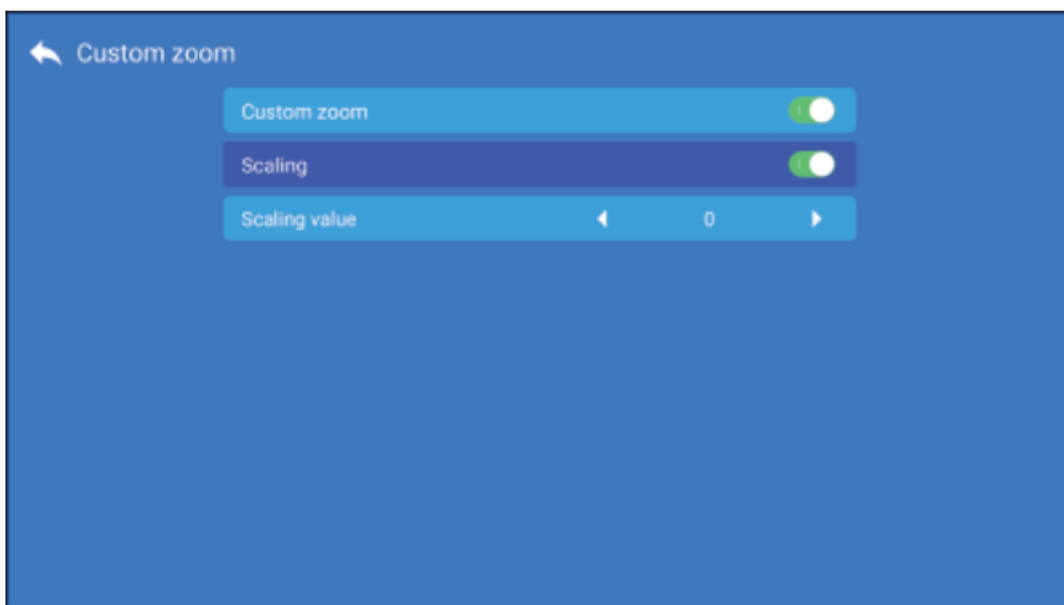

Only turn on [Custom zoom] button and turn off [Scaling]button. The length and width of the projection screen can be scaled separately by 50%~100%


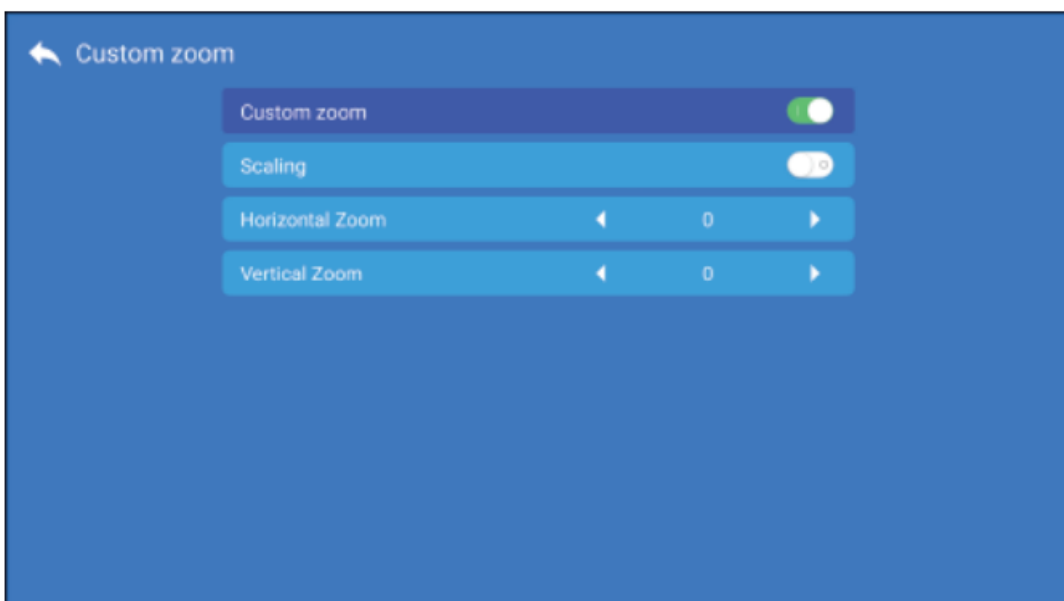 


Image Setting

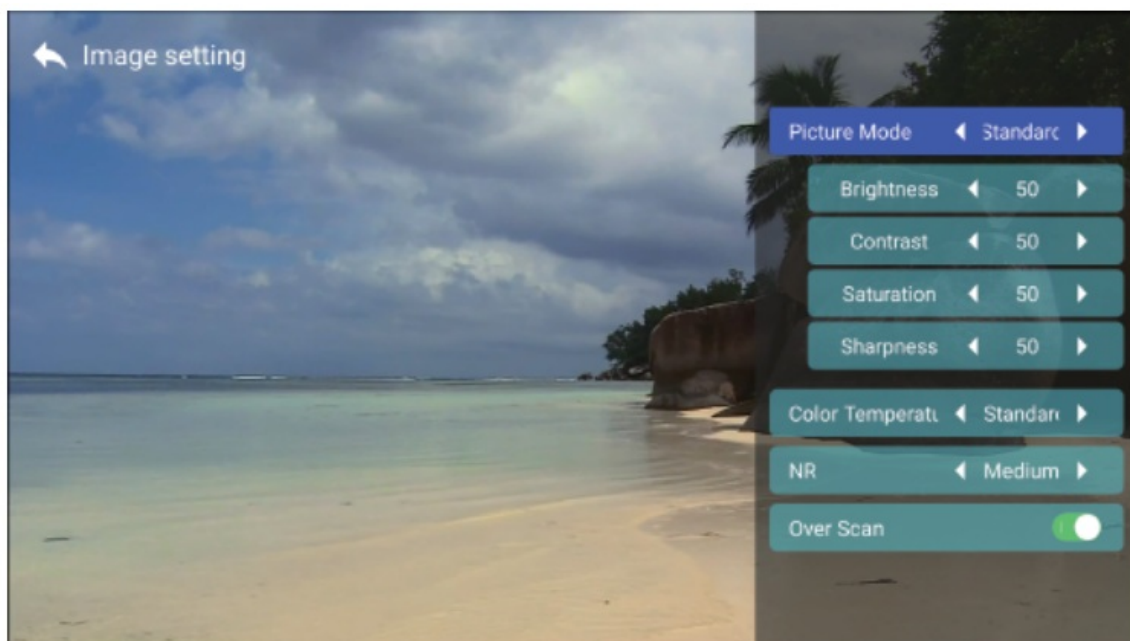 


Model No.: K8	
Picture Mode	Standard/Vivid/Soft/User
Brightness	0-100
Contrast	0-100
Saturation	0-100
Sharpness	0-100
Color Temperature	Standard/Warm/Cool
NR	off/Low /Medium/High
Over Scan	On/Off

Other Setting

Menu	Function
System Update	Online Update: Download Update Files online. Local Update: Use USB connection to provide Update Files.
Factory Reset	Restore user operation application configuration and system setting
Language Setting	Set up the language

OTHER SETTINGS

 WiMiUS K8 projector has 6 interfaces, HDMI ports*2/USB ports*2/3.5mm headphone output/AV output. Please select the correct connecting port to connect your device (PC, Phone, DVD Player, Sound bar, USB, PS4 etc.)

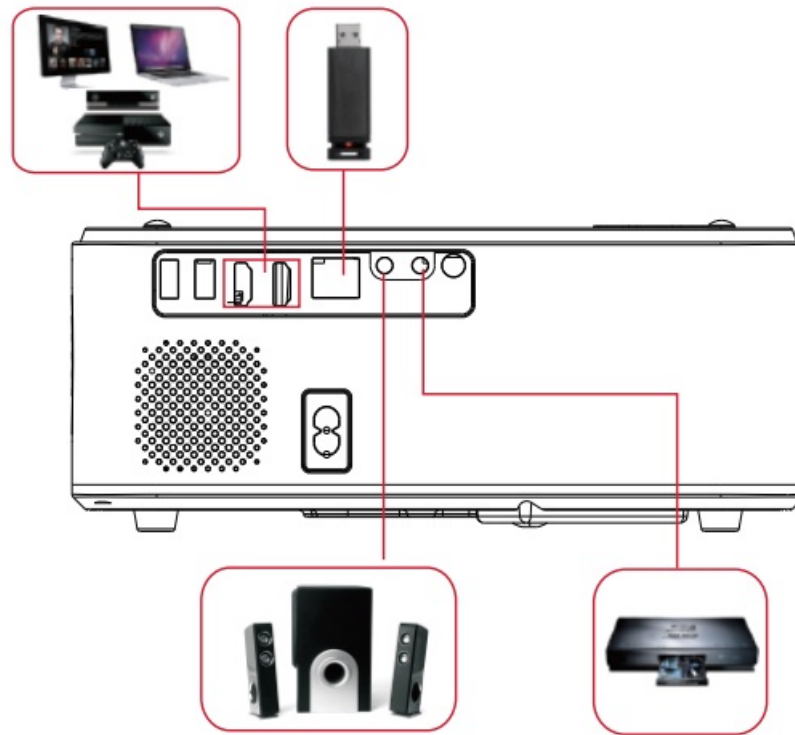

1. Connect USB Disk

- 1) Insert the U disk into either of the two USB input ports;
- 2) You can directly enter the start-up screen on the home page, select the option [Video/Music/Picture/Office]
- 3) Select the desired file (or folder to enter the sub folder) in the USB disk, then press the [OK] button to play it.

2. Connect the Devices via the HDMI ports

- 1) Connect your TV stick or laptop to any HDMI port of the projector;
- 2) Enter the home page to select the corresponding HDMI1 or HDMI2 as the signal source.
- 3) On your laptop, hold down the key “Win+P” board keys to change your display mode.

Computer only: is the default option – only displays on the main monitor.

Duplicate: makes all of the monitors display the same thing duplicating the desktop on each monitor.

Extend: makes all of your monitors act like one big monitor extending the desktop across all of them.

Projector only: Displays only on the secondary monitor like a projector.

You can change the screen resolution on the Projector Only Mode

Step: Start > Control Panel > Appearance and Personalization > Adjust Screen Resolution


Manufacture	Keys
Acer	Fn+F5
Dell	Fn+F8
Epson	Fn+F8
Fujitsu	Fn+F10
IBM	Fn+F7
Hewlett-Packard	Fn+F4
Lenovo	Fn+F10

Manufacture	Keys
NEC	Fn+F3
Panasonic	Fn+F3
Sharp	Fn+F5
Sony	Fn+F7
Tpshiba	Fn+F5
Zodiac	Fn+F3/F5


3.Connect to the DVD Player

Use the 3-in -1 AV cable in the package

 1. Turn on your DVD player and the projector;
2. Connect the colorful female connectors to your DVD player's RCA cable with the 3-in-1 AV cable in the package;
3. Connect the black connector to the AV port of the projector, enter the home page to select [AV] as the signal source.

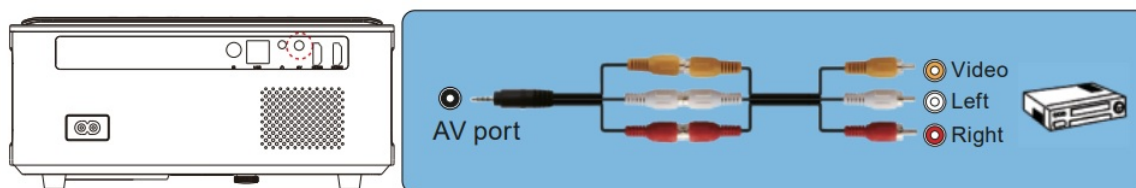

 Or connect to the DVD Player with the HDMI cable in the package.

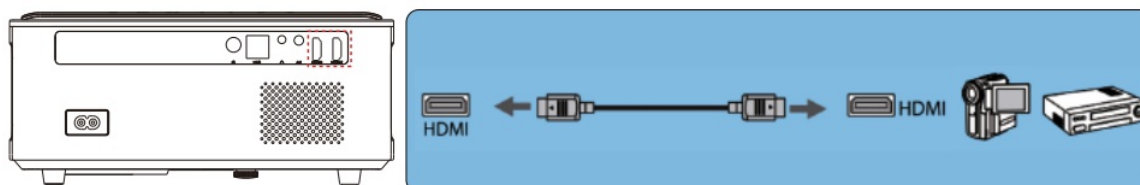


4.Connect to the Sound bar/Speaker

If your speaker has AUX port, please use your 3.5mm audio cable connect the projector and your speaker as the picture shows, enter the home page to select [AV] as the signal source.



SAFE SHUTDOWN

1. Press the  button on the projector or remote.
2. Unplug the power cord of the projector.
3. Cover the lens and store the projector in a cool and dry place.

WARRANTY

Thank you so much for your purchase and support! We provide 3 year warranty for K8 projector. If you have any questions, please feel free to contact us via support01@wimius.com

TROUBLESHOOTING

Problems listed below might occur during the operation of your projector.

Please refer to the possible factors which might cause the issue to do troubleshooting.

1. When turning on the power switch, the indicator light does not work.

- 1) The power might not be connected well.
- 2) Check the over-heat protection system.

2. The remote control does not communicate with the projector.

- 1) The power switch at the back of the projector is turned on or off?
- 2) The remote control's batteries are depleted?
- 3) Something obstructing the signal between the remote and IR
- 4) Strong light on IR directly.

3. No image on the screen.

- 1) Is the channel set-up correct?
- 2) Is there an input signal ?
- 3) Is the input cable plugged well ?
- 4) Under PC mode, is the refresh rate > 75KHz ?

4. Blue screening picture, no sound.

Input cables connected right?

5. Picture right, no sound.

- 1) Input cables connected right?
- 2) Volume at min or on Mute.

6. Can't play the movies.

- 1) The format of the video is right?
- 2) Files are broken?
- 3) Device is broken?

7. Can't play video in App Netflix, Hulu, Amazon Prime

Those APPs are limited with HDCP. This model doesn't support this function.

So it can't support these APPs.

8. There is picture, no sound?

The decode system doesn't match.

9. Can't find devices when connected with hard drive or flash drive.

Check if the device is broken.

10. Auto-off after working for a while.

- 1) The projector ventilation is blocked.
- 2) The voltage is not stable.
- 3) The over-heat protection system.

11. Not compatible with your Bluetooth speaker?

- 1) The projector may not compatible with some version Bluetooth speaker of JBL.
- 2) Contact our after-sales email at support01@wimius.com immediately and tell us the brand and model of


your Bluetooth speaker.

12. WiFi connection is not stable?

- 1) Please check whether the network of your phone is well.
- 2) Make the distance of phone and projector within 1 meter.



Documents / Resources

 <p>The image shows the cover of the WiMiUS K8 WiFi Projector User Manual. It features the WiMiUS logo at the top, a picture of the projector, and the text 'USER MANUAL K8 PROJECTOR' and 'support01@wimius.com' at the bottom.</p>	<p>WiMiUS K8 WiFi Projector [pdf] User Manual K8 WiFi Projector, K8, WiFi Projector, Projector</p>
--	--

References

- [🌐 Site Maintenance](#)