



WINDOW MASTER WCC 310 P 1012 Motor Controller User Manual

[Home](#) » [Window Master](#) » WINDOW MASTER WCC 310 P 1012 Motor Controller User Manual 

Contents

- [1 WINDOW MASTER WCC 310 P 1012 Motor Controller](#)
- [2 Product Information](#)
- [3 FEATURES](#)
- [4 Application](#)
- [5 Configuration options](#)
- [6 Specifications](#)
- [7 Technical specifications](#)
- [8 MotorController](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)

**WINDOW
Master®**

WINDOW MASTER WCC 310 P 1012 Motor Controller



Product Information

• Specifications

- Product Name: WCC 310 / 320 PLUS MotorController
- Version: 10 Controls for natural ventilation 3.20
- Product Type: KNX, BACnet, Modbus MotorController

• Variants:

- **With 10A:**
 - WCC 310 P 0202: 10A, 2 motor lines, 2 inputs
 - WCC 310 P 0612: 10A, 6 motor lines, 12 inputs
 - WCC 310 P 1012: 10A, 10 motor lines, 12 inputs
- **With 20A:**
 - WCC 320 P 0202: 20A, 2 motor lines, 2 inputs
 - WCC 320 P 0612: 20A, 6 motor lines, 12 inputs
 - WCC 320 P 1012: 20A, 10 motor lines, 12 inputs

• Description

- The motor controller controls (opens/closes) the window actuators based on the signals from the connected components such as keypads, room sensors, weather sensors, and BUS commands. It is recommended to use keypads in conjunction with ventilation automation to allow local manual user override.

• Communication

- The MotorController is integrated into KNX and BACnet projects using the relevant application. It supports communication with actuator speeds and various communication card types such as:
 - **WCA 3FK:** KNX interface
 - **WCA 3FB:** BACnet-IP key
 - **WCA 3FM:** BACnet MS/TP / Modbus RTU/RS485 interface
- For further information on available objects, please refer to the KNX Application Program Description, BACnet PICS, and Modbus register description on our website www.windowmaster.com.

- **Configuration / Commissioning / Maintenance**

- The motor controller offers various configuration options including:
- 2 outputs as comfort group 1 respectively comfort group 2
- Wind speed sensor to be connected directly
- Master/slave when linking with smoke control panels type WSC 310 or WSC 320
- Output when error input can be freely configured

- **Speeds can be configured**

- Sequence control ventilation timer
- 20A on one motor line (only WCC 320)
- Event log

- **Usage Instructions**

- **Installation**

- The motor controller can be mounted vertically or horizontally on the wall.
- The actuator and power supply cables are quickly and easily connected to the motor controller.
- The cable access can be made from the top or from underneath the MotorController.

- **Connecting Components**

- To control natural ventilation, mixed-mode ventilation (including mechanical ventilation), heating, and solar shading, follow the connections below:

- **Example 1: WCC 310 P 1012 with timer control and wind/rain sensor**

- **Room 1:**

- WLA 170 Control timer
- WLA 330 / WLA 340 Wind/rain sensor
- MotorController WCC 310 P 1012

- **Room 2:**

- WLA 110 Room thermostat
- Keypad (24V 3 wire / no earthing, max. 50m)
- MotorController WCC 310 P 1012
- Cloud-Based Remote Monitoring
- The MotorController supports cloud-based remote monitoring and can be configured either on the MotorController screen or from a PC. Additionally, a mobile app is available for easy access to log data stored in the cloud.

- **FAQ**

- **Q:** What are the available variants of the motor controller?
- **A:** The MotorController is available in 6 variants, divided into two categories: With 10A and With 20A. Each variant has a different number of motor lines and inputs.
- **Q:** Can the MotorController be expanded with a field bus card?
- **A:** Yes, all versions of the motor controller can be expanded with a field bus card.
- **Q:** How many window actuators can be connected to each motor line?
- **A:** Each motor line of the MotorController can have a maximum load of 10A. The total maximum current consumption of all motor lines must not exceed 10A / 20A, depending on the variant.
- **Q:** What communication protocols are supported by the MotorController?
- **A:** The MotorController supports KNX, BACnet, and Modbus communication protocols. It can be integrated into KNX and BACnet projects using the relevant application.

- **Q:** Can the MotorController be configured for different speeds of window actuators?
- **A:** Yes, the MotorController provides the possibility of up to three window actuator speeds, depending on the type of actuator connected.

FEATURES

WCC 310 / 320 PLUS MotorController



Application

- for daily comfort ventilation to be used with $\pm 24V$ standard window actuators and window actuators with MotorLink® 2, 6 or 10 motor lines 10A or 20A can be expanded with field bus card with interface for KNX,
- BACnet IP MS/TP and Modbus TCP/RTU/RS485 with build-in touch screen for configuration MotorController for the control of $\pm 24V$ DC standard actuators and actuators with MotorLink® for daily comfort ventilation. It can also control espagnolette / locking actuators.
- The MotorController is used for control of 2, 6 or 10 individual motor lines. The number of actuators, which can be connected on each motor line depends on the type of actuator – see the table “Max numbers of actuators per motor line and MotorController” for type and number.

Versions

- MotorController is supplied in 6 variants:

With 10A:

- **WCC 310 P 0202:** 10A, 2 motor lines, 2 inputs
- **WCC 310 P 0612:** 10A, 6 motor lines, 12 inputs
- **WCC 310 P 1012:** 10A, 10 motor lines, 12 inputs

With 20A:

- **WCC 320 P 0202:** 20A, 2 motor lines, 2 inputs
- **WCC 320 P 0612:** 20A, 6 motor lines, 12 inputs
- **WCC 320 P 1012:** 20A, 10 motor lines, 12 inputs
 - All versions can be expanded with field bus card.
 - In the MotorController each motor line can have a max load of 10A. The total max current consumption of all motor lines must not exceed 10A / 20A.
 - The MotorController is also supplied as a STANDARD version – please see the separate product sheet for further information.

Description

- The MotorController controls (opens/closes) the window actuators based on the signals from the connected components e.g. keypads, room sensor, weather sensor and BUS commands.
- We recommend keypads are used in conjunction with ventilation automation to allow local manual user override.

Communication

- The communication between the MotorController and each window actuator is done via a 2 or 3 wire cable this depends, if the actuator has MotorLink® or not.

Actuators without MotorLink®

- The communication is controlled via a 2 wire cable.
- If a 3 wire cable is used, cable monitoring can be added and is to be selected on the touch screen in the MotorController.
- The positioning of the windows is based on time control with a limited precision.

Actuators with MotorLink®

- The communication is controlled digitally via MotorLink® in a 3-core (power and communication wire).
- The position of the window is controlled with millimetre accuracy. This is done via the position feedback from the actuators to the MotorController. Via this communication the system continuously registers the extent of the window opening.
- The MotorController immediately reports if a malfunction occurs on one of the motor lines.

Actuator speeds

- This MotorController gives the possibility of up to three window actuator speeds depending on the type of actuator connected:
- ±24V DC standard actuator – 1 speed (speed B) MotorLink® actuator – 3 speeds (safety / manually operated / automatically)

The different speeds

- **A.** automatically control speed – actuators run slowly and almost soundlessly.
- **B.** manual control speed – actuators run faster and more audibly.
- **C.** safety control speed – actuators run fastest.

Communication card

- The MotorController can be expanded with a communication card (fieldbus card) thus daily comfort ventilation will be possible via bus communication KNX, BACnet IP MS/TP or Modbus TCP/RTU/RS485 together with

comfort controls e.g.

- NV Advance®.
- The field bus card is to be ordered separately.

Card types

- **WCA 3FK:** KNX interface
- **WCA 3FB:** BACnet-IP key
- **WCA 3FM:** BACnet MS/TP / Modbus RTU/RS485 interface
- The MotorController is integrated into KNX and BACnet projects using the relevant application. In the application there are a number of communication objects and parameters, which help to ensure a flexible integration with other KNX/BACnet products and control units.
- For further information on available objects see "KNX Application Program Description", "BACnet PICS" and "Modbus register description" on our web site www.windowmaster.com.

Configurering / commisioning / maintaining

- The MotorController PLUS is configured, commissioned and maintained via the built in LCD touch screen – easy and simple without the use of an external PC.
- For easy commissioning and quick troubleshooting when maintaining the system, faults in the system will be displayed on the touch screen.

Configuration options

- 2 outputs as comfort group 1 respectively comfort group 2
- wind speed sensor to be connected directly
- master/slave when linking with e.g. smoke control panels type WSC 310 or WSC 320
- output when error
- input can be freely configured
- speeds can be configured
- sequence control
- ventilation timer
- 20A on one motor line (only WCC 320)
- event log

Specifications


- 2, 6 or 10 motor lines (comfort ventilation groups) with up to 10A / 20A
- max. 10A/motor line
- automatically limited opening for comfort ventilation – no additional modules required
- field bus cards are available for KNX, BACnet IP MS/TP and Modbus TCP/RTU/RS485
- max. output voltage 27.6VDC @230VAC
- easy configuration at start up / expanding / rebuilding on the 2½" LCD built in touch screen in the panel – this can also be done on a PC without any additional modules

- the touch screen is also used for quick troubleshooting when maintaining the system
- simple and fast installation

Actuator and power supply cables are quickly and easily connected to the MotorController. The cable access can be made from the top or from underneath the MotorController, which can be mounted vertically or horizontally on the wall.


Example 1: WCC 310 P 1012 with timer control and wind/rain sensor

- In each room actuators with MotorLink® have been connected as well as individual keypads for individual operation of the windows.
- A room thermostat is mounted, so the windows open / close when the temperature exceeds / falls below the set temperature settings.
- A control timer for opening/closing windows in room 1 and 2 at predefined times e.g. open/close during lunch time and close all windows at 6PM.
- A wind/rain sensor is mounted on the roof.

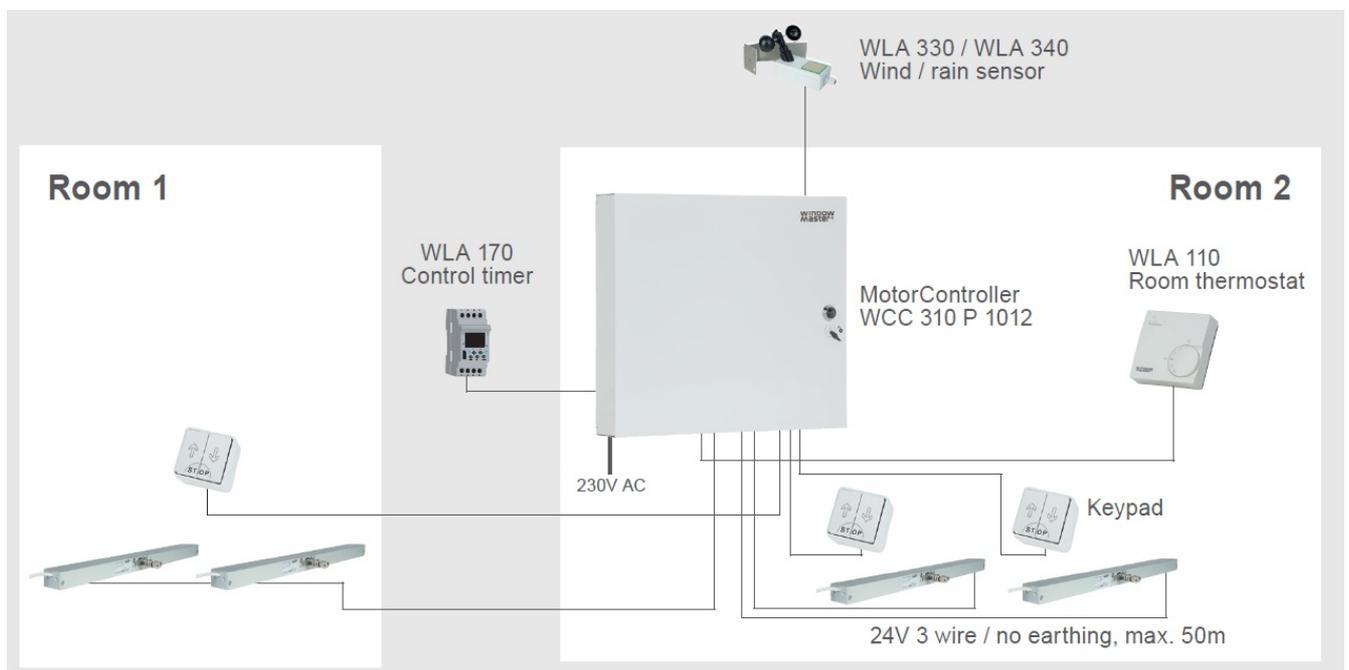


Example 2: WCC 310 P 1012 with NV Solo®

- In each room actuators with MotorLink® have been connected.
- In room 1 a NV Solo® a control panel with built in temperature sensor and keypads for individual operation of the actuators in room 1 is installed.
- In room 2 individual keypads for individual operation of the windows in room 2 are installed.
- A NV Solo® weather sensor is mounted on the roof which gives signals to the NV Solo® control panel in room 1.

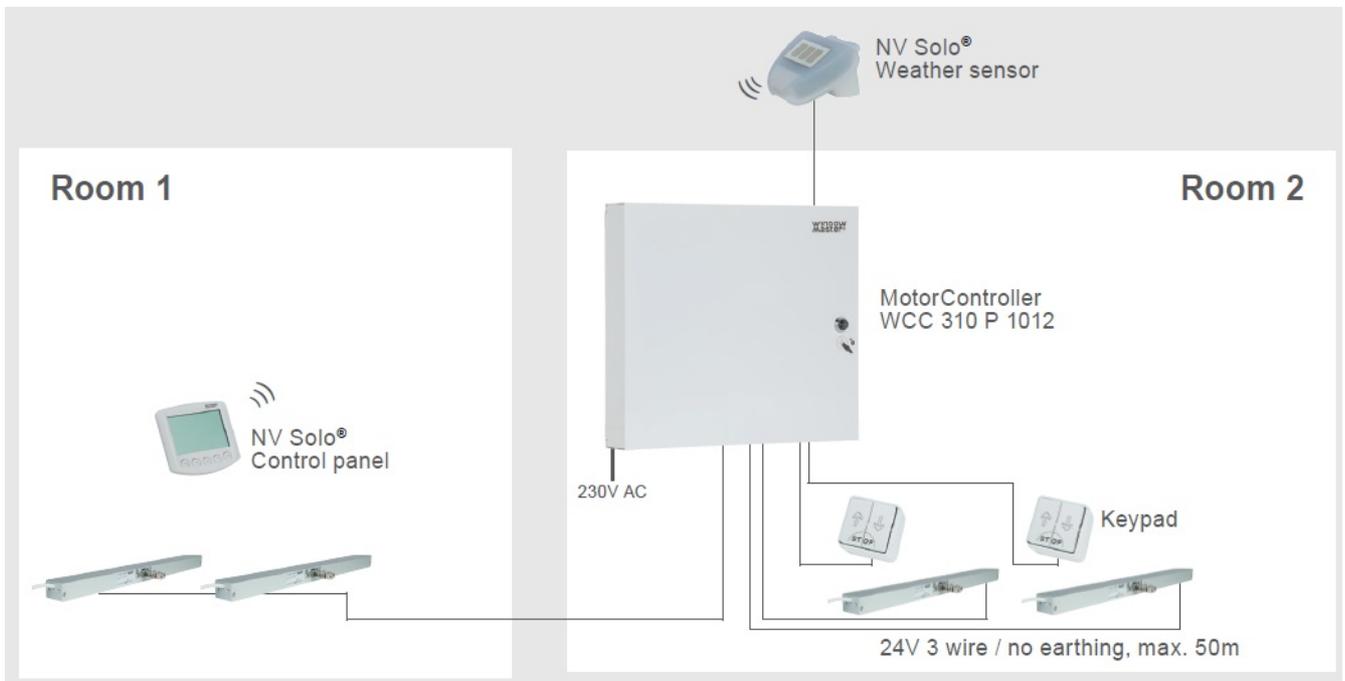


Example 3: An independent solution – no BMS-integration

- Control of natural ventilation, mixed mode ventilation (incl. mechanical ventilation), heating and solar shading.
- The indoor sensors are connected directly to the MotorController via WSK-Link™.
- The weather station is connected directly to the MotorController.
- The log data is stored in the cloud.
- The configuration is performed on the MotorController screen and/or from the pc.
- Cloud based remote monitoring
- Mobile app

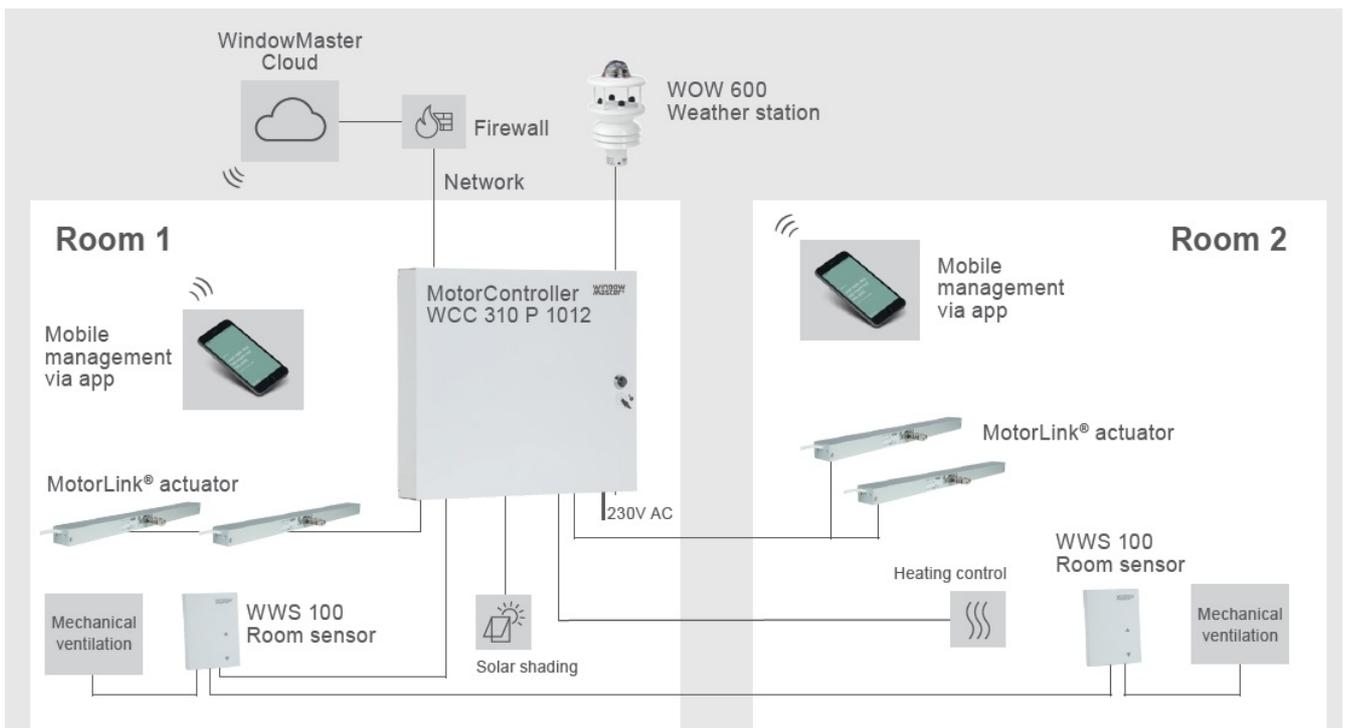

Example 4: WCC 320 P 1012 expanded with KNX card


- The MotorController can control MotorLink® actuators as well as $\pm 24V$ DC standard actuators.
- The configuration is easily done in the configuration menu on the touch display.

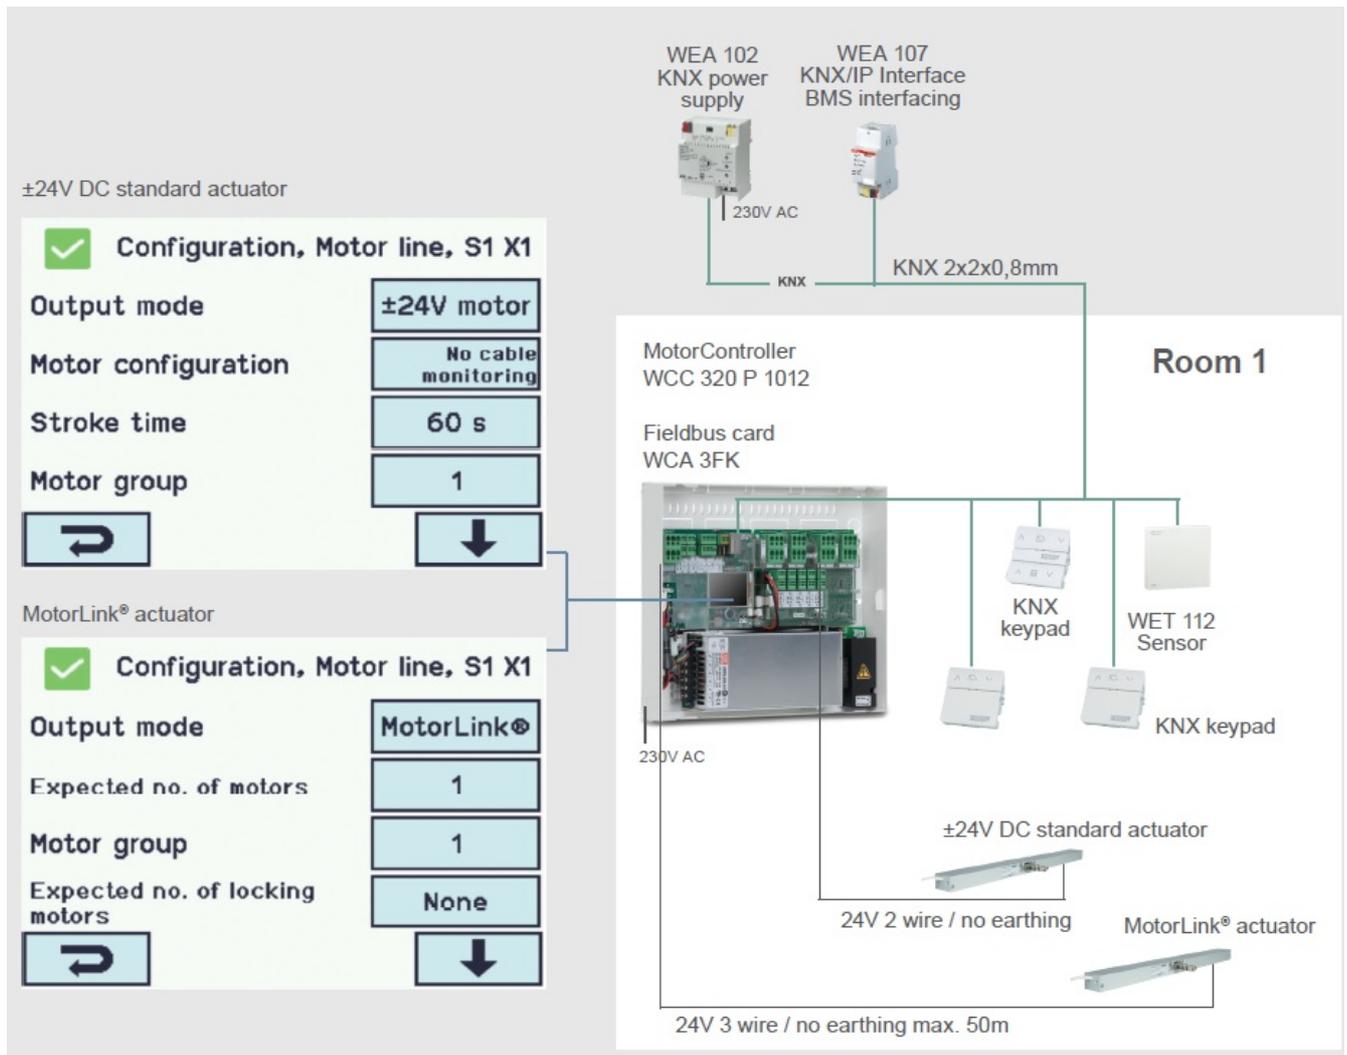

Example 5: WCC 320 P 1012 expanded with BACnet MS/TP / Modbus RTU/RS485 card or BACnet-IP key

Two fieldbus modules can turn the WCC MotorController into a BACnet MotorController supporting either:

- BACnet MS/TP or Modbus RTU/RS485
- BACnet IP or Modbus TCP
- BACnet configuration is easily done in the BACnet menu on the touch display.
- Download PICS / Modbus register description from www.windowmaster.com.

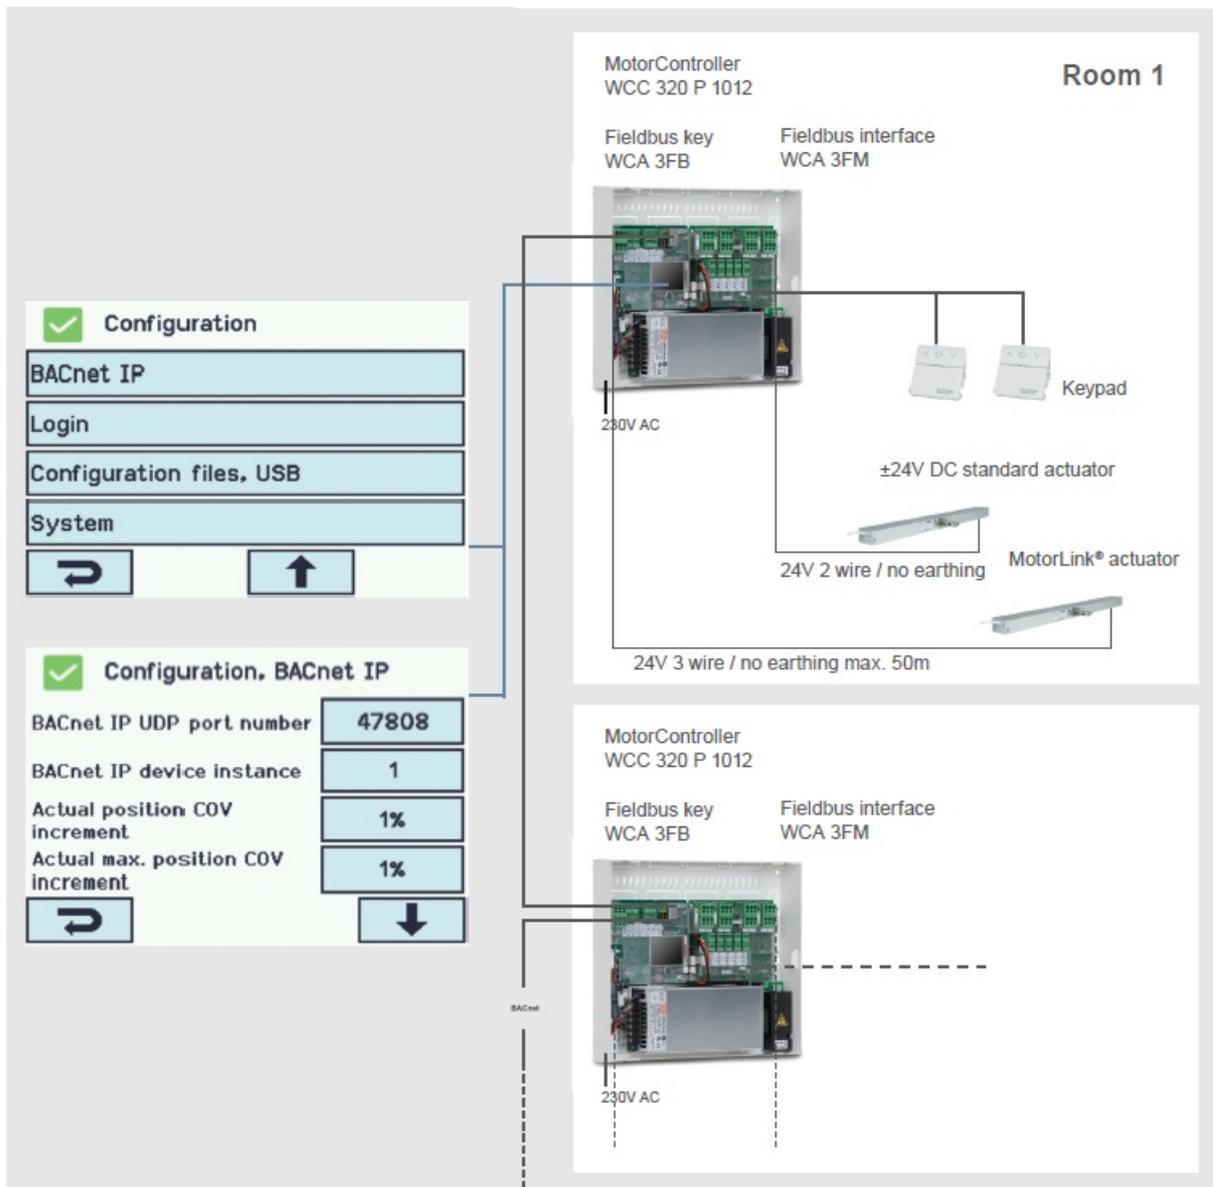

Technical specifications

Technical specifications							
Output current	WCC 310: 10A / WCC 320: 20A						
Motor lines	2, 6 or 10 motor lines A line can be either a ±24V standard motor line or a MotorLink® motor line.						
Primary voltage	230V AC, 50Hz (85-264V AC, 47-63Hz)						
Actuator secondary voltage	<table border="0"> <tr> <td>Nominal voltage</td> <td>24V DC (±15%)</td> </tr> <tr> <td>Open circuit voltage at 230V AC (no load)</td> <td>27,6V DC @ 20°C</td> </tr> <tr> <td>Ripple at max load</td> <td>max 6% (3,5Vpp)</td> </tr> </table>	Nominal voltage	24V DC (±15%)	Open circuit voltage at 230V AC (no load)	27,6V DC @ 20°C	Ripple at max load	max 6% (3,5Vpp)
Nominal voltage	24V DC (±15%)						
Open circuit voltage at 230V AC (no load)	27,6V DC @ 20°C						
Ripple at max load	max 6% (3,5Vpp)						

Power consumption	WCC 310: min 2W1, typ. 4.2W2. At max load 305W WCC 320: min 2W1, typ. 5W3. At max load 605W 1) min.: 1 MotorLink® actuator 2) min.: 20 MotorLink® actuators + rain sensor 3) min.: 40 MotorLink® actuators + rain sensor
Inrush current on primary site	70A < 5ms Max 3 x WCC 310/320 per 10 A supply group. Circuit breaker “C” characteristic.
Leakage current	max 1.2mA @ 240VAC
AUX	24V DC, 230 mA
Operating conditions	-5°C – +45°C, for indoor installation, the controller may not be covered
Switch-on duration	ED 40% (4 min. per 10 min.)
Connection cable	Actuators Flexible max 6mm ² / solid max 10mm ² , max. 2V power loss. MotorLink® actuator or however cables max. 50m Other components Min 0,2mm ² / max 1,5mm ²
Size	355 x 320 x 76mm (WxHxD)
Material	Lacquered metal housing for surface mounting
Colour	White (RAL 9010)
Weight	WCC 310: 4kg / WCC 320: 4.8kg
IP rating	IP20
Delivery includes	MotorController
Spare parts	See the spare part list on our website www.windowmaster.com under "Products"
Note	We reserve the right to make technical changes

Max numbers of actuators per motor line and MotorController

- The table shows the maximum number of actuators, which can be connected per motor line and MotorController depending on the type of actuator ($\pm 24V$ standard or MotorLink® actuator) and MotorController.
- **Notice:** For actuators with MotorLink® always max. 4 actuators per motor line. The total power consumption of all the connected actuators must not exceed 10A for WCC 310 and 20A for WCC 320.

WCC 310 / WCC 320 PLUS – maximum numbers of actuators

Actuator type	Per motor line		Per WCC 310 P 1012		Per WCC 320 P 1012	
	±24V	MotorLink®	±24V	MotorLink®	±24V	MotorLink®
WMD 820-1	10	4	10	10	20	20
WMD 820-2	10	4	10	10	20	20
WMD 820-3	9	3	9	9	18	18
WMD 820-4	8	4	8	8	20	20
WMS 306-1	10	4	10	10	20	20
WMS 306-2	10	2	10	10	20	20
WMS 306-3	9	3	9	9	18	18
WMS 306-4	8	4	8	8	20	20
WMS 309-1	10	4	10	10	20	20
WMS 309-2	10	2	10	10	20	20
WMS 309-3	9	3	9	9	18	18
WMS 309-4	8	4	8	8	20	20
WMS 409 xxxx 01	5	–	5	–	10	–
WMS 409-1	5	4	5	5	10	10
WMS 409-2	4	2	4	4	10	10
WMS 409-3	3	3	3	3	9	9
WMS 409-4	4	4	4	4	8	8
WMU 831 / 836 / 851-1	10	4	10	10	20	20
WMU 831 / 836 / 851-2	10	4	10	10	20	20

WMU 831 / 836 / 851-3	9	3	9	9	18	18
WMU 831 / 836 / 851-4	8	4	8	8	20	20
WMU 861-1	8	4	8	8	16	16
WMU 861-2	8	2	8	8	16	16
WMU 861-3	6	3	6	6	15	15
WMU 861-4	8	4	8	8	16	16
WMU 842 / 852 / 862 / 882-1	4	4	4	4	8	8
WMU 842 / 852 / 862 / 882-2	4	2	4	4	8	8
WMU 842 / 852 / 862 / 882-3	3	3	3	3	6	6
WMU 842 / 852 / 862 / 882-4	4	4	4	4	8	8
WMU 863 / 883-1	3	3	3	3	6	6
WMU 863 / 883-2	2	2	2	2	6	4
WMU 863 / 883-3	3	3	3	3	6	6
WMU 863 / 883-4	–	–	–	–	4***	4***
WMU 864 / 884-1	2	2	2	2	4	4
WMU 864 / 884-2	2	2	2	2	4	4
WMU 864 / 884-3	–	–	–	–	3***	3***
WMU 864 / 884-4	–	–	–	–	4***	4***
WMU 885 / 895-1	2	2	2	2	4	4
WMU 885 / 895-2	2	2	2	2	4	4
WMU 885 / 895-3	–	–	–	–	3***	3***
WMU 885 / 895-4	–	–	–	–	4***	4***


Continued on the next page

WCC 310 / WCC 320 PLUS – maximum numbers of actuators (continued)						
Actuator type	Per motor line		Per WCC 310 P 1012		Per WCC 320 P 1012	
	$\pm 24V$	MotorLink®	$\pm 24V$	MotorLink®	$\pm 24V$	MotorLink®
WMX 503 / 504 / 523 / 526-1	20	4	20	20	40	40
WMX 503 / 504 / 523 / 526-2	20	2	20	16	40	20
WMX 503 / 504 / 523 / 526-3	18	3	18	18	39	30
WMX 503 / 504 / 523 / 526-4	20	4	20	20	40	40
WMX 803 / 804 / 813 / 814 / 823 / 826-1	10	4	10	10	20	20
WMX 803 / 804 / 813 / 814 / 823 / 826-2	10	2	10	10	20	20
WMX 803 / 804 / 813 / 814 / 823 / 826-3	9	3	9	9	18	18
WMX 803 / 804 / 813 / 814 / 823 / 826-4	8	4	8	8	20	20
WML 820 / 825	10	0	10	0	20	0
WML 860-1	10	4	10	10	20	20
WML 860-2	10	2	10	10	20	20
WML 860-3	9	3	9	9	18	18
WML 860-4	8	4	8	8	20	20
WMB 801 / 802*	Actuators with a total of max. of 4A can be connected to the locking actuator					
WMB 811 / 812 * **	10	2	10	10	20	20
* Do not exceed the total power consumption of the motor line						
** When having two locking actuators on one motor line use: 1 x WMB 811 and 1 x WMB 812						
*** When the motor line is configured as 20A						

MotorLink® combinations: Actuator variants on one MotorLink® motor line

1. When connecting window actuators one should pay attention to:

- The max current load of the MotorControllers is 10A per motor line. The simultaneously max current consumption of all motor lines must not exceed 10A on a WCC 310 and 20A on a WCC 320. Actuators with MotorLink®: max 4 actuators per motor line.
 - **The cable length and cross section:** max voltage drop 2V in the cable, however max distance between the MotorController and the window actuators is 50m
2. Aside from window actuators; espagnolette actuators type WMB 811 / 812 (one single or two double actuators) can be connected to the window. When connecting an espagnolette actuator each window must have its own motor line.

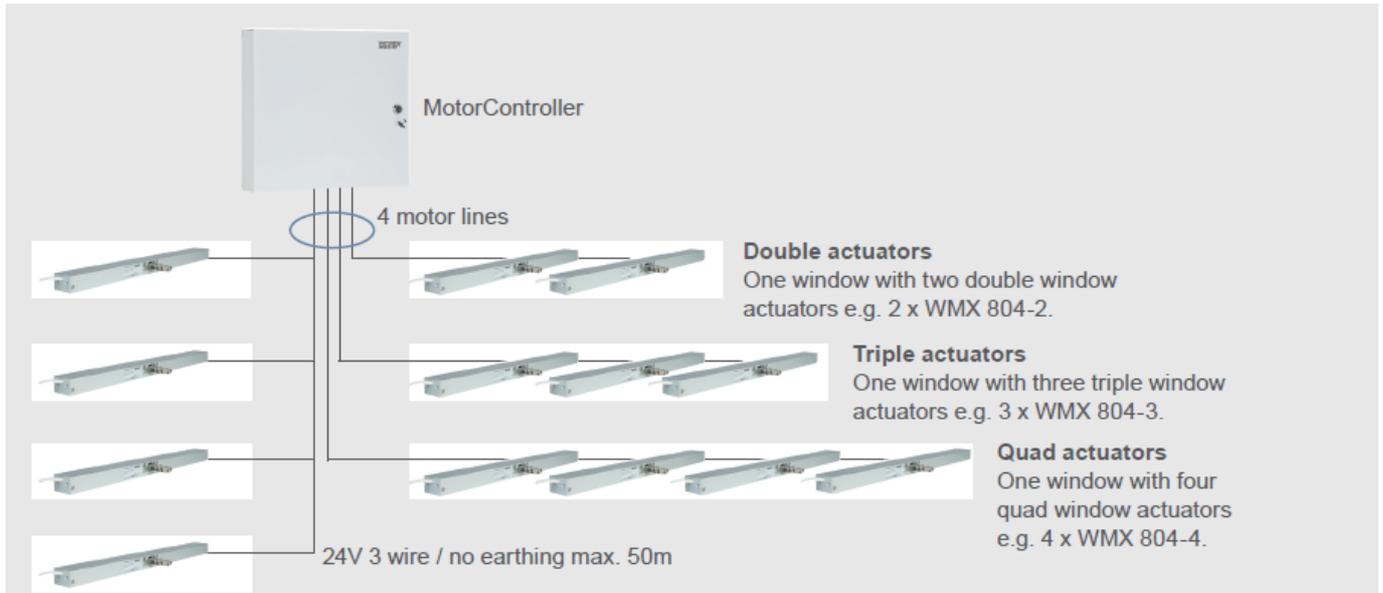

Single actuator

- One window with one single window actuator e.g. 1 x WMX 804-1.
- Up to four windows with each one window actuator can be connected e.g. 4 x WMX 804-1.

MotorController

WCC 310 / 320 PLUS MotorController

Variants	Number of motor lines	Number of inputs	Item no.
MotorController 10A	2 motor lines each 10A (in total max . 10A)	2 inputs	WCC 310 P 0202
MotorController 10A	6 motor lines each 10A (in total max . 10A)	12 inputs	WCC 310 P 0612
MotorController 10A	10 motor lines each 10A (in total max. 10A)	12 inputs	WCC 310 P 1012
MotorController 20A	2 motor lines each 10A (in total max . 20A)	2 inputs	WCC 320 P 0202
MotorController 20A	6 motor lines each 10A (in total max . 20A)	12 inputs	WCC 320 P 0612
MotorController 20A	10 motor lines each 10A (in total max. 20A)	12 inputs	WCC 320 P 1012

Accessories	Item no.
Fieldbus card with field bus interface to KNX	WCA 3FK
Fieldbus card with field bus key to BACnet-IP	WCA 3FB
Fieldbus card with field bus interface to BACnet MS/TP or Modbus RTC/RS485	WCA 3FM
Keypad, flush mounting	WSK 100 1161
Keypad, type FUGA, surface mounting (DK version)	WSK 102
Keypad, flush mounting (CH version)	WSK 300
Room thermostat	WLA 110
Room thermostat KNX: temperature, CO2 and humidity	WET 112
Wind/rain sensor	WLA 330
Rain sensor	WLA 331
Weather station	WOW 600
USB stick for log-data, back-up and firmware updates	WCA 304
USB stick for NV Embedded®	NVE Dongle
Comfort keypad for 1 window or 1 window group	WSK 110 0A0B
Comfort keypad for 2 windows or 2 window groups	WSK 120 0A0B 0A0B

Documents / Resources

	<p>WINDOW MASTER WCC 310 P 1012 Motor Controller [pdf] User Manual WCC 310 P 1012 Motor Controller, WCC 310, P 1012 Motor Controller, 1012 Motor Controller, Motor Controller, Controller</p>
---	--

References

- [W M Indoor climate solutions | Passive ventilation | Improve indoor air quality](#)
- [W M Indoor climate solutions | Passive ventilation | Improve indoor air quality](#)
- [User Manual](#)