



# Wiseasy R1 Payment Card Reader User Manual

[Home](#) » [Wiseasy](#) » Wiseasy R1 Payment Card Reader User Manual 

## Contents

- [1 Wiseasy R1 Payment Card Reader](#)
- [2 Safety Alert](#)
- [3 FCC Statement](#)
- [4 Product Details](#)
- [5 Main Specifications](#)
- [6 Bluetooth Connection](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)



**Wiseasy R1 Payment Card Reader**



## Safety Alert

- Do not place the terminal in extremely hot or cold conditions.
- Do not place terminal together with computer disc, credit card, travel card or any other magnetic items; otherwise, the information stored in magnetic cards will be affected.
- Do not place the terminal in fire.
- Do not disassemble the terminal or any accessories by yourself.
- Please use a moist and anti-static cloth to clean the terminal screen.
- Warning: Please replace the batteries with the same type and rating to avoid battery explosion.
- Do not expose the battery in strong direct sunlight, near heat sources or any similar conditions.
- Please recycle or dispose of old, weak, or worn batteries in accordance with local, regional, or national law or regulation.
- Do not use detergent with chemical or scrub particle which may damage the terminal body or screen.
- Please keep the terminal in a safe place and avoid crush or squeeze that may cause a damage on screen or camera.
- When the user use the third party's root tool or update with unauthorized operation system, it will bring risk to the normal operation system.

## FCC Statement

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Note : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates,uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off


and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### **FCC Radiation Exposure Statement:**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

### **Product Details**

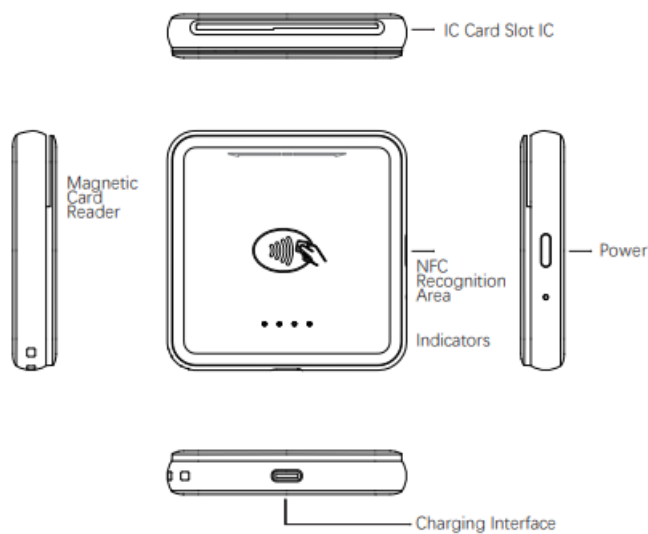

1. NFC Recognition Area: to recognize NFC card
2. Indicators: indicating terminal working status
3. Power: long press to power on/off; short press to activate or shut down the screen
4. .IC Card Slot IC: to swipe IC card
5. Magnetic Card Reader: to swipe magnetic Card
6. Charging Interface: to insert micro USB 5 pin plug of charger

### **Main Specifications**

- CPU 32-bit RISC Core ARMv7-M
- Memory 4M flash , 128K RAM
- BT BT3.0 BLE4.2
- NFC 13.56MHz
- Magnetic Card Reader Track 1/2/3
- IC Card Reader ISO7816
- Battery 3.7V,550mAh

### **Bluetooth Connection**

1. Install the WPOS APP on the terminal product connected to R1.
2. Bluetooth connect: open the APP and click "Bluetooth" on the main interface to the Bluetooth connection, and click "Refresh" to refresh the list of Bluetooth device.
3. Then click the name of the device to be connected in the list to connect. After the connection is successful, the device name will be displayed.
4. After the connection is successful, the blue light on the far right of the device is on.


### Bluetooth Disconnect

1. Click "DeviceName" and a dialog box will pop up. Click "OK" and the Bluetooth connection will disconnect.
2. After the connection is disconnected, the blue light on the far right is blinking.

### Transaction

1. Click "Purchase" on the main interface. If there is no Bluetooth connection, it will jump to the Bluetooth connection interface; otherwise, it will enter the input amount interface. After entering the amount, click "OK" to enter the card reading interface.
2. Hold your bank card close to the card reader.
3. Online trading, showing trading results. Click "OK" to return to the main interface.

### Documents / Resources

	<p><a href="#">Wiseasy R1 Payment Card Reader</a> [pdf] User Manual R1, 2AXOJ-R1, 2AXOJR1, R1 Payment Card Reader, Payment Card Reader, Card Reader, Reader</p>
---	---