

WISFOX K31G+M27 2.4G Wireless Keyboard and Mouse **Combo User Manual**


Home » WISFOX » WISFOX K31G+M27 2.4G Wireless Keyboard and Mouse Combo User Manual



Contents

- 1 WISFOX K31G+M27 2.4G Wireless Keyboard and Mouse Combo User
- 2 Product Specification
- 3 You will receive
- 4 FAQ:
- 5 How to repair the keyboard to the USB receiver
- 6 How to repair the mouse to the USB receiver
- 7 Step 3: Turn on the mouse and wait for 3 seconds.
- 8 Instruction of the Multi-function keys
- 9 WARNING
- **10 WARRANTY COVERAGE**
- 11 Note
- 12 Read More About This Manual & Download PDF:
- 13 Documents / Resources
- **14 Related Posts**

WISFOX K31G+M27 2.4G Wireless Keyboard and Mouse Combo User Manual

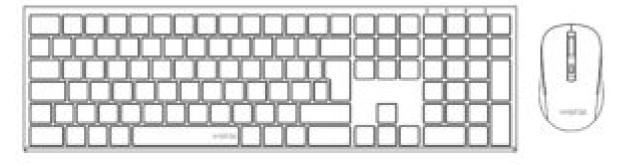

Product Specification

Receiver type: USB Nano Receiver

Standby hours:900 hours

Working time:180 hours of typing

Working distance: 10 meters from the receiver without obstruction Power: One AA battery for mouse, two AAA

batteries for keyboard(NOT INCLUDED)


You will receive



1.





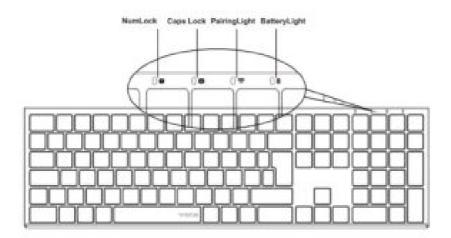

FAQ:

Q1: What should I do if the keyboard become sticky after a period of usage?

A 1: This usually happens due to low power .Please replace the battery on tihe keyboard and try again.

Q2: What should I do if I can't type with the keyboard?


A2: First,please make sure whether the keyboard can be turned on. If you can't turn on the keyboard, please change the battery and try again, if it still won't work, please contact us if you can turn on the keyboard just it won't type, please try repairing the keyboard with the USB receiver.

Q3: What should I do if my mouse stopped working?

A3: First, pl-ease confirm whether the mouse can be turned on. If you can't successfully turn on the mouse, change the !battery and try again.

How to repair the keyboard to the USB receiver


Step 1: Press and hold the "ESC" and the "="key together for 3-5 seconds.

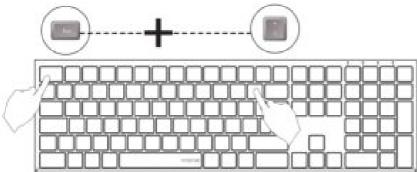

Step 2: Wait until the Pairing Light turns on.



Step 3: Insert the USB receiver and place the keyboard as closely as possible to the USS receiver..

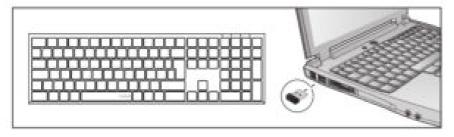

How to repair the mouse to the USB receiver


Step1 :Take out the batteries from the mouse, wait for 3 seconds, for the mouse to enter a full reset.



Step 2: Put in the batteries and wait for 5 seconds.



Step 3: Turn on the mouse and wait for 3 seconds.

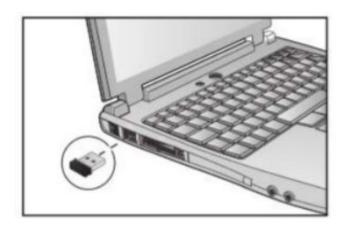


Step 4: The mouse will connect.

Instruction of the Multi-function keys

Esc F1 F2 F3 F4 F5 F6 F7 F8 F9 F10 F11 F12 - "A.- I Press ESC-F12 keys directly, you can only use the functions of ESC-F12.



 For using these multimedia functions, you need to press and hold the button "FN" first, and then press the corresponding function button.



- Do not expose this product to water. Prevent liquid from entering this product. Water or humidity may cause shortcircuit and damage this keyboard.
- Do not drop or hit this product. Shocks may damage the components inside.
- Do not put this product near extreme heat or fire.
- Do not try to disassemble or modify this product on your own.

WARRANTY COVERAGE

30-day unconditional money-back guarantee. If you are not completely satisfied with this product for any reason. WisFox will gladly refund your purchase price within 30 days of purchase (from the date of retail purchase). 1-year limited warranty. ONE(1) YEAR from the date of retail purchase. If a hardware defect arises (not due to personal alterations or attempted repairs) and a valid claim is received within the Warranty Period, WisFox will either:

- 1. Repair the product at no charge.
- 2. Exchange the product with a product that is new or which has been manufactured from serviceable used parts and is at least functionally equivalent to the original product.
- 3. Refund the purchase price of the product. WisFox may request that you send the product back to our address for the replacement/refund. The location will change according to your area of residence. Please contact our customer service for confirmation.

WisFox WILL NOT cover the shipping cost.

WisFox only offers warranty service for our official Amazon store and distributors. We need the order information, for example, the Amazon order number to verify your order.

Note

The multimedia keys are for Win 8 and Win 1 0, for other systems, there may be no function for some combined keys.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC

Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radiorry technician for help

Changes or modifications not expressly approved by the party

responsible for compliance could void the user's authority to operate the equipment.


This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference
- 2. This device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.

Read More About This Manual & Download PDF:

Documents / Resources

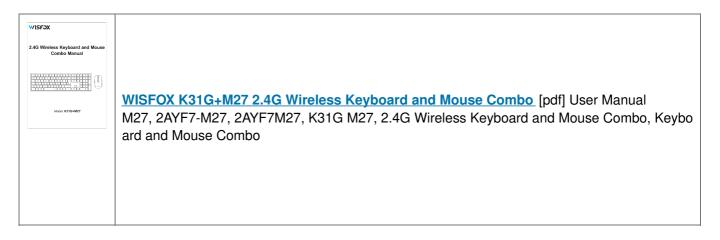

Manuals+,