



Home » WISHOLY » WISHOLY X3 One Step Screen Mirroring Owner's Manual



Contents [hide]

- 1 WISHOLY X3 One Step Screen Mirroring
- 2 Specifications
- 3 Product Description
- 4 Technical Details
- 5 Product Usage Instructions
- 6 Frequently Asked Questions
- 7 Documents / Resources
 - 7.1 References

WISHOLY

WISHOLY X3 One Step Screen Mirroring



Specifications

• Model: WH_202506_V1.2


• Connection: WiFi, Cellular Data

• **Password**: 1234 (for iOS), 12345678 (for Android)

Product Description



Effortless screen mirroring with WiFi 6 Connection

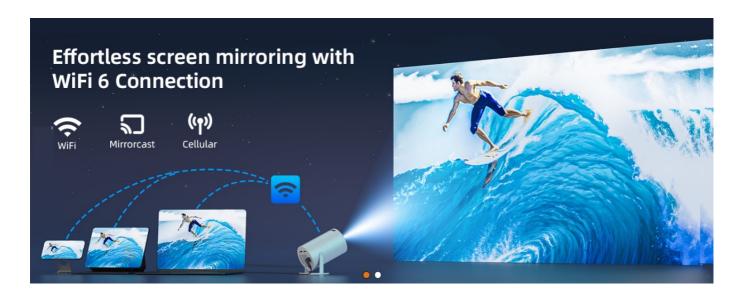

Hassle-Free Setup




Endless Entertainment with a TV Stick!

Copyrighted videos must be played through a Fire TV Stick, a Roku, or a computer.



Efficient Sleep Mode

Auto shut-down saves energy and ensuring uninterrupted sleep

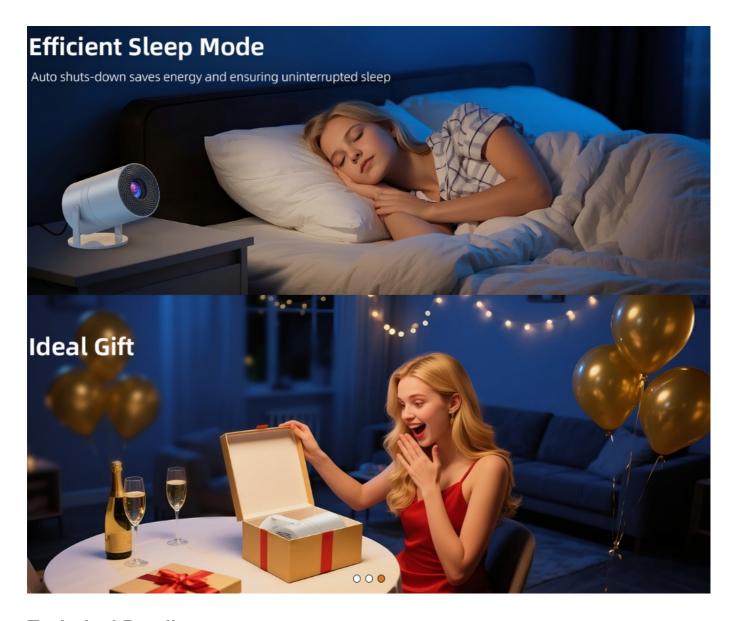

Technical Details

Brand Name	WISHOLY			
Item Weight				
Product Dime nsions				
Item model nu mber	X3			
Color Name	Name white			
Special Featur es	Built-In Speaker, Portable, Digital Keystone Correction, Built-In Cooling System, Built-In Wi-Fi			

Product Usage Instructions

One-Step Screen Mirroring (Quick Connection)

- 1. On the projector: Go to Main Menu > Mirroring > iOS One-Tap Projection.
- 2. On your iOS device: Open Control Center, tap Screen Mirroring (ensure WiFi is on for both devices).
- 3. Select WISHOLY_XXXX from the list and enter password 1234. Screen mirroring will start automatically.

Home WiFi Situation (For Indoor Use)

- Turn on WiFi on your devices (ensure both phone and projector are on the same network).
- 2. Open the control center, enable Screen Mirroring, and select WISHOLY_XXXX.
- 3. Screen mirroring should be successful.

Cellular Data Situation (For Outdoor Use)

- 1. Turn on cellular data (for online content).
- 2. Turn on WiFi on your phone and connect to the projector's WiFi (Device ID: WISHOLY_XXXX, Password: 12345678).
- 3. Open the control center, enable Screen Mirroring, and select WISHOLY_XXXX.
- 4. Screen mirroring should be successful.

Home WiFi Situation for Android (For Indoor Use)

- Turn on WiFi on your devices (ensure both phone and projector are on the same network).
- 2. Enable Multi-screen or Screen Mirroring on your Android device.
- 3. Wait and select WISHOLY_XXXX.
- 4. Screen mirroring should be successful.

Cellular Data Situation for Android (For Outdoor Use)

1. Turn on cellular data (for online content).

- 2. Connect your phone to the projector's WiFi (Device ID: WISHOLY_XXXX, Password: 12345678).
- 3. Enable Multi-screen or Screen Mirroring and select WISHOLY XXXX.
- 4. Screen mirroring should be successful.

Frequently Asked Questions

How do I troubleshoot if screen mirroring is not working?

If screen mirroring is not working, ensure that both devices are connected to the same network and that the correct password is entered. You can also try restarting both the projector and your device before attempting to mirror the screen again.

Documents / Resources



WISHOLY X3 One Step Screen Mirroring [pdf] Owner's Manual X3, X3 One Step Screen Mirroring, X3, One Step Screen Mirroring, Screen Mirroring, Mirroring

References

- User Manual
 - Mirroring, One Step Screen Mirroring, screen mirroring, WISHOLY, X3, X3 One Step Screen
- WISHOLY Mirroring

Leave a comment

Your email address will not be published. Required fields are mark
--

Comment *								

Name
Email
Website
☐ Save my name, email, and website in this browser for the next time I comment.
Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.