

WiZ 348604389 Portable Button Owner's Manual

Home » wiz » WiZ 348604389 Portable Button Owner's Manual

Contents


- 1 WiZ 348604389 Portable **Button**
- 2 Instruction
- 3 What does it do?
- 4 Important information
- 5 FCC
- 6 Documents / Resources
 - **6.1 References**
- **7 Related Posts**



WiZ 348604389 Portable Button



Instruction

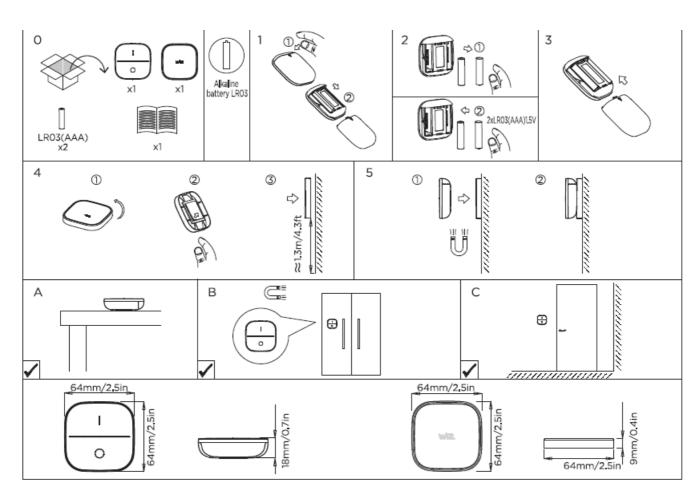

What does it do?

The WiZ portable button enables a direct control of your WiZ Lights, without going through your Wi-Fi router. Short press the "I" button to turn on the light.

Short press the "O" button to turn off the light.

Press and hold the "I" button for more than 1 second to brighten the light. Press and hold the "0" button for more than 1 second to dim the light. When your WiZ lights are off, short press the "I" button to turn them on. Your light will not turn on when you press and hold the "I" button. It must be a short press.

Download the latest WiZ app and follow the in-app guide to discover more customized button functions.

The control range is around 15 meters/SO feet in a normal indoor environment with partitions and walls – it can even go up to way further with clear line of sight. The exact distance depends on the surrounding environment as

obstacles may weaken the signal.

 
Important information

- For indoor use only. Do not try to open or repair it (except for battery replacement).
- · Store in dry location only.
- Use only with specified batteries; do not use rechargeable batteries; do not use different brand or new / old batteries together; replace the exhausted batteries in time.
- This WiZ portable button is not a toy.
- · Keep it away from water and sources of heat.

Product: WiZ portable button

- Reference 9290035095
- · Location For indoor use
- Ambient temperature -I0° C- +50"C/-14"F- +722"F
- Battery type LR03 (AAA) 7.5 Vd.c x 2

Symbols explanation





Indoor use only

FCC

This device complies with Part 15 of the FCC Rules / Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off

and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Wi-Fi", the Wi-Fi logo, the Wi-Fi CERTIFIED logo are registered trademarks of Wi-Fi Alliance.

Wi-Fi CERTIFIED", WPA2™ are trademarks of Wi-Fi Alliance.

Google, Google Play and the Google Play logo are trademarks of Google LLC.

The Apple logo and Siri are trademarks of Apple Inc., registered in the U.S. and other countries and regions. App Store is a service mark of Apple Inc.

All product names, logos and brands are property of their respective owners.

Any use of such marks by Signify is under license.

Documents / Resources

WiZ.	WiZ 348604389 Portable Button [pdf] Owner's Manual 348604389 Portable Button, 348604389, 348604389 Button, Portable Button, Button
WiZ.	WiZ 348604389 Portable Button [pdf] User Manual 348604389 Portable Button, 348604389, Portable Button, Button

References

• w wizconnected.com

Manuals+,