



WIZARPOS Q2 Glass Affordable Android Mobile User Manual

[Home](#) » [wizarpos](#) » WIZARPOS Q2 Glass Affordable Android Mobile User Manual 

wizarPOS

Q2 Smart POS
User Manual



Contents

- 1 Q2 Glass Affordable Android Mobile
- 2 Packing List
- 3 Font View
- 4 Left/Right View
- 5 Back View
- 6 Operating instructions
- 7 Specification
- 8 Safety Precaution for Use
- 9 Trouble shooting
- 10 WizarPOS Warranty Regulations
- 11 Description of Environmental Protection
- 12 wizarPOS repair records
- 13 Documents / Resources
- 14 Related Posts

Q2 Glass Affordable Android Mobile

 
Thank you for using the product of WizarPOS !

Intelligent + Security




Packing List

- 1. Q2 Terminal
- 2. 5V 2A Adapter
- 3. DC Cable
- 4. 7.2V Lithium Battery

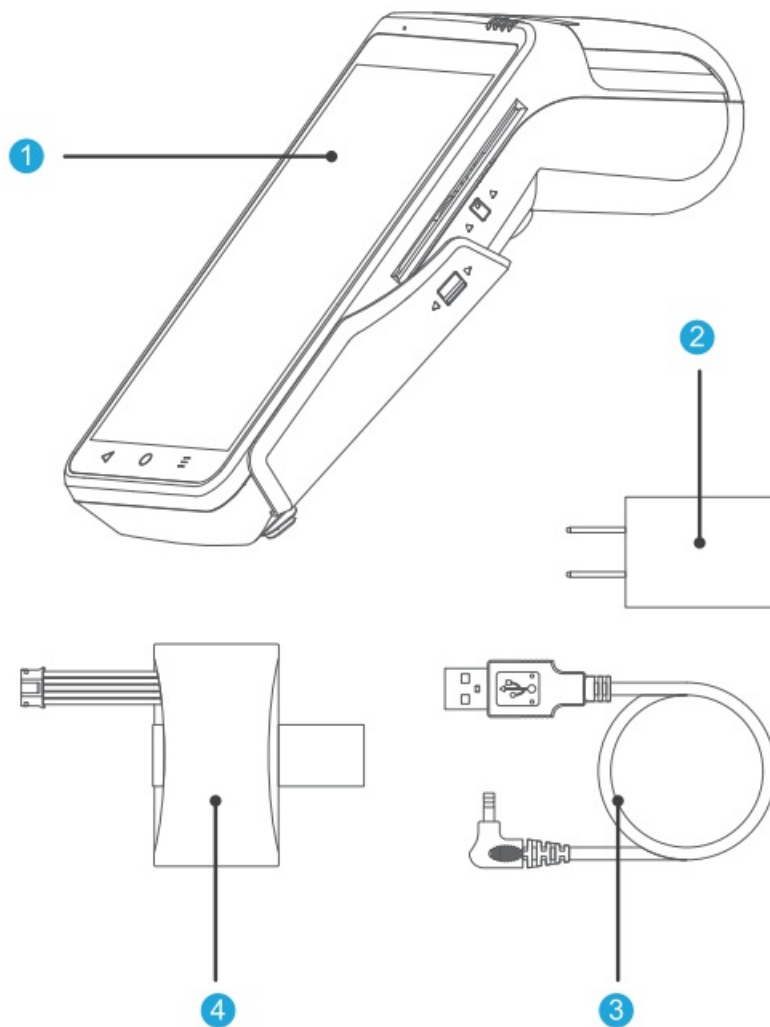



Font View

 1. 5.5" Capacitive Touch Screen
2. MIC
3. 4 Indicators
4. Magnetic Card Reader
5. Menu Button
6. Home Button
7. Return Button

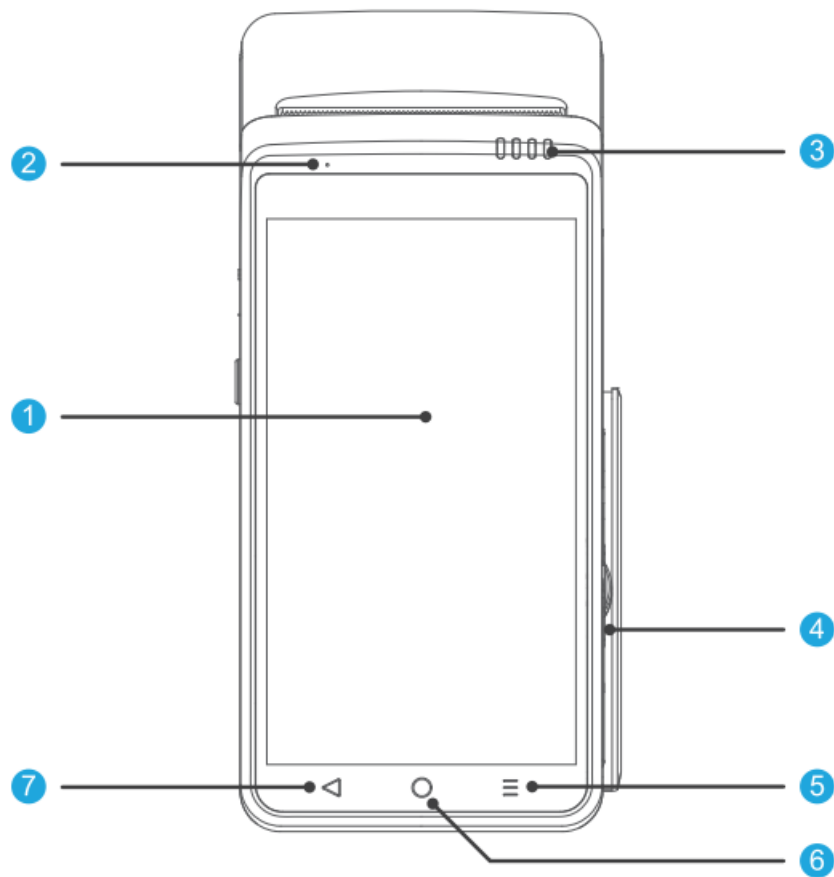


Left/Right View

  - 1. Volume Keys
- 2. Power Key
- 3. Micro USB Port
- 4. DC Port
- 5. IC Card Reader

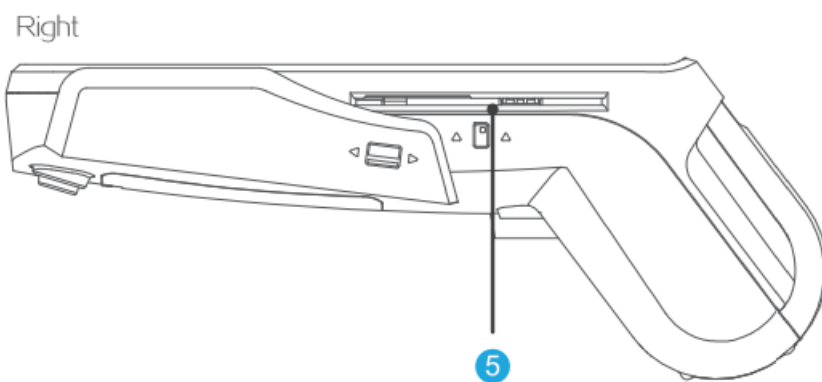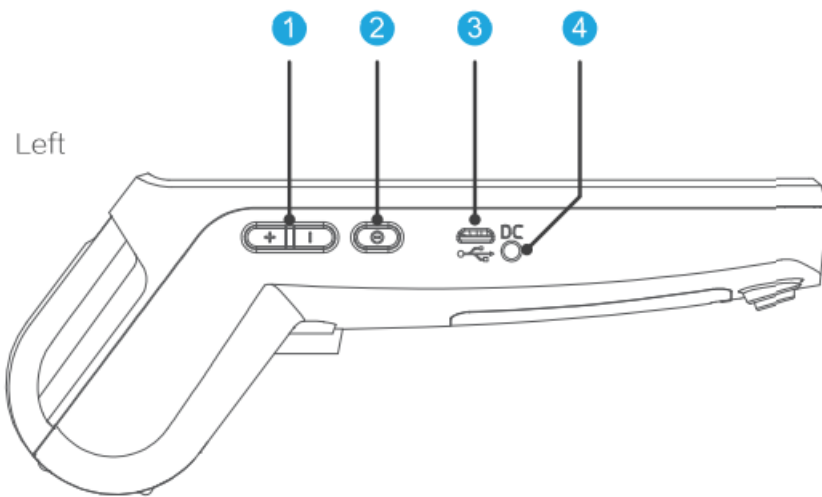

1. 58mm Thermal Printer
2. Contactless Card Reader

 Top

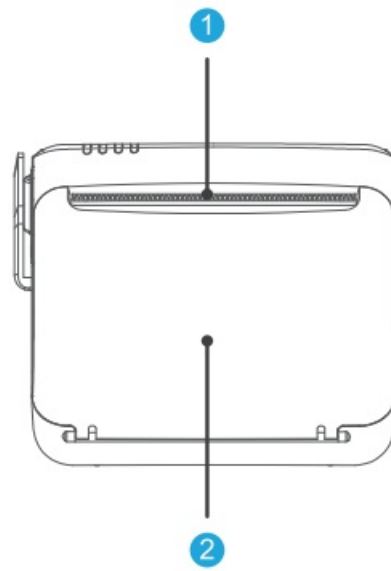


Bottom




Back View

 1. Speaker
2. Camera
3. Battery Compartment Cover

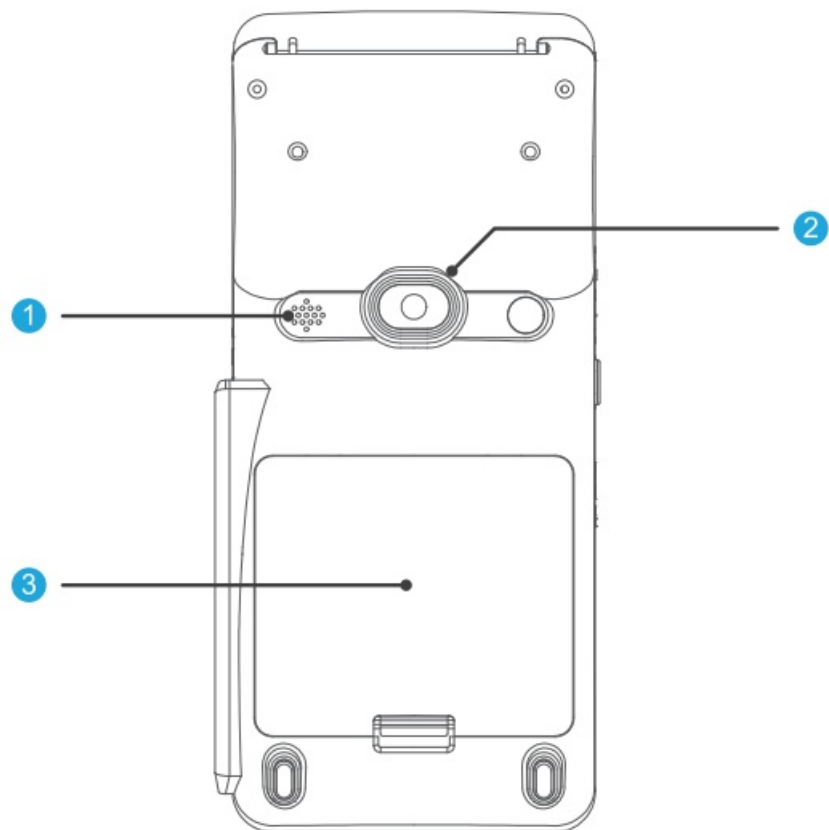

 - 1. SAM card slot
- 2. Micro SIM Card Slot
- 3. TF Card Slot
- 4. Battery Connector

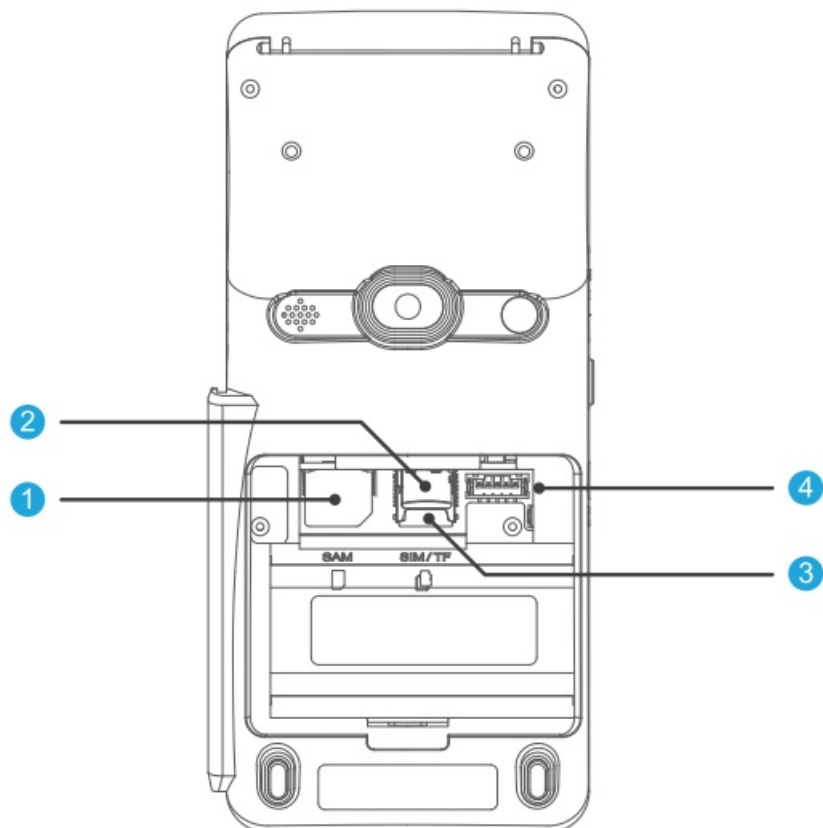

1. Before use

- a) Please insert the battery first, and fix the battery cover.
- b) Please charge if the battery has not enough power.
- c) Load the paper roll, and close the printer cover.

2. Power on and off

- a) Press “power” key for 3 seconds, you can power on the POS.
- b) After secure booting, it will display desktop, you can operate the POS.
- c) You can turn oNoff the LCD by quickly press the “Power” key.
- d) When the POS is power on, press “power” key for 3 seconds, it will display the power off menu, follow the menu to power off the POS.

3. System setup

- a) Pull down the status bar at the top of desktop, it will display the notification interface.
- b) Click the menu icon in upper right corner of the screen, it will display the function switch interface.
- C) Click the ‘setup” icon, it will display the setup interface. Please setup the POS if needed.

4. Payment operation

Please follow the instructions of your payment APP provider.

5. Bank card operation

- a)Please insert the chip card into the smart card slot with the chip end facing up.
- b) Swipe the magnetic stripe card with magnetic stripe facing to screen, you can bi-directional swipe the card.
- c) Tap the contactless card cbse to the card reader area quickly.





Specification

Specification	Detailed Description
Software Platform	Secure Android 10
Processor	Qualcomm Snapdragon CPU
Memory	1GB RAM, 8GB Flash, Optional 2GB RAM, 16GB Flash
Display	5.5" color LCD with touch panel (720 x 1280)
Printer	58mm High speed Thermal Printer
Scanner (optional)	barcode and 2D barcode scanner
Security Certification	PCI PTS 5.0
Contactless Card	IS014443 Type A & B, Mifare, Contactless EMV Level 1, Mastercard Paypass, Visa Paywave
IC Card	IS07816, EMV Level 1 & Level 2
MSR	IS07811, Track 1/2/3, Bi-direction
Slots	1SAM slot, TF card x 1
Communication	FDD-LTE, TDD-LTE
Audio	Built-in microphone, speaker
USB	Micro USB OTG
Battery	7.2V, 2600mAh
Charging	5V 2A adapter, supports USB charging
Dimension	188 x 85 x 69 mm
Weight	415g (No printing paper)

All features and specifications are subject to change without notice. Contact wizarPOS website for more details.
www.wizarpos.com

Safety Precaution for Use



	Operating temperature -5t-40t (+23F to 104 V)
	Operating humidity 5%-95% No condensation
	Storage temperature -20°C-601C (-4°F to 140F)
	Storage Humidity 10%-93% No condensation



Attention

- Do NOT refit the POS, that is illegal to privately refit financial POS.
- User shall bear the risks of installation and usage of third party APPs.
- The system will became slow if too many APPs installed.
- Pleases use dry and dean cloth to clean the POS, Do NOT use chemical.
- Do NOT expose the POS under heavy sunlight for long time.
- Do NOT use sharp and hard objects to touch the screen.
- Do NOT throw the POS, charger or battery as common household garbage. Please support recycle according to local environment rules.
- Please use the original battery and charger, otherwise that may cause product damage or personal injury.
- Do NOT put the battery into fire, otherwise it will cause explosion.
- The battery is forbidden to immerse, the battery can not be used again after entering the water.
- Do NOT short circuit battery, otherwise that will cause personal injury or battery permanent damaged.
- If battery is deformed or in abnormal heat, stop using it and replace it with new battery.
- Replacing with a wrong model battery may cause an expbsion.

Trouble shooting

Trouble	Trouble shooting
Cannot connect the mobile network	<ul style="list-style-type: none"> ◆ Check whether the function of “data” is open. ◆ Check whether the APN is correct. ◆ Check whether the data service of SIM is activated.
Paper jam	<ul style="list-style-type: none"> ◆ Reload the paper roll, or check if there is crease on paper roll. ◆ Check if the cover of printer is closed. ◆ Check whether the slot is blocked by the receipt of last transaction . ◆ Check if the print roller is missing.
Display unstable	◆ The display may be interfered by instability voltage when charging, please reconnect the plug.
No response	◆ Restart the APP or operation system.
Operation very slow	◆ Please exit APPs which are not necessary.

WizarPOS Warranty Regulations



Product warranty policy

WizarPOS provide after-sales service according to relative laws. Please read the following warranty terms.

1. Warranty period: one year for POS and charger, and 6 months for battery cell.
2. In warranty period, wizarPOS provide free repair/replace service, if the product has non artificial product failures.
3. It's recommended to contact your local distributor firstly for supports.
4. Please show product warranty card with true information.




Warranty limitation clause

Situations due to following reasons are not covered under warranty policies. While we can provide charge service.

1. Without our permission, the POS is maintenance by user.
2. The OS of POS is changed by user without permission from WizarPOS.
3. The trouble is caused by the third party APP which is installed by user.
4. Damage due to improper use which like falling, squeeze, hit, soaking, burning...
5. No warranty card, or cannot provide true information in card.
6. Expiry of guarantee period.
7. Caused by other actions which are forbidden by related laws.

Description of Environmental Protection

List of harmful substances in the product and Ingo of environment-friendly use period

Part	Harmful substances					
	Pb	Hg	8	Cr(VI)	PBB	PBDE
LCD and TP Module	0	0	0	0	0	0
Housing and keypad	0	0	0	0	0	0
PCBA and components		xiDC)		ID	0	0
Accessories	x	0	0	0	0	0
<p>This table is made according to requirement of SST 11364.</p> <p>0 means the harmful substance concentration in the parts is under the limits in GB/T 26572.</p> <p>x means the harmful substance concentration of one or more homogeneous materials in the parts is exceeded the limits in GB/T 26572.</p> <p>NOTE: Parts which marked x are compliant to China RoHS Regulation and EU RoHS Directive.</p>						
<div>  <p>This is environment-friendly use period logo of the product. This logo means that in this period the product will not leak harmful substances in normal usage.</p> </div>						

Repair date	Repair content


After-Sale Service Hotline: 400-608-2601

For more information, please log on to the company's official website <http://www.wizarpos.com>

wizarPOS



Documents / Resources

	<p>WIZARPOS Q2 Glass Affordable Android Mobile [pdf] User Manual Q2 Glass Affordable Android Mobile, Q2, Glass Affordable Android Mobile, Android Mobile</p>
--	--

[Manuals+](#)