



Woan Technology W1601700 SwitchBot Lock User Manual

[Home](#) » [Woan Technology](#) » [Woan Technology W1601700 SwitchBot Lock User Manual](#) 

Contents

- [1 Woan Technology W1601700 SwitchBot Lock](#)
- [2 Package Contents](#)
- [3 Name of Parts](#)
- [4 Preparation](#)
- [5 Safety Information](#)
- [6 Installation Guide](#)
- [7 Step 3: Add Device and Adjust](#)
- [8 Precautions](#)
- [9 LED Indicator Light](#)
- [10 Battery Replacement](#)
- [11 Reset to Factory Settings](#)
- [12 More Functions](#)
- [13 Troubleshooting](#)
- [14 Disclaimer](#)
- [15 Specifications](#)
- [16 Return and Refund Policy](#)
- [17 Contact & Support](#)
- [18 CE Warning](#)
- [19 FCC Warning](#)
- [20 Documents / Resources](#)
 - [20.1 References](#)
- [21 Related Posts](#)

Woan Technology


Woan Technology W1601700 SwitchBot Lock



Package Contents



SwitchBot Lock
Main Body
(Batteries included)

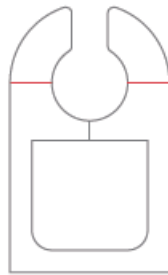

Alignment Card



Spare Double
Sided Tape



SwitchBot Tag



Cross Head
Screwdriver





Thumbturn
Adaptor



User Manual

Name of Parts

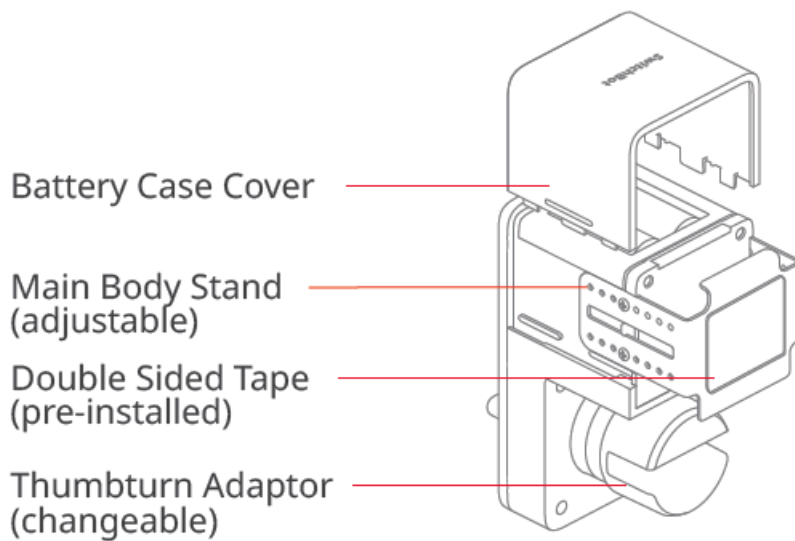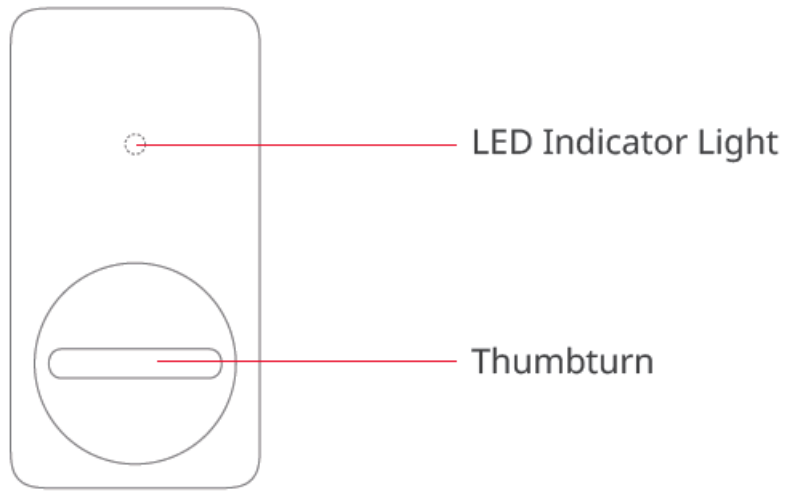

Preparation

- A smartphone or tablet with Bluetooth 4.2 or above.
- Download the SwitchBot app on App Store or Google Play Store.
- Open the SwitchBot app and register for a SwitchBot account or log in directly if you have an account.
- (Optional) If you need to control SwitchBot Lock remotely, receive notifications or use third-party services, you must first set up SwitchBot Hub Mini.
- Cross head screwdriver (included in the package).
- Installation adjustment card (included in the package).
- Soft wiping towel (require user's preparation).
- Neutral detergent (require user's preparation).




Safety Information

- Keep the device away from humid or hot environments, water, and fire sources.
- This product is a precision-based electronic product. Please avoid applying physical damages.
- Do not attempt to disassemble, repair, or modify the device.
- Do not use the device where wireless devices are not allowed.

Installation Guide

Step 1: Clean the Installation Surface


Before installing SwitchBot Lock, please make sure that the surface for installation is free from dirt and dust, or this may weaken the stickiness of the lock and increase the chance of falling later. Use a small amount of detergent to clean the surface, wipe it down with water and wait until it dries.

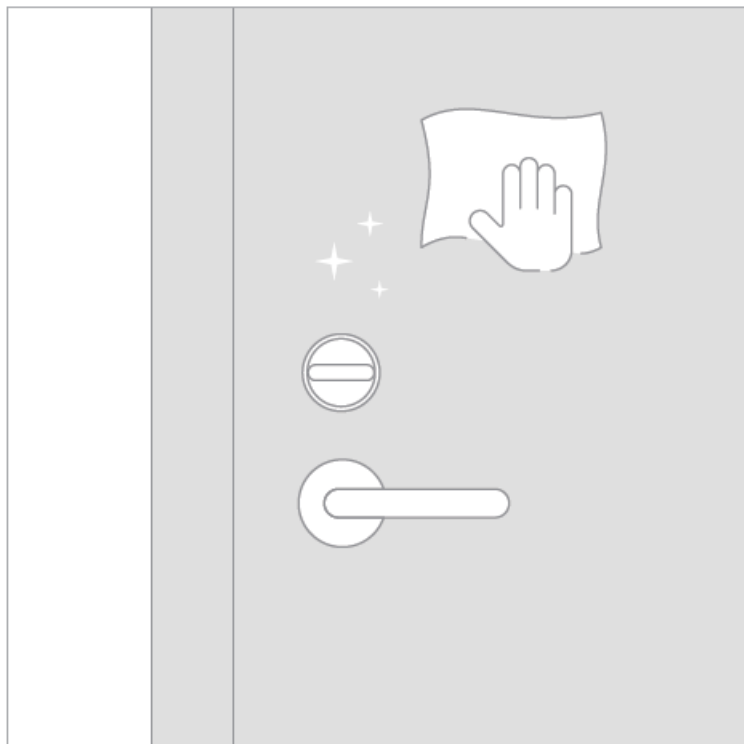


Step 2: Install SwitchBot Lock

1. Choose the thumb turn adaptor of the appropriate size.


The package provides a thumb turn adaptor in 3 different sizes and one of them has already been installed on SwitchBot Lock.

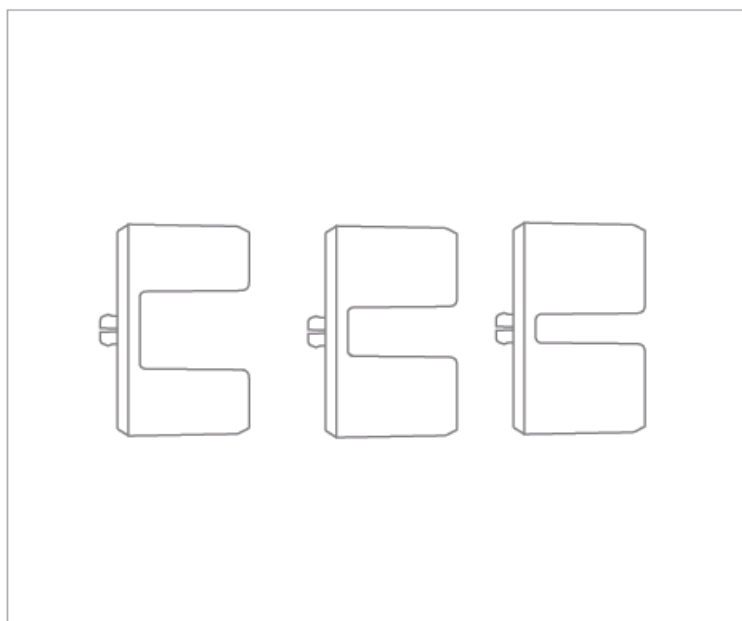

Install the thumb turn adaptor of the right size onto the main body SwitchBot Lock. You should be able to hear a click when it is firmly installed.

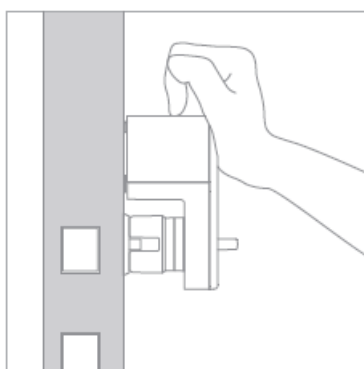


Push SwitchBot Lock's main body against the door for at least 2 minutes.

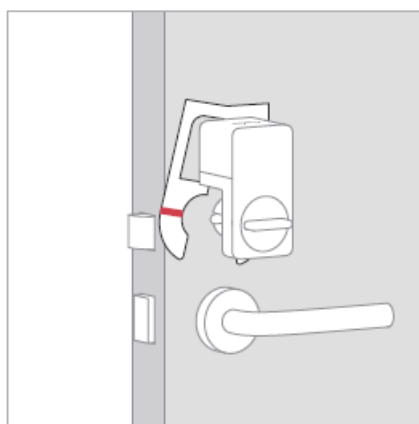

After installing SwitchBot Lock's main body, peel off the two sides of the alignment card. Congratulations! You have completed SwitchBot Lock's installation.

Step 3: Add Device and Adjust

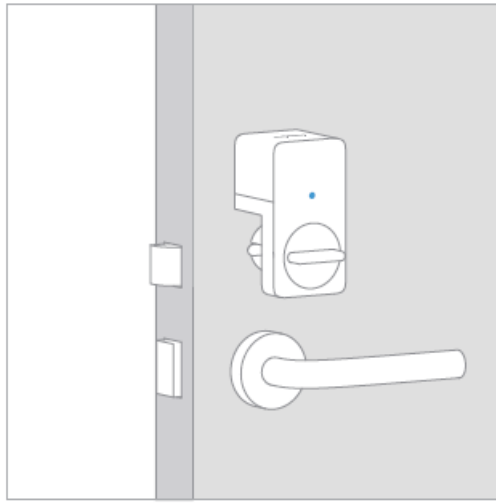

Remove the battery insulation sheet. After SwitchBot Lock gets its power, the LED indicator light on the front will blink, meaning that the device is waiting for pairing.

Open the SwitchBot app and tap the + icon on the top right corner of the homepage, choose the lock icon, and add the device. Please follow the instructions on the app to complete adding the device and adjusting its position.

Precautions

- The product cannot unlock if the battery runs out entirely. Please regularly check on the app or the LED indicator light to ensure that the battery level is not too low and replace it when needed. Please also bring your key to avoid being locked out.
- This product is for indoor use only.
- If you notice any product malfunction, please stop using it immediately and contact our Customer Support Team.

LED Indicator Light

LED Indicator Light	Description
Blue light flashes slowly	Waiting for pairing/ upgrading firmware
Blue light flashes rapidly	Pairing
Blue and red light flash slowly and alternately	Pairing failed/firmware upgrade failed
Steady green light	Successful locking/unlocking
Steady red light	Low battery/unusual activity
Steady blue light	Pause Auto-lock activated

Please visit support.switch-bot.com for more details.

Battery Replacement

When the battery level drops to lower than 20%, the device will notify you by flashing red and making a sound every time you lock/unlock the device. Please replace the 2] CR123A batteries by opening the main body's battery case cover as soon as possible.

Reset to Factory Settings

If you will not be using SwitchBot Lock, please delete it on the Switch Bot app's Lock page. Once the device is deleted, all data you had would reset to its factory settings. Please be careful when doing so.

More Functions

Please visit <https://support.switch-bot.com/hc/en-us/articles/4410510590359> for more details.0



Troubleshooting

Please visit support.switch-bot.com/hc/en-us/sections/4408365197079 for more details.



Disclaimer

This product is only used as a door locking control device and cannot avoid theft completely. In the event of a burglary, the company assumes no responsibility or liability for any loss or damage suffered by any person as a result of using the product.

Specifications

- Color: Black
- Material: PC+ABS
- Size: 111.6 mm x 59 mm x 73.2mm
- (4.39 in x 2.32 in x 2.88 in)
- Weight: 253 g (8.9 oz) (with batteries)
- Power Source: 2 CR123A batteries
- Battery Life: Approximately 6 months
- Operating Environment: Indoor only
- OS Compatibility: iOS 11.0+, Android 5.0+
- Communication Method: Bluetooth 5.0
- Operating Temperature: -10 °C to 45 °C (14 °F to 113 °F)
- Relative Humidity: 10 % to 90 %

Return and Refund Policy

This product has a one-year warranty (which begins from the date of purchase). The situations below do not fit the Return and Refund Policy.

- Intended damage or abuse.
- Inappropriate storage (damages caused by dropping or soaking in water).
- Modify or repair of the product.

- The natural wearing of product.
- Natural disasters.

Contact & Support

Setup and Troubleshooting:

support.switch-bot.com

Support Email:

support@wondertechlabs.com

Feedback: If you have any concerns or problems when using our product, please kindly send feedback from the Profile > Feedback page in the SwitchBot app.

CE Warning

Manufacturer's Name: Woan Technology (Shenzhen) Co., Ltd. This product is a fixed location. To comply with RF exposure requirements, a minimum a separation distance of 20cm must be maintained between the user's body and the the device, including the antenna. Use only the supplied or an approved antenna. This device in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. All essential radio test suites have been carried out.

1. CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS
2. The device complies with RF specifications when the device used at 20cm from your body

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not, expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.


However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction. FCC RF exposure statement: The equipment complies with the FCC Radiation exposure limit set forth for uncontrolled environments. This equipment should be installed and operated

with a minimum distance of 20cm between the radiator and your body.

Documents / Resources

	Woan Technology W1601700 SwitchBot Lock [pdf] User Manual W1601700, 2AKXB-W1601700, 2AKXBW1601700, W1601700 SwitchBot Lock, W1601700, SwitchBot Lock
---	---

References

- [SwitchBot Official Website - Your Simple Switch to a Smart Home – SwitchBot International](#)