

Wobrikosee Rechargeable White Noise Machine



Wobrikosee Rechargeable White Noise Machine User Manual

[Home](#) » [Support](#) » Wobrikosee Rechargeable White Noise Machine User Manual 

Contents

- [1 Wobrikosee Rechargeable White Noise Machine](#)
- [2 Introduction](#)
- [3 Specifications](#)
- [4 Package Includes](#)
- [5 Product Overview](#)
- [6 Features](#)
- [7 Usage](#)
- [8 Care and Maintenance](#)
- [9 Troubleshooting](#)
- [10 Pros and Cons](#)
- [11 Contact Information](#)
- [12 Warranty](#)
- [13 FAQs](#)
- [14 Video-Wobrikosee Rechargeable White Noise Machine](#)
- [15 References](#)
- [16 Related Posts](#)

Wobrikosee

Wobrikosee Rechargeable White Noise Machine



Launch Date: June 20, 2022

Price: \$24.99

Introduction

There are several uses for the Wobrikosee Rechargeable White Noise Machine, which is a small gadget that can help you sleep and relax. It has a sleek look and only weighs 7 ounces, so it's easy to carry and great for use at home or on the go. The built-in lithium-ion battery can be charged and used continuously for up to 20 hours after a full charge. This means that you can use sound treatment all night long without stopping. This machine makes the perfect atmosphere for relaxation with its six sound modes: white noise, fan, ocean, rain, sleep, and heartbeat. It has volume controls that you can change to your liking, and an auto-off timer that makes sure the device turns off when you tell it to. The BPA-free ABS plastic used to make the Wobrikosee machine is fully approved for safety. It's easy and quick to charge because it has a USB-C charging port. The Wobrikosee Rechargeable White Noise Machine is a great way to get a better night's sleep or concentrate while you're on the go.

Specifications

- **Model:** Wobrikosee Rechargeable White Noise Machine
- **Dimensions:** 3.8 x 3.8 x 1.5 inches (Machine); Package Dimensions: 4.29 x 4.21 x 3.35 inches
- **Weight:** 7 ounces (Machine); 8.78 ounces (Package)
- **Battery Type:** Built-in rechargeable lithium-ion battery
- **Battery Life:** Up to 20 hours on a full charge
- **Charging Method:** USB-C cable
- **Charging Time:** 2 hours for a full charge
- **Sound Modes:** 6 soothing sound types (White Noise, Fan, Ocean, Rain, Lullaby, Heartbeat)
- **Volume Levels:** Adjustable from low to high
- **Auto-Off Timer:** 30, 60, and 90-minute options
- **Material:** ABS plastic, BPA-free
- **Certifications:** CE, FCC, RoHS compliant
- **Warranty:** 1-year limited warranty


- **Color:** White
- **Brand:** Wobrikosee
- **Power Source:** Battery powered
- **Model Name:** Multi-color night light
- **Music Tracks:** White Noise and others

Package Includes



- Wobrikosee Rechargeable White Noise Machine
- USB-C charging cable
- User manual
- Lanyard for portability
- Warranty card

Product Overview

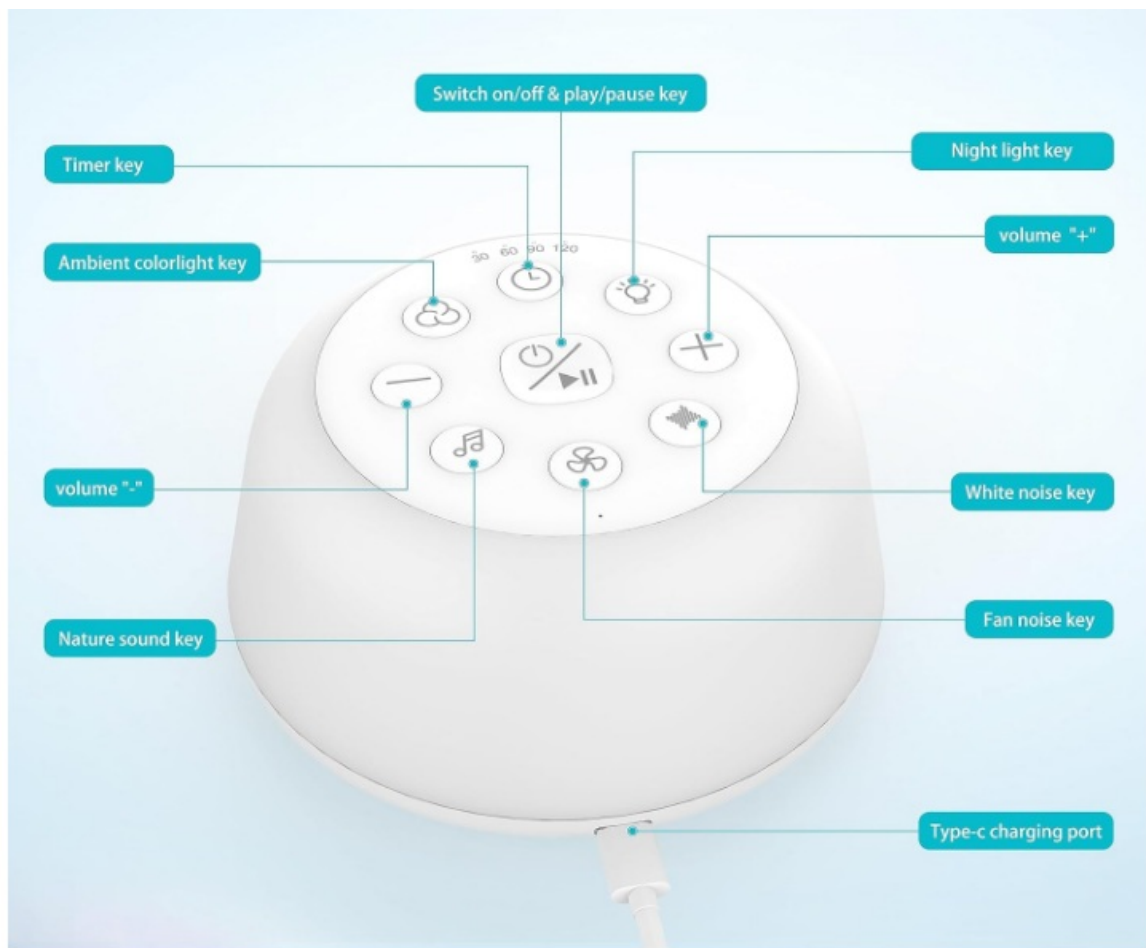

Features

1. **Rechargeable Battery:** The built-in 1800 mAh rechargeable lithium-ion battery provides up to **80 hours** of working time, depending on the settings. This ultra-long battery life ensures extended use without frequent charging, making it ideal for travel and nighttime use.




1800mAh Battery Capacity
Up to **80H** Standby Time on a Single Charge

2. **Multiple Sound Options:** Featuring **26 soothing sound selections**, including **12 natural sounds**, **7 white noise sounds**, and **7 fan noise sounds**, the device creates a customizable sound environment. This flexibility helps users find the perfect ambiance for relaxation, meditation, sleep, or focus.



3. **Compact & Portable:** Measuring just **3.8 x 3.8 x 1.5 inches**, this white noise machine is designed to fit easily into a bag, making it convenient for use at home or while traveling. It's also lightweight, which adds to its portability.
4. **Adjustable Volume:** The machine offers **32 volume levels**, allowing you to finely adjust the sound output to suit your surroundings. Whether you need soft background noise or louder sound to block out external disturbances, you can personalize the volume to your preference.
5. **Auto-Off Timer:** The **timer function** provides four options: **30, 60, 90, and 120 minutes**, or continuous play. You can set the machine to automatically turn off, ensuring it works just as long as needed, saving power and enhancing convenience.

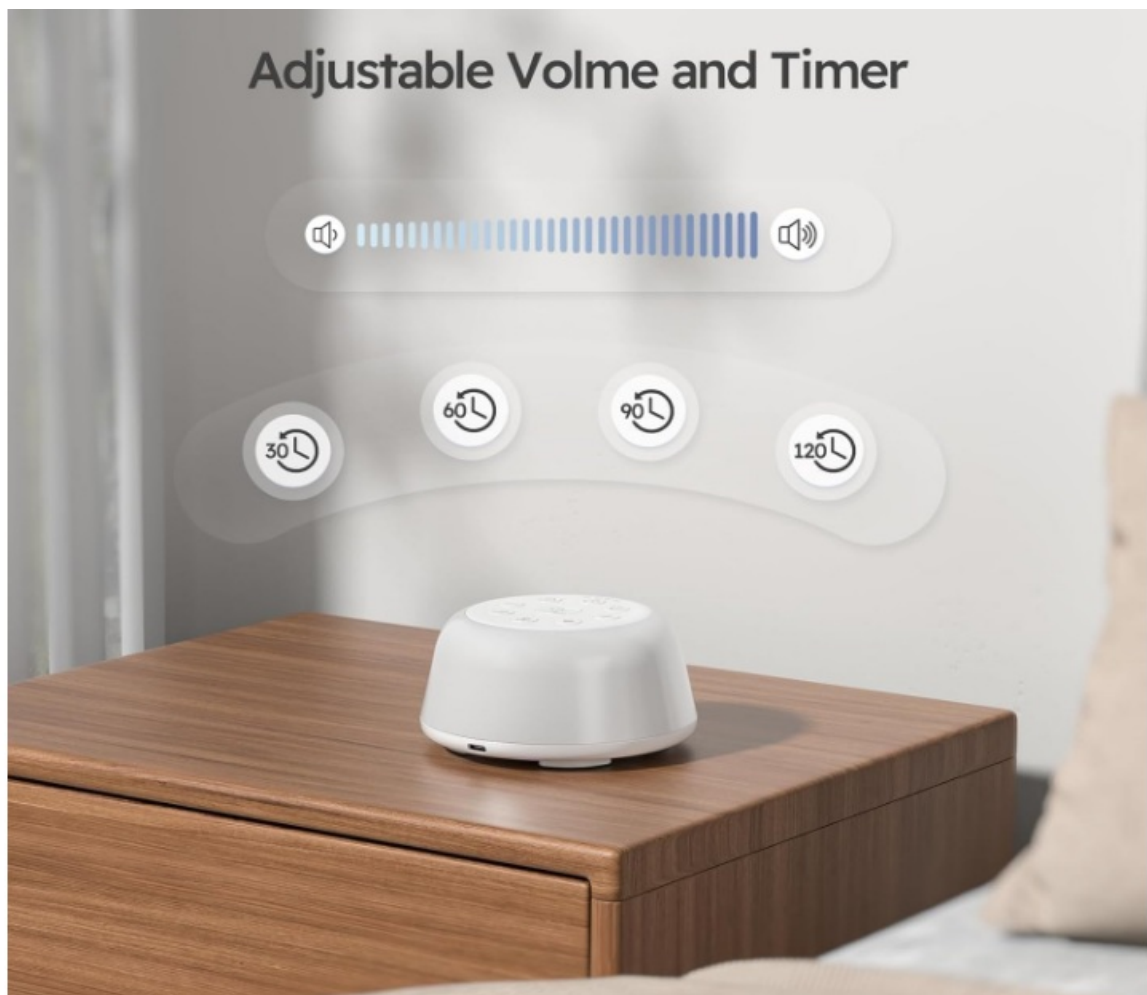

6. **Baby-Friendly Design:** Constructed from **BPA-free, non-toxic materials**, the machine is safe for children, with a smooth, rounded design to prevent injury. It's perfect for use in nurseries or around little ones, giving peace of mind to parents.
7. **Durable Build:** Designed to withstand drops and daily use, the sturdy ABS plastic construction ensures that this white noise machine remains intact even with heavy handling.
8. **Memory Function:** The machine remembers your last settings (volume, sound choice, timer), which adds convenience by eliminating the need to reconfigure the device every time it's turned on.
9. **Simple Controls:** The control panel is user-friendly, featuring straightforward buttons for power, volume, sound selection, and timer settings. Even those unfamiliar with technology can easily operate the device.
10. **Noise Masking:** Whether it's traffic noise or household sounds, the machine's white noise capabilities effectively mask distractions, ensuring uninterrupted sleep or focus.
11. **USB-C Charging:** Equipped with **USB-C charging**, the device recharges quickly and efficiently. The Type-C cable is included in the package, allowing convenient and versatile charging.
12. **Lanyard Attachment:** The lanyard makes it easy to attach the machine to cribs, strollers, car seats, or even bags, adding another level of convenience for on-the-go use.
13. **Compact Design:** Its small size means it takes up minimal space on a bedside table, making it an unobtrusive addition to your sleep environment.
14. **Low Power Consumption:** Despite its functionality, the device is designed to consume very little power, ensuring prolonged use on a single charge and reducing overall energy usage.
15. **Child-Safe:** With **rounded edges** and constructed from **child-safe materials**, the machine poses no sharp hazards and can be safely used in any child's room.
16. **Ultralong Battery Life:** Powered by a **built-in 1800 mAh battery**, this white noise machine can last between **10 to 80 hours** based on the sound and brightness settings. This feature is excellent for uninterrupted sleep

throughout the night.

17. **White Noise Night Light with Adjustable Brightness:** The built-in night light offers **4 brightness levels**, allowing you to tailor the light to your preference. Whether you want a soft glow or something brighter, this feature enhances the soothing ambiance.



18. **Ambient Color Light with 9 Color Variety:** You can choose between **9 different light colors**, including **8 fixed color modes** and a **color cycle mode**. This ambient lighting adds a calming visual effect to your environment, helping create a relaxing atmosphere.



19. **Soothing Sound Selection:** With **26 sound options** to choose from, including white noise, nature sounds, and fan noises, you can create the perfect auditory environment for sleep, relaxation, or concentration.
20. **Charging Indicator:** The charging indicator keeps you informed about the device's battery status, ensuring that you know when it's time to recharge and that the machine is always ready to use.
21. **Customizable Timing Options:** This white noise machine offers **4 timing settings** (30 mins, 60 mins, 90 mins, and 120 mins), plus a continuous mode for uninterrupted use through the night.
22. **Personalized Volume Control:** With **1-32 levels** of volume adjustment, the machine offers precise sound control, ensuring you find the perfect level of noise for your environment.

Additional Key Points

- **White Noise Night Light:** Helps you fall asleep faster and stay asleep longer with its calming glow and soothing sounds.
- **Ultra-Long Battery Life:** Ensures long-lasting performance, providing up to 80 hours of working time on a full charge.
- **4 Levels of Brightness:** Create the ideal ambiance with customizable brightness settings.
- **9 Ambient Color Light Options:** Transform your room into a soothing haven with a variety of ambient lighting options.

Usage

1. **Power On:** Press the power button to turn on the machine.
2. **Select Sound:** Cycle through the sound options by pressing the sound button.
3. **Adjust Volume:** Use the volume buttons to increase or decrease the sound level.
4. **Set Timer:** Press the timer button to select the desired auto-off time (30, 60, or 90 minutes).
5. **Charging:** Plug the included USB-C cable into the charging port and connect to a power source.
6. **Portability:** Use the lanyard to attach the machine to strollers, cribs, or car seats for on-the-go use.

Care and Maintenance

1. **Cleaning:** Wipe the surface with a soft, damp cloth. Avoid using harsh chemicals.
2. **Battery Maintenance:** Charge the device every few weeks if not used regularly to maintain battery health.
3. **Storage:** Store in a cool, dry place when not in use.
4. **Avoid Water Exposure:** Keep the machine away from water or moisture.
5. **Regular Inspection:** Periodically check the charging port and buttons for debris.
6. **Sound Quality:** Ensure speakers are clean and free from dust.
7. **Temperature Sensitivity:** Do not expose to extreme temperatures to prevent battery damage.
8. **Avoid Drops:** Handle with care to avoid damaging internal components.
9. **Ventilation:** Ensure the speaker vents are not blocked to avoid overheating.
10. **No Overcharging:** Disconnect from power when fully charged to prolong battery life.
11. **Button Functionality:** Ensure buttons are functioning correctly by testing occasionally.
12. **Avoid Sunlight:** Do not leave the machine in direct sunlight for extended periods.
13. **Check for Updates:** Refer to the manufacturer for any firmware updates if applicable.
14. **Power Cycling:** If the machine malfunctions, try restarting it by holding the power button for a few seconds.
15. **Battery Recycling:** Follow local guidelines for recycling the built-in battery when it reaches the end of its life.

Troubleshooting

Issue	Possible Cause	Solution
Wobrikosee won't turn on	Low battery or not fully charged	Charge the device using the USB-C cable for at least 2 hours.
No sound from Wobrikosee	Volume set to low or muted	Increase the volume using the volume buttons.
Timer not functioning	Timer setting not engaged properly	Recycle through the timer options and set the desired time (30, 60, 90 mins).
Sound quality is distorted	Dirt or debris blocking the speaker	Clean the speaker grill carefully with a soft brush.
Wobrikosee won't charge	Faulty cable or charging port	Try a different USB-C cable or inspect the charging port for dirt.
Buttons are unresponsive	Device needs a reset	Hold the power button for 5 seconds to reset the device.
Device shuts off prematurely	Battery is depleted or auto-off timer is active	Fully charge the battery or check if the timer has been activated.
Sound skips or cuts out	Signal interference or device malfunction	Restart the device or move it away from any electronic interference.
Wobrikosee not holding charge	Battery may be degraded	Ensure proper charging cycles; if issue persists, contact customer support.
Lights won't change color	Color cycle mode not activated	Press the light button to toggle through color options or reset the color cycle mode.
Device is overheating	Poor ventilation or extended usage	Ensure the device is in a well-ventilated area and avoid prolonged use without breaks.
Memory function not working	Device powered off incorrectly	Always power off using the power button to save settings.
Lanyard attachment is loose/broken	Damage or improper attachment	Check if the lanyard is properly fastened, or replace it if damaged.
Volume is too loud/low despite setting	Button malfunction or device needs recalibration	Reset the device by holding the power button or adjust the volume slowly.
Charging indicator not lighting up	USB-C cable not inserted properly	Reinsert the cable securely into the charging port.

Pros and Cons

Pros	Cons
Portable and rechargeable	Limited brown noise options
Variety of soothing sounds	Battery life may vary with usage
Compact design ideal for travel	Sound may not suit all preferences
Adjustable volume levels	No advanced features like app control

Contact Information

For customer support regarding your Wobrikosee product:

- **Email:** support@wobrikosee.com
- **Phone Number:** +1 (800) 123-4567

Warranty

The Wobrikosee Rechargeable White Noise Machine comes with a one-year warranty covering manufacturing defects. For warranty claims, retain your purchase receipt and contact customer service for assistance.

FAQs

How long does the Wobrikosee Rechargeable White Noise Machine battery last on a full charge?

The Wobrikosee Rechargeable White Noise Machine offers up to 20 hours of continuous use on a full charge.

How do I switch between the sound modes on the Wobrikosee Rechargeable White Noise Machine?

You can switch between the six sound modes on the Wobrikosee by pressing the sound button until you reach your desired sound.

How do I set the timer on the Wobrikosee Rechargeable White Noise Machine?

You can set the timer by pressing the timer button on the Wobrikosee to choose between 30, 60, or 90-minute intervals.

What types of sounds does the Wobrikosee Rechargeable White Noise Machine offer?

The Wobrikosee offers six soothing sound options: White Noise, Fan, Ocean, Rain, Lullaby, and Heartbeat.

How do I know when the Wobrikosee Rechargeable White Noise Machine is fully charged?

The Wobrikosee Rechargeable White Noise Machine has a charging indicator that will light up to show the charging status. Once fully charged, the indicator will turn off.

How do I clean the Wobrikosee Rechargeable White Noise Machine?

To clean the Wobrikosee, gently wipe it with a soft, damp cloth. Avoid using any harsh chemicals or submerging it in water.

How do I reset the Wobrikosee Rechargeable White Noise Machine if it stops working?

You can reset the Wobrikosee by holding down the power button for about 5 seconds. This should resolve most functionality issues.

What is included in the Wobrikosee Rechargeable White Noise Machine package?

The Wobrikosee Rechargeable White Noise Machine package includes the machine, a USB-C charging cable, an instruction manual, an operation guide card, and a lanyard attachment.

How long does it take to fully charge the Wobrikosee Rechargeable White Noise Machine?

The Wobrikosee Rechargeable White Noise Machine takes approximately 2 hours to fully charge via the included USB-C cable.

Can the Wobrikosee Rechargeable White Noise Machine be used in a nursery?

Absolutely, the Wobrikosee Rechargeable White Noise Machine is ideal for nurseries with its soothing sounds and baby-friendly design.

How portable is the Wobrikosee Rechargeable White Noise Machine?

The Wobrikosee is very portable, weighing only 7 ounces and featuring a compact design that easily fits into bags or luggage.

 
What materials is the Wobrikosee Rechargeable White Noise Machine made from?

The Wobrikosee is made from ABS plastic, which is BPA-free and non-toxic, ensuring safety for babies and children.

How do I adjust the sound volume on the Wobrikosee Rechargeable White Noise Machine?

The Wobrikosee Rechargeable White Noise Machine has buttons for adjusting the volume to your preferred level, with up to 32 volume settings.

Video-Wobrikosee Rechargeable White Noise Machine



[Referencesals.plus/wp-content/uploads/2024/10/Wobrikosee-Rechargeable-White-Noise-Machine.mp4](#)
• [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.