

WOERBEN KK-228WB Multi Function Emergency Radio User Manual


WOERBEN KK-228WB Multi Function Emergency Radio User Manual



Contents

- [1 COMPONENT NAMES](#)
- [2 OPERATION INSTRUCTION](#)
- [3 UNIT SPECIFICATION](#)
- [4 PRECAUTIONS](#)
- [5 Documents / Resources](#)

COMPONENT NAMES

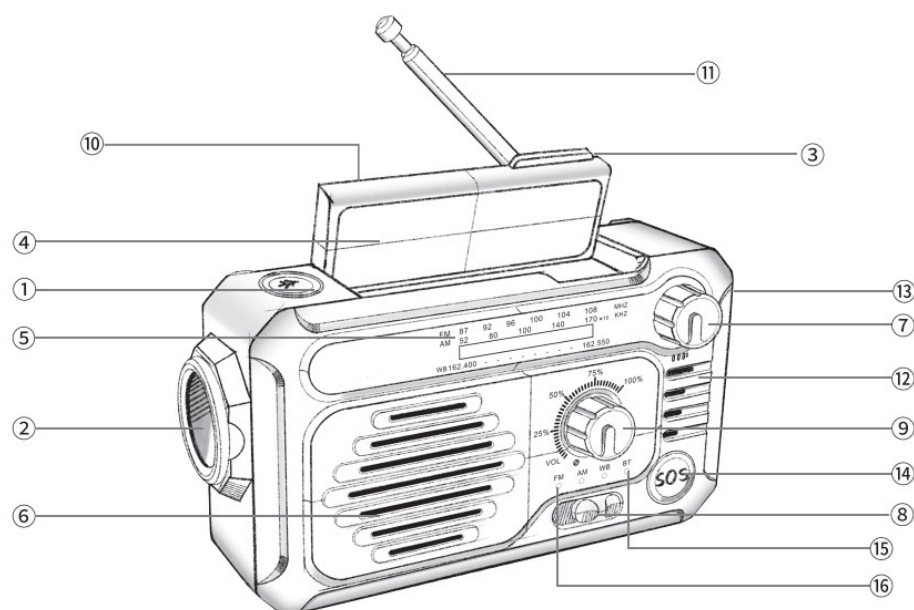

1. Flashlight switch
2. Flashlight
3. Table lamp buckle position
4. LED desk lamp
5. Frequency dial
6. Speaker
7. Channel button
8. AM/FM/WB/BT switch
9. Volume knob radio/ power switch
10. Solar panel
11. Antenna
12. Charge indicator light
13. 5V input/output interface
14. SOS switch
15. Bluetooth indicator light
16. Radio indicator light

OPERATION INSTRUCTION

Charge the product before use.


1. Charging method (Turn off the radio during normal charging, if charge the product when the radio is working, it can only be ensure the power supply of the radio)
 1. USB charging (adaptor)

Connect the charging cable (DC 5V 24) to the product of Type-C port © and charge i directly, battery indicator light blinks during charging,
 2. Dynamo charging

Open crank handle to charge the product with rotation (clockwise or counterclockwise). Remain 120180 cyclesimin battery indicator light blinks during charging.
 3. Solar charging

Put it in a sunny place for charging, and make the sun shine directly on the solar panel as much as possible. The higher the brightness of the solar indicator light 1, the higher the charging efficiency.

2. Keys description

Symbol	Name	Operation	Function	Functional description
	Switch	The flashlight	Open the flashlight	Short press the button: flashlight on
SOS	Switch	Sirens plink		to play: turn on Siren Pink

3. Check battery level (with charge and discharge indicators)

- Charging:** it has four modes 25%. 50%. 75%. 100% (to show battery level)
- USB output discharge:** it has four indicator light modes 100%. 75%. 50%. 25% (to show it blinks 10 times to show a low battery level).

4. Charge mobile phone or digital products

Connect the charging cable to the product of USB output port () the other end to mobile phone (digital product). Charging in progress.

5. Radio usage steps

- Turn on 9 radio button
- Select the channel
- Use knob () to select the channel, the radio signal light ® is on when a station is captured.
- Use knob 910 adjust the volume.
- Pull out the radio antenna to enhance the radio signal when using FM /W8,

6. Desk lamp usage steps.

Turn on the lamp, turn on the appropriate Angle, turn on the lamp lighting.

UNIT SPECIFICATION

- Button battery:** 3.7V 2000mAh 18650
- Flashlight** 1PC LED (Weak light 0.5W, Strong light 1W)
Desk lamp: 10PCS LED (Weak light 0.5W, Stronglight 1)
- Range of audio:** FM87-106 MHz AM:520-1710 KHz;
- Solar panel specification:** 5.5V 30mA
- Lifespan of light sources:** >10000H
- Charging Input:** DC 5.0V 1.2
- Output power:** DC 5.0V 1.0
- Unit weight:** 309g
- Unit size:** 147.5*81.45*8mm

PRECAUTIONS

- The product is not suitable for children below 8 years old.
- Avoid prolonged use of the device in extremely cold, hot, dusty and moist environment.
- The Indicator light blinks signifies low battery mode.
- Clean the product cloth using dipped with some neutral detergent

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- "Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference and
2. This device must accept any interference received including interference that may cause undesired

operation changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
FCC RF warning statement. The device has been evaluated to meet general RF exposure requirements. "The device can be used in portable exposure conditions without restriction."

Documents / Resources

	WOERBEN KK-228WB Multi Function Emergency Radio [pdf] User Manual 2BBTN-KK228WB, 2BBTNKK228WB, KK-228WB, KK-228WB Multi Function Emergency Radio , Multi Function Emergency Radio, Emergency Radio
---	--