Home » WOLFBOX » WOLFBOX i17 Dash Cam Front Inside User Manual



WOLFBOX i17 Dash Cam Front Inside User Manual

WOLFBOX i17 Dash Cam Front Inside User Manual



Contents

- 1 INTRODUCTION
- **2 PRE-CAUTIONS**
- **3 APPEARANCE**
- 4 About the Micro SD Card
- 5 Installation
- 6 How to install the main body
- **7 HOME SCREEN**
- 8 Power ON/OFF
- 9 Micro SD card check function
- 10 Menu Settings
- 11 Q: Why is every video recording so short?
 - 11.1 Documents / Resources
 - 11.1.1 References

INTRODUCTION


Thank you for purchasing WOLFBOX i17 Dash Cam. This product is a front and inside dual channel dash cam which offers 150° front camera and 160° inside camera, it can simultaneously monitor the front and interior of your vehicle while providing audio at 4K + 2.5 K, protecting you from potential accidents and liability issues. If you need rear camera, you can buy it. When the rear camera s inserted, the cam will turn to triple channel recording mode automatically. It provides top 4K 2160P resolution front camera, 1080P insidle camera and a 1080P rear camera. The rear cam is easily 360° adjustable with 20ft ext extension cable, and it works well for cars, SUVs, jeeps, and trucks.

In addition to ultra-high definition, i17 dash cam also has other smart features to provide customers with elegant and convenient services. It has built-in GPS, built-in WIFI, free APP, split-screen display, DST switch, builtin G-Sensor, emergency recording, audio recording, loop recording, parking monitoring, Screensaver mode, and is very easy to use.

PRE-CAUTIONS

- If you have any questions, please CONTACT US (service@wolfbox.com), we will solve it for you.
- Please check the dash cam and all the accessories before installation. If you need someone to help with
- installation, please check the function first, so as to prevent the loss caused by the cam after installation.
- Please use original accessories provided in the package, just in case of compatible issues after using the nonoriginal. Especially use 2 or 3in 1 cigar socket will lead to 100% insufficient current supply.
- If you use micro SD card capacity > 32GB, Please change micro SD card [Class10 (10MB/ sec) required) format to FAT 32 on PC{a 64GB card s included in the package)
- · Please format micro SD card termly in case of locked videos occupied much capacity.
- Please confirm that your cigar power portis ACC. (If the cigarette lighter is sill charged after the engine is turned off, please use the harduwire kit or unplug the car charger after the engine is turned off, otherwise it may exhaust your car's power.) (Note: This happens in some Ford/Audi cars, and electric cars).
- If you have any questions, please CONTACT US.

APPEARANCE

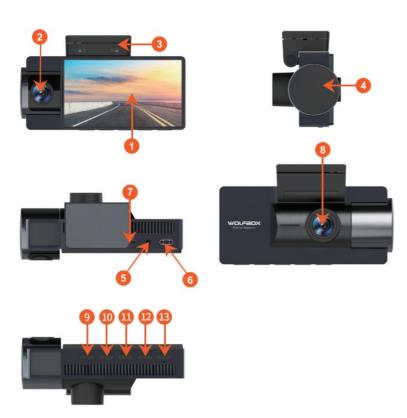

1	IPS Screen
2	In-Car camera
3	GPS built-in bracket
4	Rotate to adjust the In-Car camera image
5	Rear Camera input terminal(AV-IN)
6	Type-C Power port
7	TF Card slot
8	Front Camera
9	Power button
10	Menu button
11	Left button
12	Right button
13	OK button

About the Micro SD Card

- · When using a new Micro SD card, be sure to format it
- Do not remove or insert a Micro SD card while the power s on.
- Use a Micro SD card with Class 10 or higher (32GB-512GB). 64GB card is included in package.
- Itis recommended to format the micro SD card regularly. Recommend: Once a month.
- "This product will check the Micro SD card at startup and will announce if it is not inserted or damaged, that can prevent missed shots.

Installation

When you use the dash cam for the first time, the dash cam comes with factory default settings and you do not need to set it manually.

NOTE


• Format SD before using! Please refer to page 6 for SD card settings.

How to install the main body


1. Installation Position-Please find the most suitable place to record the picture you want{such as the back seat) with the In-Car camera. Note: Front-Cam and In-Car Cam can be rotated to adjust the angle of the picture.



2. Make sure to clean your windshield from the dust particles and attach the electrostatic sticker to the windshield.

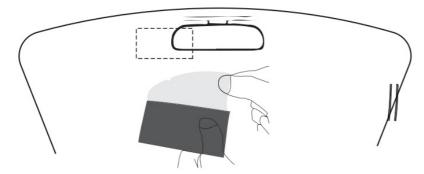

- Since the adhesive strength s strong on both sides and it s difficult to peel off once it is pasted, it will be troublesome if itis pasted in the wrong place. Therefore, we design the electrostatic sticker to attached to the windshield first, then stick the bracket with 3M Adhesive on the electrostatic sticker. You can easily readjust by sticking the 3M Adhesive on electrostatic sticker and peel it off.
 - To strengthen the fixing force, do not attach the unit and leave it for 24 hours or more.
 - Resticking may weaken the adhesive strength of the tape and cause it to fall offPeel off the 3M tape attached to the GPS built-in bracket and attach it on the electrostatic sticker.

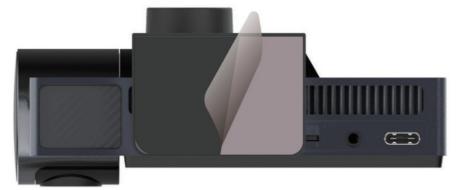

About electrostatic Sticker


- Since the adhesive strength s strong on both sides and it s difficult to peel off once it is pasted, it will be
 troublesome if itis pasted in the wrong place. Therefore, we design the electrostatic sticker to attached to
 the windshield first, then stick the bracket with 3M Adhesive on the electrostatic sticker. You can easily
 readjust by sticking the 3M Adhesive on electrostatic sticker and peel it off.
- To strengthen the fixing force, do not attach the unit and leave it for 24 hours or more.
- Resticking may weaken the adhesive strength of the tape and cause it to fall off
- 4. Use the power cord to connect the Type-C port of the product to the car's cigarette lighter socket.



CAUTION:

- Please ensure that you connect the cigar plug cord connector in the correct orientation, Connecting it in the wrong direction may result in malfunction or damage to the device. If you encounter any difficulty in connecting it successfuly, please check the connection part carefully before attempting to connect it again.
- To avoid any potential issues with the device, please only use WOLFBOX's Car Charger. Using any other charger may result in frequent reboots or LCD flickering due to insufficient power.

HOME SCREEN

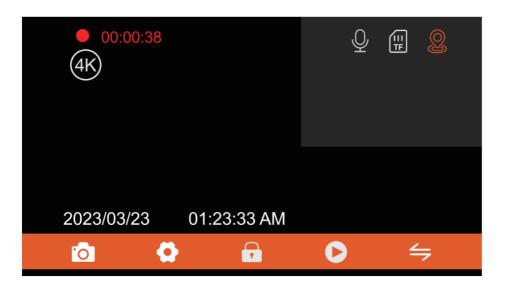

ICONS	WHAT DOES IT MEAN?	ICONS	WHAT DOES IT MEAN?
• 00:00:38	Recording	<u>Q</u>	Sound record is on
• 00:00:40	Emergency recording is on	III TF	TF card is inserted
2023/03/23 01:23:33 AM	Date and Time	0	GPS is on
4K)	Resolution	•	Videos
Ö	Photograph	0	Emergency recording
0	Settings	\$	Switching from Front and Inside camera

Power ON/OFF



- "When the cigar power adapter is connected and the engine is turned on (ACC on), the power wil automatically turn on and the opening screen will be displayed."
- Press and hold the power button to turn off the power during startup, and then briefly press the power button again to turn on the power of the unit and display the opening screen.

Micro SD card check function

This product will check the Micro SD card at startup and will announce if it is not inserted or damaged, that can prevent missed shots.

<Power off >

• If you press and hold the power button while the power is on, the power of this nit will be turned off.

NOTE

• Please confirm whether your cigar power port is ACC. (f the cigarette lighter is still charged after the car is turned off, please use the hardwire kit or unplug the car charger after the car is turned off, otherwise it may exhaust your car's power supply.) (Note: This happens in some Ford/Audi cars, and electric cars).

Menu Settings

After turning on, please press the [] button to enter the Menu





Resolution

• Choose the resolution according to the needs




Front: 4K + Inside: 2.5K
 Front: 4K + Inside: 1080P
 Front: 2.5K + Inside: 2.5K
 Front: 2.5K + Inside: 1080P

If rear camera is inserted (The rear camera is not included in the package and needs to be purchased separately.)

Front: 4K + Inside: 1080P + Rear: 1080P
Front: 2.5K + Inside: 1080P + Rear: 1080P

Loop Record

• Choose the recording duration for your videos.

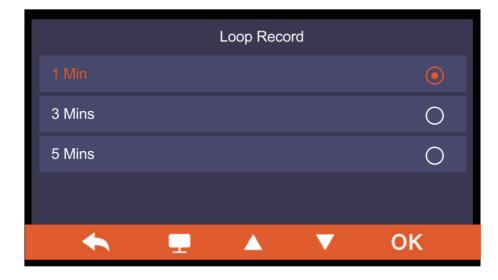


Q: Why is every video recording so short?


A: We set the recording interval of each video to 1min/3min/Smin-This is for the convenience of finding the locked video laterThe main function of the recorder is to record, especially to record emergency video. If each video is too long and the G-Sensor triggers emergency recording when a collision occurs, the video will be locked and cannot be covered by the loop recording, and customers will be difficult to find the video in the subsequent search. You need slide the longer progress bar to find this locked video. And the capacity of the Micro SD card is limited, if the locked video is too long, the normal video capacity that can be stored will decrease.


Screen Saver

• If you want to use it as a review mirror, please tum on the screen saver

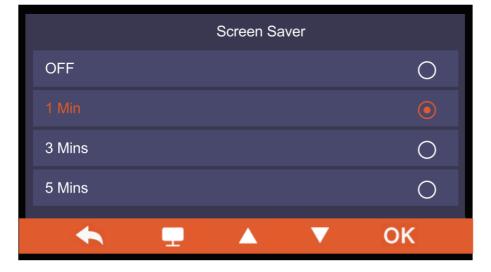




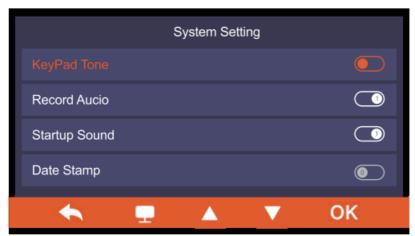


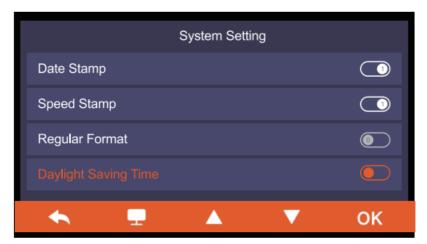



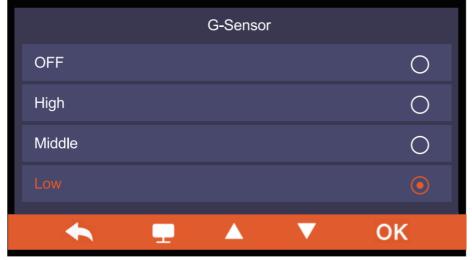



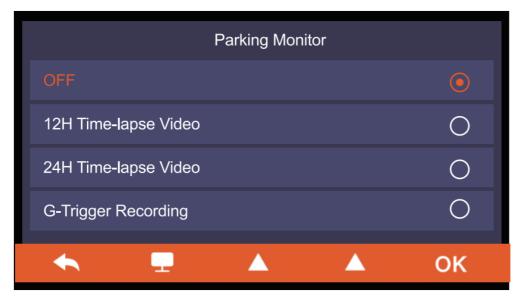







Documents / Resources



WOLFBOX i17 Dash Cam Front Inside [pdf] User Manual

i17 Dash Cam Front Inside, i17, Dash Cam Front Inside, Cam Front Inside, Front Inside, Inside

References

• User Manual

Manuals+,