



wolfvision Cynap Core Pro Advanced Collaboration and Presentation User Guide

[Home](#) » [WOLFVISION](#) » wolfvision Cynap Core Pro Advanced Collaboration and Presentation User Guide 



www.wolfvision.com

**Cynap Core PRO
Quick Start Guide**

vSolution Cynap Core PRO by WolfVision

Contents

 
- [1 Introduction](#)
- [2 Connect and Control](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)
- [4 Related Posts](#)

Introduction

Cynap Core PRO by WolfVision® delivers an all-in-one collaboration and presentation solution, featuring BYOD, streaming to vSolution Cynap systems, and a document and media player, with support for up to 4K UHD resolution.

Hardware Connection


Make all necessary connections according to the following illustrations. Plug in the power cord as the last step. Power on the equipment. Typical Setup

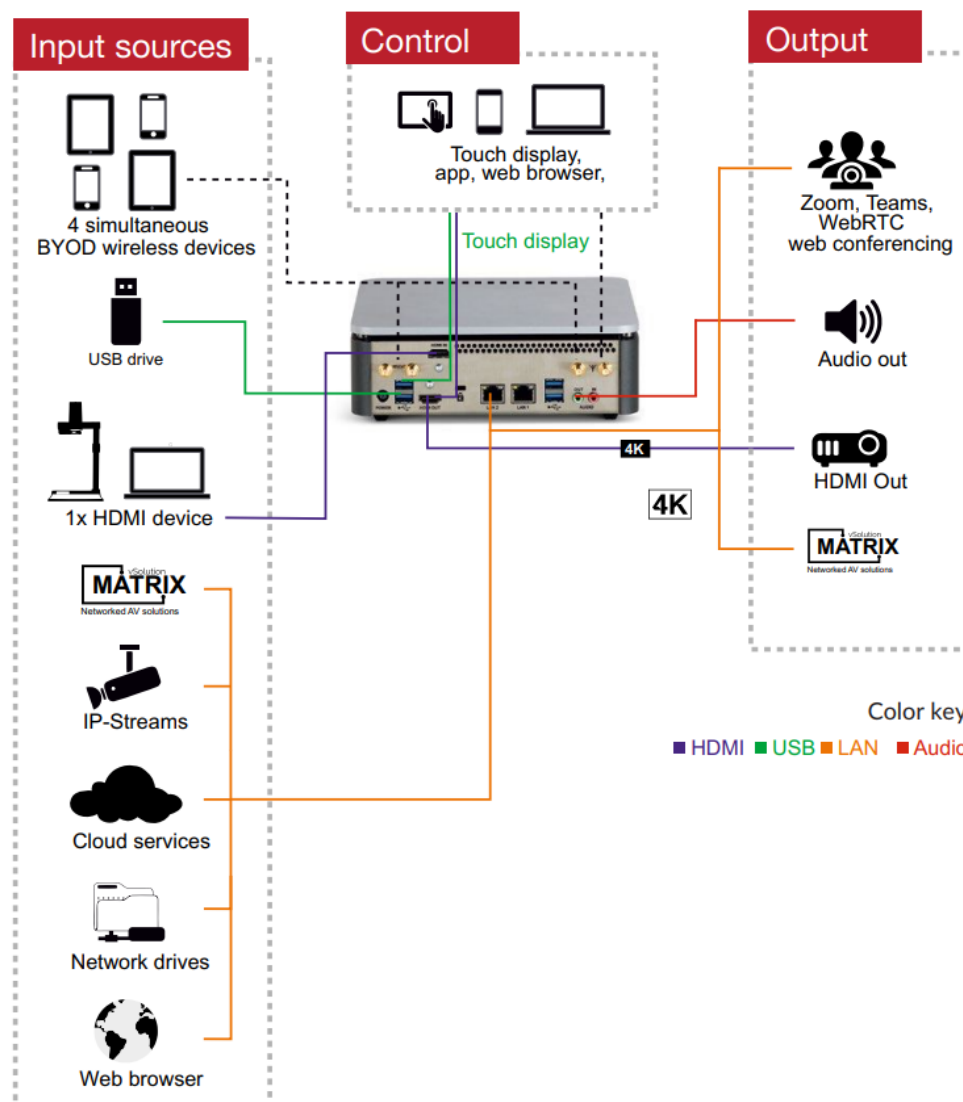


Connect and Control


Operating for the first time

When Cynap is switched on, all settings can be set in the password-protected settings of the graphical user interface (GUI). Access the GUI by using a web browser on your connected PC or tablet (input the IP address), by

using the optional remote control, or by using a connected USB mouse and keyboard. Push the  button at the right edge to open the Control center and click on the cogwheel.

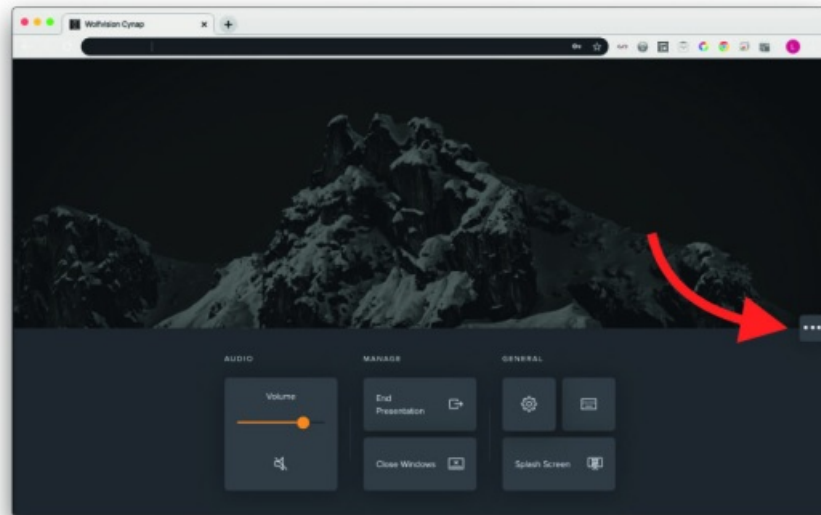


Cynap Core PRO Setup

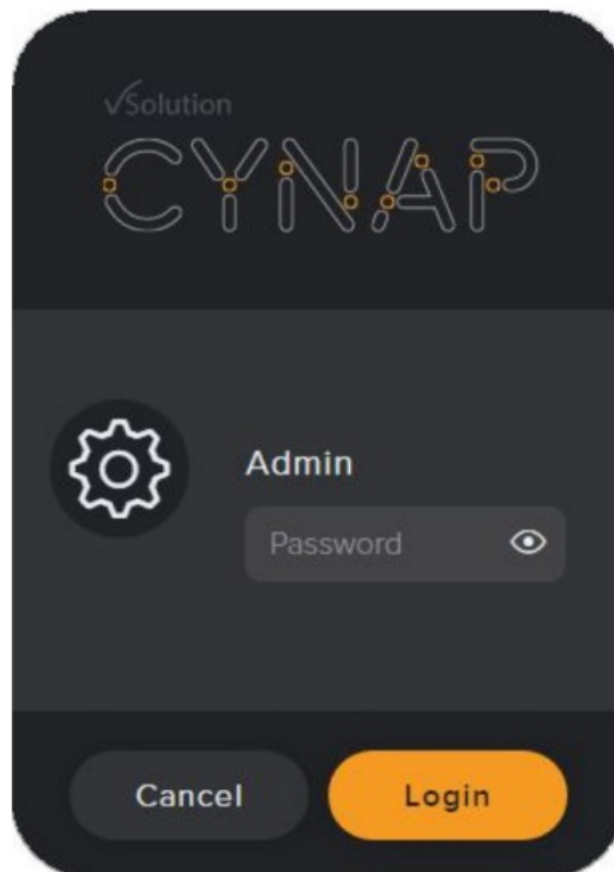


Initial default admin password: Password Check the integrated help for further details.

Miracast on Windows 8.1+ (Wireless Display) Miracast on Windows

1. Press  + K to list local Miracast receivers.
2. Select your Cynap system.
3. Activate User Input Back Channel on the Windows device to allow touch back control of it via Cynap system connected touch screen.

AirPlay on MacBook, iMac

AirPlay on MacOS

1. Connect to the Cynap system using the listed WLAN settings.
2. Click  in the menu bar at the top of your screen.
3. Select your Cynap system.


AirPlay on iPhone / iPad

AirPlay on iOS

1. Connect to the Cynap system using your camera to scan the QR code.
2. Swipe down to open Control Center and tap on Screen Mirroring.
3. Tap on your Cynap system.

Chromecast on the Chrome browser

Chromecast on Windows, macOS, and Linux

1. Connect to the Cynap system using the listed WLAN settings.
2. Open your Chrome browser and click on the browser menu  then Cast...
3. Select cast desktop or browser window and select your Cynap system.


Chromecast on Android

1. Connect to the Cynap system using the listed WLAN settings.
2. Swipe down to open Quick Settings and select Screen Mirroring.
3. Tap on your Cynap system.

vSolution Cast on Windows

1. Connect to the Cynap system using the listed WLAN settings.
2. Start vSolution Cast.
3. Tap on your Cynap system.

Documents / Resources

| | |
|---|---|
|  | wolfvision Cynap Core Pro Advanced Collaboration and Presentation [pdf] User Guide Cynap Core Pro Advanced Collaboration and Presentation, Cynap Core Pro, Advanced Collaboration and Presentation |
|---|---|

References

-  [Presentation, Collaboration & Visualizer Systems - WolfVision GmbH](#)

Manuals+.