


[Home](#) » [Womier](#) » **Womier SK71_PRO 75% VIA Support Wireless Mechanical Keyboard User Manual** 

Contents [[hide](#)]

- [1 Womier SK71_PRO 75% VIA Support Wireless Mechanical Keyboard](#)
- [2 Keyboard Features](#)
- [3 Mode Setting and Repairing](#)
- [4 Fn Combination Keys](#)
- [5 FAQ](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)

Womier

Womier SK71_PRO 75% VIA Support Wireless Mechanical Keyboard



 
Keyboard Features

1. Tri-mode universal connection & 8000mAh large-capacity battery
2. Gasket structure hot-swappable wireless mechanical keyboard
3. Support VIA, customize key mappings, macros, and backlights

4. Support a variety of backlight effects and light colors
5. Support system:Win7-Win10/MAC

Software download: www.womierkeyboard.com/pages/software

Mode Setting and Repairing

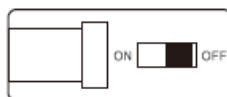

Bluetooth Mode

Turn the switch to the “ON” position, hold down the FN+Q/W/E key combination, and the corresponding key will blink quickly. After the Bluetooth connection is successful, the backlight of the key will be restored

If the device has already been paired, press FN+Q/W/E briefly to reconnect

2.4G Mode

Turn the switch to the “ON” position, long press the FN+R key, the R key light flashes quickly, insert the receiver, and restore the backlight after the pairing is successful

If the device has already been paired, press FN+R briefly and plug in the 2.4G receiver to reconnect

Wired Mode

Turn the switch to the “ON” position ,press FN+T, plug in the TYPE-C cable, and enter the wired mode

Low Battery Warning: When the battery is low, the ESC red light blinks slowly. When charging, the ESC red light is steady on

Fn Combination Keys

FN+t	Backlight brightness+
FN+J.	Backlight brightness-
FN+	Backlight speed +

FN++-	Backlight speed –
FN+Enter	Switch backlight colors
FN+Backspace	Switch backlight effects
FN+S	Hold 3 seconds to Switch to MAC system
FN+A	Hold 3 seconds to Switch to WIN system
FN+Esc	Hold 3 seconds to restore the keyboard
FN+Space	Check the battery level
FN+Q/W/E	BT1/2/3
FN+R	2.4G mode
FN+T	Wired mode
FN+Tab	Turn off/on ESC Battery warning

System Functions (Win)

FN+F1	Backlight brightness-
FN+F2	Backlight brightness+
FN+F3	Task switching(WIN+Tab)
FN+F4	Open my computer
FN+F5	Mail
FN+F6	Home page
FN+F7	Previous song
FN+FB	Play/Pause

FN+F9	Next song
FN+F10	Mute
FN+F11	Volume-
FN+F12	Volume+
FN+WIN	Turn off/ on WIN
FN+D	Turn off/ on Low latency

System Functions (Mac)

FN+F1	Backlight brightness-
FN+F2	Backlight brightness+
FN+F3	Task switching (WIN+Tab)
FN+F4	Control console
FN+F7	Previous song
FN+FB	Play/Pause
FN+F9	Next song
FN+F10	Mute
FN+F11	Volume-
FN+F12	Volume+
Alt	Cmd
Win	Option

- support@womierkeyboard.com



FAQ

- ## 1. How do I switch between Bluetooth and wired modes?

Use the FN+Q/W/E key combination for Bluetooth mode and FN+T for wired mode.


- ## 2. What should I do if the keyboard is not connecting via Bluetooth?

Ensure the switch is in the “ON” position and hold down the FN+Q/W/E key combination to reconnect.

- ### 3. How can I check the battery level?

Press FN+Space to check the battery level.

Documents / Resources

	<p>Womier SK71_PRO 75% VIA Support Wireless Mechanical Keyboard [pdf]</p> <p>] User Manual</p> <p>SK71_PRO, SK71_PRO 75 VIA Support Wireless Mechanical Keyboard, SK71_PRO, 75 VIA Support Wireless Mechanical Keyboard, Support Wireless Mechanical Keyboard, Mechanical Keyboard, Keyboard</p>
---	--

References

- [User Manual](#)

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.