



Home » WONDERFOLD » WONDERFOLD W2 Elite Wagon Double Stroller Instruction Manual



WONDERFOLD W2 Elite Wagon Double Stroller



Contents [hide]

- 1 Important Information
- 2 Specifications
- 3 Parts checklist
- 4 Features
- 5 Montage
- 6 How to
- 7 Maintenance
- 8 Warranty
- 9 Customer Support
- 10 Documents / Resources
 - 10.1 References

Important Information



Important-Keep these instructions for future reference.

Avoid Serious Injury To Children From Falling Or Sliding Out:

- Always use the included harnesses to secure each child.
- Ensure the harness is correctly fitted to your child. Adjust the shoulder strap according to your child's size.
- Never leave children unattended.
- Always set parking brake while loading and unloading children.
- This seat unit is not intended for children under 6 months of age.

Avoid Serious Injury To Children:

- Use caution when using stroller near traffic or in highly congested areas.
- DO NOT use the stroller on stairs or escalators.
- Keep children clear when unfolding and folding the stroller.
- DO NOT let your child play with this product.

• DO NOT use the stroller while running, jogging or skating. The stroller is intended only for up to a brisk walking speed.

Avoid Injury From Stroller Tipping Over:

- DO NOT allow more than 2 children in the stroller at any given time.
- DO NOT exceed the per seat limit of 22 kg (45 lbs).
- The stroller is not intended to carry children taller than 101.6cm (40 inches).
- DO NOT allow children to climb into stroller unassisted, or to play or hang onto stroller.
- DO NOT overload the stroller as it may cause instability and/or damage to the product.
- Only manufacturer approved parts and accessories should be placed on the stroller.
- Non-compliant parts or accessories, such as hanging items or bags, may cause instability.
- DO NOT place more than 5 kg (11 lbs) in rear basket.
- DO NOT place more than 0.5 kg (1.1 lbs) in each storage pocket.
- ALWAYS distribute weight in the stroller as evenly as possible.

Avoid Loss Of Control Of Stroller:

- ALWAYS ensure that all locking clips, clamps and buckles are engaged and all accessories are securely fastened before use.
- NEVER leave stroller unattended on a hill or incline even when parking brake is set.
- ALWAYS use caution when the stroller is on uneven terrain or slopes.
- ALWAYS set parking brake when the stroller is stationary.
- NEVER press down on the handlebar while going over a curb with the stroller wagon.
 Lift it using the frame, not the handlebar.

Avoid Pinch Injury:

- Keep fingers or other body parts clear of hinged joints when folding and unfolding the stroller.
- ALWAYS keep children clear from moving parts when making adjustments to the stroller.
 - See Assembly, Operation and Maintenance & Care sections for additional warning

and usage instructions.

Specifications

Certification: ASTM F833-21/EN1888/AS 2088:2022

Seat Capacity: 2

Age Group: 6 months or above

Wagon Weight with Seats: 21 kg (47 lbs)

Weight Capacity: 91 kg (200 lbs)

Bench Weight Limit: 22 kg (45 lbs) per seat

Parts checklist

• Stroller Body – 1 pc



• Rear Wheels – 2 pcs



• Front Wheels – 2 pcs



• Brake Set – 1 Set



• C-Clamps – 2 pcs Pre-installed on brake set



• Bench Seat – 2 pcs



• Canopy Set- 1 Set



• Baseboard – 1 pc



• Rear Basket – 1 pc



• Optional Strap- 1 pc



• Hooks – 2 pcs



Please take the time to make sure that all parts are included. If there are any missing or broken parts or in need of immediate assistance in assembling your stroller.

Please contact us at hello@wonderfold.de.

Features

1. Removable, Raised, & Reclining Seats



2. All-Terrain PU Tires with Bearings & Suspensions



3. Easy to Fold & Unfold



4. Spacious Footwell for Plenty for Leg room



5. Removable & Slidable UV Protection Canopy, with Adjustable Canopy Rods



6. 5-Point Safety Harnesses



7. Adjustable Handlebar with a Vegan Leather Cover



8. Front Zippered Entrance



9. Rear Storage Basket



10. Additional Pouch on the Back Panel of the Carriage Fabric



11. Additional Storage in the Seatbacks



12. Zippered Mesh Panels for Privacy & Wind Cover Protection



Montage

Unfolding the Stroller

- 1. Unlock the bottom latch.
- 2. Standing on either side of the stroller, push smoothly outward to unfold the stroller.
- 3. Ensure the upper lock on the right side of the stroller snaps into place.
- 4. Flip over the side pocket flaps to the outside on both sides of the stroller to cover the frame joints.



Installing & Removing of the Front Wheels


- 1. Insert front wheels into the front wheel housing until you hear a click. Make sure the flat side of the axle is parallel to the quick release lock on the upper housing.
- 2. After attaching the front wheels, pull down on each wheel to confirm that they are securely locked.
- 3. To remove the front wheels, press the release button and detach the wheel from the leg.





Installing the Rear Wheels

- 1. The C-shaped clamp comes pre-installed on the brake assembly. Release the C-shaped clamp by pushing it out from the brake unit.
- 2. Insert the wheel axle in the brake assembly.
- 3. Insert the C-shaped clamp back into the rear wheel housing.
- 4. Pull the rear wheel axle to ensure that the rear wheel assembly is secure.

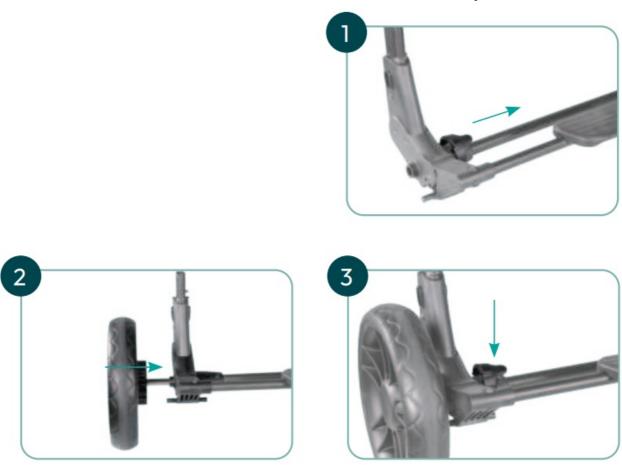

Installing the Brake Set

- 1. Line up and connect the rear wheel assembly to the rear tube joint.
- 2. Check that the clips are in place on both sides of the wheel housing.





Installing the Baseboard

- 1. Place the baseboard into the base of the carriage fabric nestled against the frame.
- 2. Press the baseboard with your hands to level and secure it in place.





Installing the Seats (Seat is not suitable for children under 6 months.)

- 1. Before placing the seat in the wagon, unbuckle the buckles on the underside of the seat. Allow the buckles and straps to hang loose until step 3.
- 2. Place the seat into one end of the strollerSecure the hooks on both sides of the seat onto the stroller frame handrail on either side of the wagon Make sure that the both fabric panels between the two parallel seat hooks is stretched flat Then secure the seat back hooks onto the stroller frame behind the seat.
- 3. Connect the four buckles on the underside of the seat to the corresponding buckles in the well of the wagon as shown in Image 3.
- 4. Completed seat assembly shown in Image 4.
- 5. For reclining mode,remove the seat and reposition the side hooks further forward on the stroller frame. handrails.



Installing the Rear Basket

- 1. Slide the basket hooks into the fixed slots on the frames under the handlebar tube.
- 2. Gently wiggle the basket to level it. Completed assembly shown in figure 2.





Attaching the Optional Pull Strap

- 1. Locate the handle strap from the bottom of the frame located in the front.
- 2. Fix the handle strap onto the lower front frame tube.
- 3. Use as shown in figure 3.








Installing the Canopy

- 1. Before assembling the canopy, make sure all four plastic clamps at the corners are open.
- 2. Insert the canopy tubes through the piping of the canopy fabric
- 3. Insert the canopy poles into the frame slots on all four corners at the desired height.
- 4. Close all four plastic clamps to secure the canopy height.





Latch should be opened toward the center of the wagon

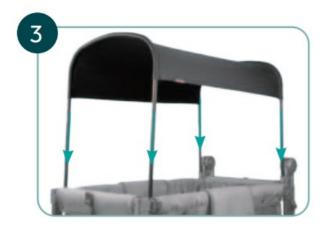



Latch should be pressed away from the center of the wagon to close

Note: Latches may require extra force to close or open.

How to

Secure the Harness

- 1. With harness unbuckled, place child in seat.
- 2. Combine the waist and shoulder pieces together by sliding the shoulder end piece in to the waist clip.
- 3. Overlay the two set of the combined waist shoulder pieces onto each other.
- 4. Place the buckle on top of the shoulder and waist buckle base and let it click in place.
- 5. Adjust each strap by pulling on the free end of the strap and move the slide adjuster

along strap.



Use the Parking Brake

- 1. Step down gently on the parking brake pedal to lock. To test and ensure the brake is engaged, try to push the stroller forward.
- 2. Lift the parking brake pedal upwards with your foot to release it.





Adjust the Handlebar Height


- 1. Press the adjustable handle button on both sides simultaneously.
- 2. While the buttons are pressed, position the handle up or down to desired height.





Fold the Stroller

- 1. Flip the side pockets into the stroller.
- 2. Stand in front of the stroller, gently release the upper lock on the right hand side.
- 3. Grasp the folding hinges on both sides. Lift up the hinges until stroller is completely folded.
- 4. Secure the lower latch to lock the stroller in the folding position.

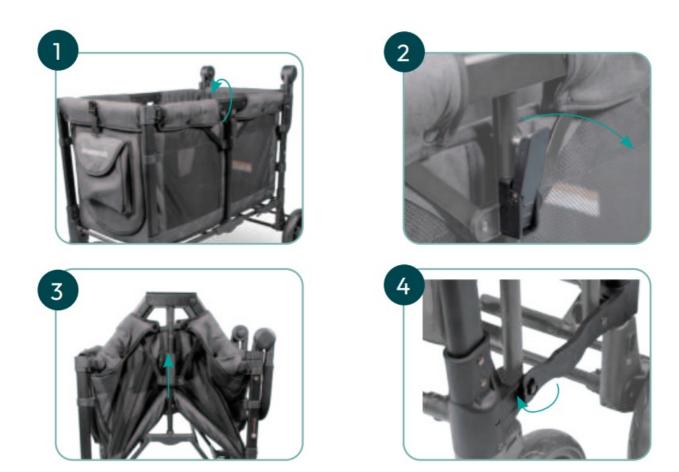


Adjust the Canopy

- 1. Before adjusting the height of canopy, make sure all four plastic clamps at the corners are open.
- 2. With one hand on each horizontal part of the canopy pole, gently slide the canopy poles up or down to the desired Hight. Caution to not bend the poles.
- 3. Secure all four plastic clamps to lock canopy height.





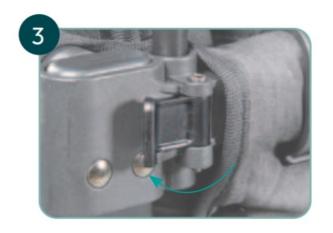

Latch should be opened toward the center of the wagon

Note: Latches may require extra force to close or open.

Store the Canopy


- 1. Adjust the handlebar to the upright direction.
- 2. Roll up the canopy fabric around the horizontal part of the canopy poles.
- 3. Insert the combined ends of the canopy poles into the storage pocket on each side of the basket.
- 4. Secure the poles using the straps on the rear leg tubes and snap the fasteners.





Use the Side Mesh Panel

- 1. Unzip the pocket located on the upper part of the inner carriage fabric.
- 2. Stretch out the inside curtain, and secure the bottom Velcro to the carriage fabric.
- 3. Repeat the same operations for the other side of the stroller.
- 4. To secure the curtain, pull up the Velcro, roll up the curtain and zip up the pocket.

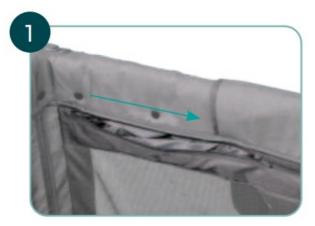



Attach the Bag Hooks

- 1. Attach the hook by pressing it down onto the top of the frame.
- 2. Installation complete.





Note: Do not exceed the hook's weight capacity of 6.8 kg (25 lbs).

Maintenance

Cleaning the Stroller

- 1. Wash stroller frame with mild soap and warm water solution.
- 2. Rinse and wipe with a dry cloth until fully dry.

Cleaning the Seat Pad

- 1. Spot clean with mild soap and warm water solution.
- 2. Rinse and wipe with a dry cloth until fully dry.

Storing the stroller wagon

- 1. Should be stored in a cool and dry place.
- 2. Do not store near a heat source.
- 3. Do not expose or store in the sun and rain for a long time.

Warranty

One Year Limited Warranty

WonderFold warrants this product to be free from defects in material or workmanship for a period of one year from the date of purchase when used by the original owner according to the manufacturer's instructions.

The warranty does not apply to damage caused by product alteration, or customer/user misuse or abuse of the product. Your sales receipt is your only record of the date of purchase. Warranty is subject to change at any time at manufacturer's sole discretion. Please contact WonderFold if you have any warranty questions or if you need replacement parts:

www.wondertold.de



Customer Support

Scan for Additional Languages:



Documents / Resources



WONDERFOLD W2 Elite Wagon Double Stroller [pdf] Instruction Manual W2 Elite, W2 Elite Wagon Double Stroller, Wagon Double Stroller, Double Stroller, Stroller

References

- User Manual
- WONDERFOLD
- ◆ Double Stroller, Stroller, W2 Elite, W2 Elite Wagon Double Stroller, Wagon Double Stroller, WONDERFOLD

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website					
☐ Save my name	, email, and website ir	n this browser for the	next time I commer	nt.	

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.