



WONDERLIT WL-MSLMSP MUSHROOM LED Light and Wireless Speaker User Manual

[Home](#) » [WONDERLIT](#) » WONDERLIT WL-MSLMSP MUSHROOM LED Light and Wireless Speaker User Manual 

Contents

- 1 WONDERLIT WL-MSLMSP MUSHROOM LED Light and Wireless Speaker
- 2 Product Information
- 3 Product Usage Instructions
- 4 PRODUCT SPECIFICATIONS
- 5 PACKAGING CONTENT
- 6 PRODUCT INSTRUCTIONS
- 7 REMOTE CONTROL
- 8 FCC Warning
- 9 Documents / Resources
 - 9.1 References
- 10 Related Posts

WONDERLIT
Beyond Lighting

WONDERLIT WL-MSLMSP MUSHROOM LED Light and Wireless Speaker



Product Information

Specifications

- **Model:** WL-MSLMSP-CLR
- **Speaker Power:** 3W
- **Battery Capacity:** 1200 mAh
- **Voltage:** 5V
- **Power Input:** USB-C
- **IP Rating:** IPX4
- **Lumens:** 1500-1700
- **Colour Temperature:** 2700k-6000k

Product Usage Instructions

1. **Charging:** Connect the USB cable to the charging port of the lamp base and the other end to a power socket. The blue light indicates charging. Charge for at least 5 hours for optimal power. When fully charged, the light on the USB socket will turn off. Full charge provides more than 10 hours of continuous use. Discharge the battery during the first 10 uses.
2. **Power On/Off:** Use the provided remote control to turn the product on or off.
3. **Adjust Light Level:** Use the +/- buttons on the remote to adjust the brightness of the product.
4. **Select Colors:** Choose your favorite color from the 16 available options to match your environment or mood.
5. **Select Light Mode:** Choose from one of the 4 preprogrammed lighting modes for your desired effect.
6. **Battery Replacement:** Use original rechargeable batteries only. Contact the manufacturer for battery replacement. To remove the battery, ensure the product is off, loosen the bottom screw, remove the connector, and dispose of the battery properly.

FAQ

- **Q: Can I use regular batteries instead of rechargeable ones?**

A: No, it is recommended to use original rechargeable batteries to avoid any potential danger.

- **Q: How long does a full charge last?**

A: A full charge can last for more than 10 hours of continuous use.

- **Q: How many colors can I choose from?**

A: You can select your favorite color from a total of 16 available options.

PRODUCT SPECIFICATIONS

- Model: WL-MSLMSP-CLR
- Speaker Power: 3W
- Battery capacity: 1200 mAh
- Voltage: 5V
- Power Input: USB-C
- IP Rating: IPX4
- Lumens: 1500-1700
- Color Temperature: 2700k-6000k

PACKAGING CONTENT

- 1 Mushroom LED Light
- 1 USB-C Cable
- 1 Remote Control
- 1 User Manual

PRODUCT INSTRUCTIONS


1. Touch the lighting fixture to turn on and off the light for 2 seconds, and touch the same position on the top to adjust the brightness of the light. It is 100%, 50%, and 25% (see the page logo) There is a red switch button at the bottom of the product. Press and hold the bottom switch button for 2 seconds to turn on Bluetooth and lights. Do not touch the middle audio part at the top. Press and hold the top metal ring for 2 seconds to turn on the lights, and tap repeatedly to cycle through the 7 color options.
2. The remote control can adjust the functions of red, green, blue, white, pink, golden light, fast flashing, slow flashing, breathing dimming, automatic seven color dimming, and flashing. Bluetooth mode, connected to a phone or computer, allows one phone to control two desk lights, brightness, music control, sound control, selection mode, switch, previous and next tracks. Any mobile phone or other device can be connected to Bluetooth without checking. (Bluetooth name: XH-016).
3. The remote control comes with a battery for use. Before use, remove the battery protection film and use the USB Huawei data cable for more sensitive and convenient buttons. When the battery is out of charge, it can be charged through a USB cable and used in indoor environments with a seasonal protection level of IP20.
4. Connect the USB cable to the charging port of the lamp base, and connect the other end to the power socket. The blue light indicates that charging is in progress. Please continue charging for more than 5 hours to ensure

optimal power. When fully charged, the blue or green light on the USB socket will turn off. Full charge can last for more than 10 hours of continuous use. We recommend fully discharging the battery during the first 10 uses to ensure optimal battery condition. When the battery runs out, charge it as soon as possible: the battery life will be shortened if there is no electricity for a long time.

5. Please use original rechargeable batteries and avoid using regular batteries under any circumstances. This may cause danger. If you need to replace the battery, please contact the manufacturer or distributor company.
6. Removing the battery: Ensure that the product is not powered on. Loosen the bottom screw on the opposite side, remove the connector, and place the battery in a suitable processing center.

REMOTE CONTROL

Use the provided remote to turn the product on or off, to change the light color, or to select from the available lighting modes.

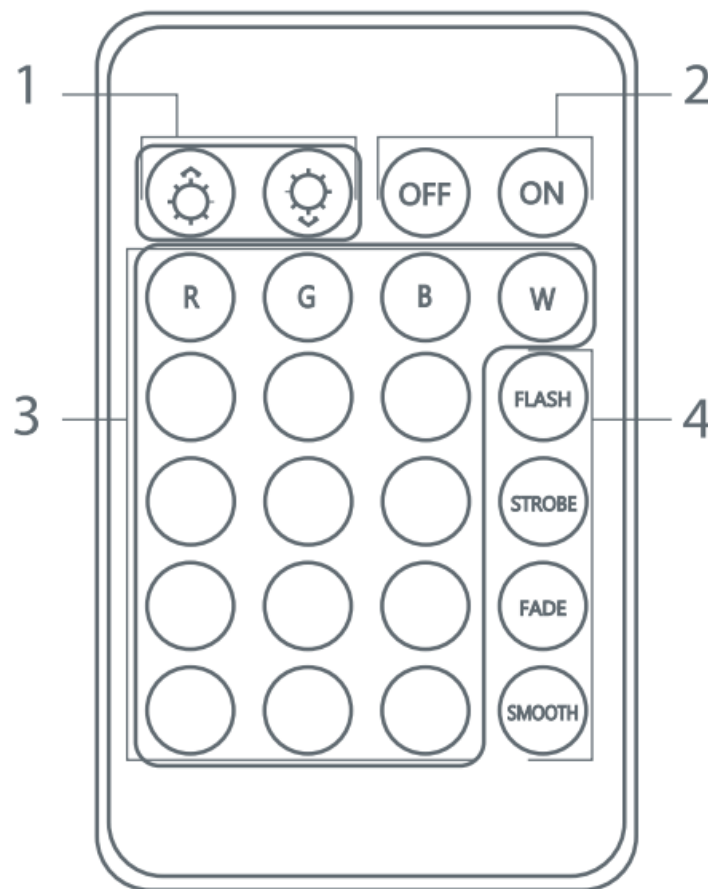

1. Adjust Light Level:

Use the  and  buttons to adjust the brightness of the product.

2. Power ON/OFF:

Easily turn the product on and off remotely.

3. Select Colors:

Select your favorite color, or a color that matches your environment or mood, from 16 available options.

4. Select Light Mode:

Choose from one of 4 preprogrammed lighting modes for your favorite effect.

Warning:

- This lamp is equipped with a rechargeable lithium battery. The battery should not be exposed to heat or sunlight. Do not use it during charging,
- Under no circumstances should lighting fixtures be rerouted or heavily pressurized, as any changes will cause safety hazards. The manufacturer is not responsible for any modified products

Attention:

- Please carefully read the product usage and maintenance instructions; Follow the maintenance instructions to ensure the safety of the product, and properly keep the maintenance manual.
- The manufacturer does not assume any responsibility for human damage caused by improper use, and any resulting damages are not covered by the warranty. Any changes to the product are not covered by the warranty- Do not put the product into water or use damp hands to take it.
- If any faults or damages are found, please stop using immediately and contact your local dealer or qualified technical personnel
- The rated input current of the charger is 85v-240v~50/60Hz, and the rated output current is 5VDC1A. It is necessary to use a charger and data cable according to the specified requirements.

Maintenance and upkeep:

- If the charging cable is damaged, please choose a data cable with the same characteristics as the original data cable. When cleaning the lamp, please do not connect it to the power supply and remember to use a soft cloth, neutral cleaning agent or soap solution for cleaning.
- Avoid using alcohol or cleaning agents containing acetone, ammonium sulfate, ammonia, or any other solvents. Avoid mechanical pressure and heavy sliding of fish. Protection level IP54: prevent dust and prevent people from swimming. IP54 protection level can only be ensured when the USB interface is closed – the replacement service of the lamp source can only be provided by the manufacturer.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WONDERLIT© COPYRIGHT ALL RIGHTS RESERVED. WONDERLITO is an innovative brand of Truststone Group LLC. No portion of this design may be reproduced without express written permission. Other trademarks and trade names are those of their respective owners. All rights reserved. Distributed by Trust stone Group LLC, 1370 Broadway, New York, NY 10018.

FCC Warning

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.


- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body

Documents / Resources

	<p>WONDERLIT WL-MSLMSP MUSHROOM LED Light and Wireless Speaker [pdf] User Manual</p> <p>WL-MSLMSP-CLR, 2BBPL-WL-MSLMSP, WL-MSLMSP MUSHROOM LED Light and Wireless Speaker, WL-MSLMSP, MUSHROOM LED Light and Wireless Speaker, MUSHROOM, MUSHROOM Wireless Speaker, MUSHROOM LED Light, LED Light and Wireless Speaker, LED Light, LED, Light</p>
---	---

References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.