

# **WOOX R6113 Smart Plug User Guide**

Home » woox » WOOX R6113 Smart Plug User Guide 🖔



R6113 Smart Plug User Guide




#### **Contents**

- 1 Quick Start GuideSpecification
- 2 Use
- 3 Safety
- 4 Cleaning and maintenance

Warning!

- **5 Documents / Resources** 
  - **5.1 References**
- **6 Related Posts**

# **Quick Start Guide**

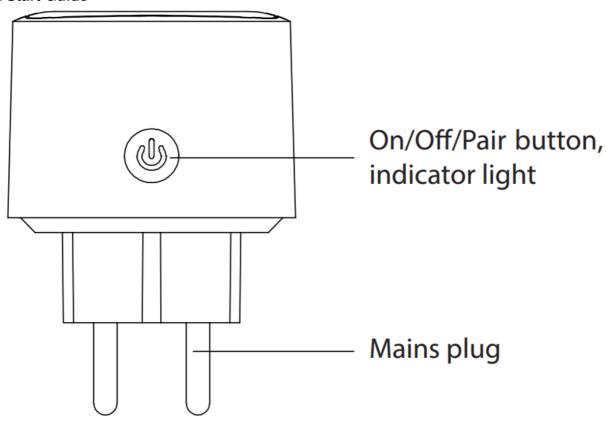

# **Specification**

Voltage: 220-240V~50Hz Nominal voltage: 230VAC Max. load: 16A/3680W

Weight: 82g

Dimensions: 55x55x81.6mm Operating temperature: -10 ~ 45 Operating humidity: 95%RH

Wireless connection: 802.11 b/g/n Wi-Fi 2.4GHz

Frequency: 2.412~2.472GHz Max. Transmission Power: 18.88 dBm

Bluetooth: Supported Requirement to use

1. Wood home app

2. WLAN-enabled router: 2.4GHz (Separate Band)

# Use

- 1. Download and install the app "WOOX Home" from Apple App Store or Google Play Store on your mobile device.
- 2. Open Bluetooth on a smartphone
- 3. Enable Bluetooth and location permission for the WOOX Home app, so that the app can find Smart Plug via Bluetooth.
- 4. Launch the app "WOOX Home".
- 5. Create a new account or log in to your existing account.
- 6. Tap "+" to add the device
- 7. Select the applicable product type from the list of products.
- 8. Ensure the indicator light is quickly flashing (flashing 2 times per second). If the indicator light isn't flashing: press and hold the pair button for 5 seconds until the indicator light starts to quickly flash.
- 9. Confirm the Wi-Fi network and password.

Note: only 2.4GHz WiFi is supported.

- 10. The app will now search for the device and register is to your account.
- 11. Enter the device name.

Note: The device name will also be used by Amazon Alexa and Google Home.

# Safety



- To reduce the risk of electric shock, this product should only be opened by an authorized technician when service is required.
- Disconnect the product from the mains and other equipment if a problem should occur.
- Read the manual carefully before use. Keep the manual for future reference.
- Only use the device for its intended purposes. Do not use the device for other purposes than described in the manual.
- Do not use the device if any part is damaged or defective. If the device is damaged or defective, replace the
  device immediately.
- The device is suitable for indoor use only. Do not use the device outdoors.
- Do not expose the product to water or moisture.
- Do not touch the device with wet hands.

## Cleaning and maintenance Warning!

- Do not use cleaning solvents or abrasives.
- Do not clean the inside of the device.
- Do not attempt to repair the device. If the device does not operate correctly, replace it with a new device.
- Clean the outside of the device using a soft, damp cloth.

#### Support

If you need further help or have comments or suggestions please visit www.wooxhome.com

# **Documents / Resources**



### References

• **Solution** Connecting your home to a smarter future; WOOX Home

Manuals+, home privacy