



# WOOX R6113 Switchable WLAN Socket User Guide

[Home](#) » [woox](#) » WOOX R6113 Switchable WLAN Socket User Guide 

## Contents


- [1 WOOX R6113 Switchable WLAN Socket](#)
- [2 Quick Start Guide](#)
- [3 Specification](#)
- [4 Use](#)
- [5 Safety](#)
- [6 Cleaning and maintenance](#)
- [7 Support](#)
- [8 Documents / Resources](#)
  - [8.1 References](#)
- [9 Related Posts](#)

# WOOX

## WOOX R6113 Switchable WLAN Socket



## Quick Start Guide

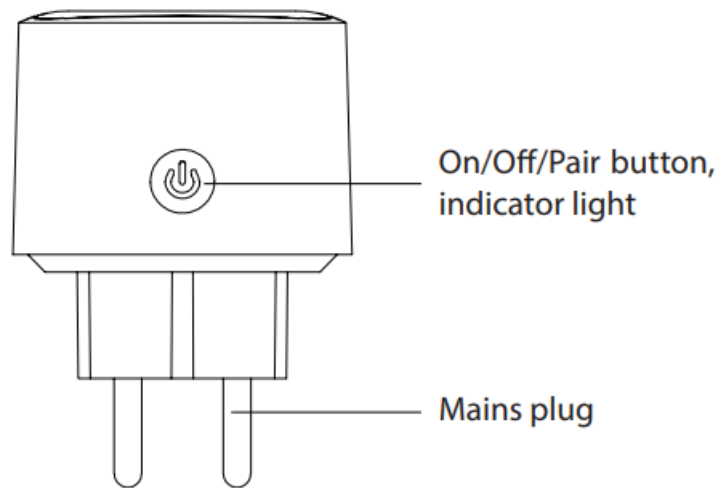

## Specification

- **Voltage:** 220-240V~50Hz
- **Nominal voltage:** 230VAC
- **Max. load :** 16A/3680W
- **Weight:** 82g
- **Dimensions:** 55x55x81.6mm
- **Operating temperature:** -10°C ~ 45°C Operating humidity: ≤95%RH
- **Wireless connection:** 802.11 b/g/n Wi-Fi 2.4GHz Frequency: 2.412~2.472GHz
- **Max. Transmission Power:** 18.88 dBm Bluetooth: supported

## Requirement to use

1. Woon home app
2. WLAN-enabled router: 2.4GHz (Separate Band)

## Use

1. Download and install the app “WOOX Home” from Apple App Store or Google Play Store on your mobile device.
2. Open bluetooth on smartphone.
3. Enable bluetooth and location permission for WOOX Home app, so that the app can find Smart Plug via bluetooth.
4. Launch the app “WOOX Home”.
5. Create a new account or log in to your existing account.
6. Tap “+” to add the device
7. Select the applicable product type from the list of products.
8. Ensure the indicator light is quick flashing (flashing 2 times per second). If the indicator light isn't flashing: press and hold the pair button for 5 seconds until the indicator light starts to quick flashing.
9. Confirm the Wi-Fi network and password. Note: only 2.4GHz WiFi is supported.
10. The app will now search for the device and register it to your account.

11. Enter the device name.

**Note:** The device name will also be used by Amazon Alexa and Google Home.

## Safety



- To reduce risk of electric shock, this product should only be opened by an authorized technician when service is required.
- Disconnect the product from the mains and other equipment if a problem should occur.
- Read the manual carefully before use. Keep the manual for future reference.
- Only use the device for its intended purposes. Do not use the device for other purposes than described in the manual.
- Do not use the device if any part is damaged or defective. If the device is damaged or defective, replace the device immediately.
- The device is suitable for indoor use only. Do not use the device outdoors.
- Do not expose the product to water or moisture.
- Do not touch the device with wet hands.

## Cleaning and maintenance

## Warning!

- Do not use cleaning solvents or abrasives.
- Do not clean the inside of the device.
- Do not attempt to repair the device. If the device does not operate correctly, replace it with a new device.
- Clean the outside of the device using a soft, damp cloth.

## Support

If you need further help or have comments or suggestions please visit [www.wooxhome.com](http://www.wooxhome.com)

## Documents / Resources

[illegible]

## References

-  [Connecting your home to a smarter future; WOOX Home](#)

Manuals+.