



WOOX R6132 Smart WiFi Multi Power Socket User Guide

[Home](#) » [woox](#) » WOOX R6132 Smart WiFi Multi Power Socket User Guide 



WOOX

**Smart WiFi Multi Power Socket
User Guide**



R6132

Contents

- [1 R6132 Smart WiFi Multi Power Socket](#)
- [2 Specification](#)
- [3 Safety](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)

R6132 Smart WiFi Multi Power Socket



Take As Global, SL hereby confirms that the R6132 SMART WIFI MULTI POWER SOCKET complies with Directive 2014/53 / EU. The full text of the EU Declaration of Conformity is below internet address available: www.wooxhome.com



Compliance with the WEEE Directive and waste disposal. This product has been manufactured from parts and materials of high quality that can be reused and can be recycled. Therefore, do not throw this product away with waste normal household appliances at the end of their useful life. Take him away at a collection point for recycling equipment electric and electronic. This is indicated by this symbol on the product, in the user manual and on the packaging. Please consult the local authorities to find out where the point of nearest collection. Help protect the environment by recycling used products.

Tech support


If you need further help or have comments or suggestions please visit: www.wooxhome.com or FAQ & Feedback page in the App.

Tech support contact:

European: support@wooxhome.eu, +310)76.7114805 Non-EU: support@wooxhome.com

How to use FAQ & Feedback in the App:

Step 1: Navigate to “Me” > “FAQ & Feedback”. Step 2: If “Most Asked” and FAQ not help, you could submit your question via “Feedback/Suggestions; we will reply you in 24 hours.

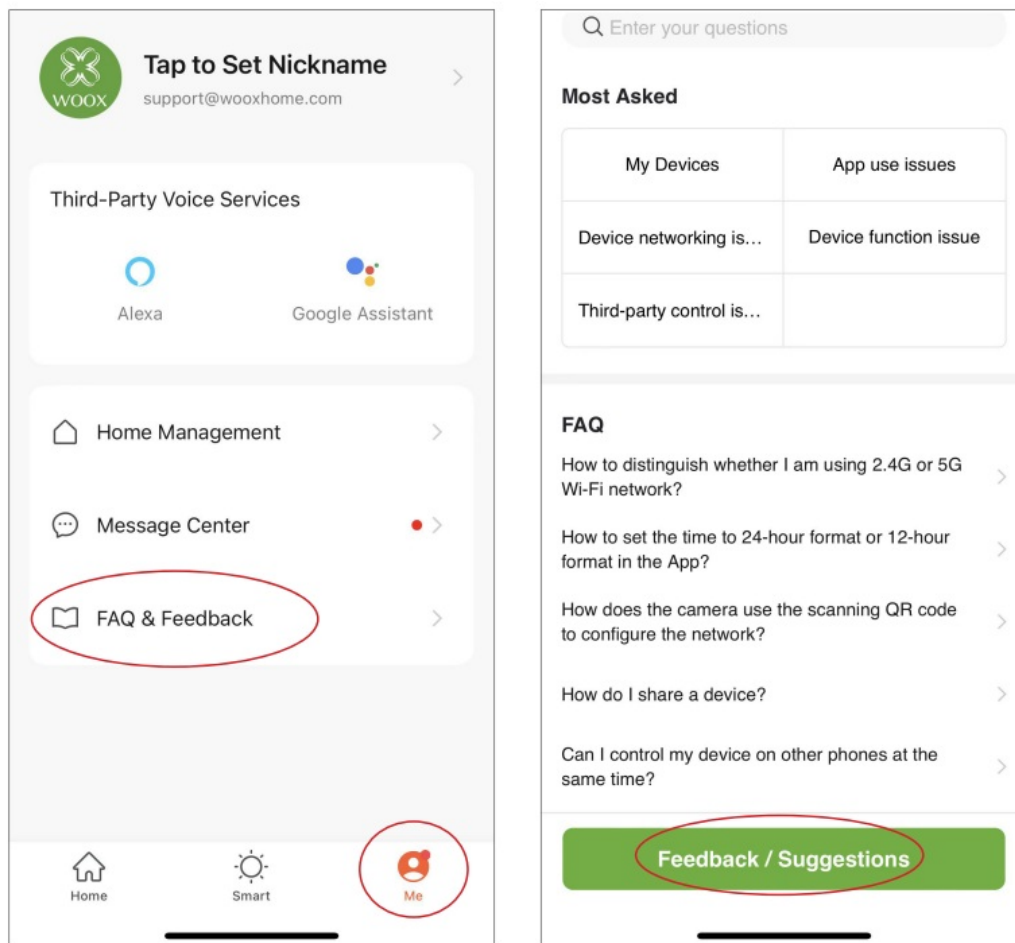


WOOX Home Youtube Channel

You could also find WOOX product videos in Youtube by searching “woox home” or “WOOX + model number”.



Facebook group support


We also create a facebook group for technical support. Searching “WOOX HOME users” to join the group and leave your question.

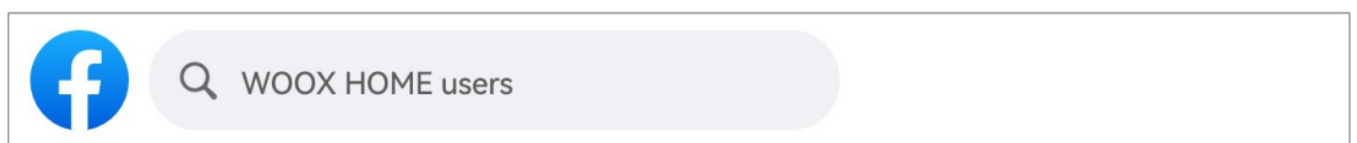

WOOX Home app QR code



<http://venztv.com/QRCodeJump/jump.html>

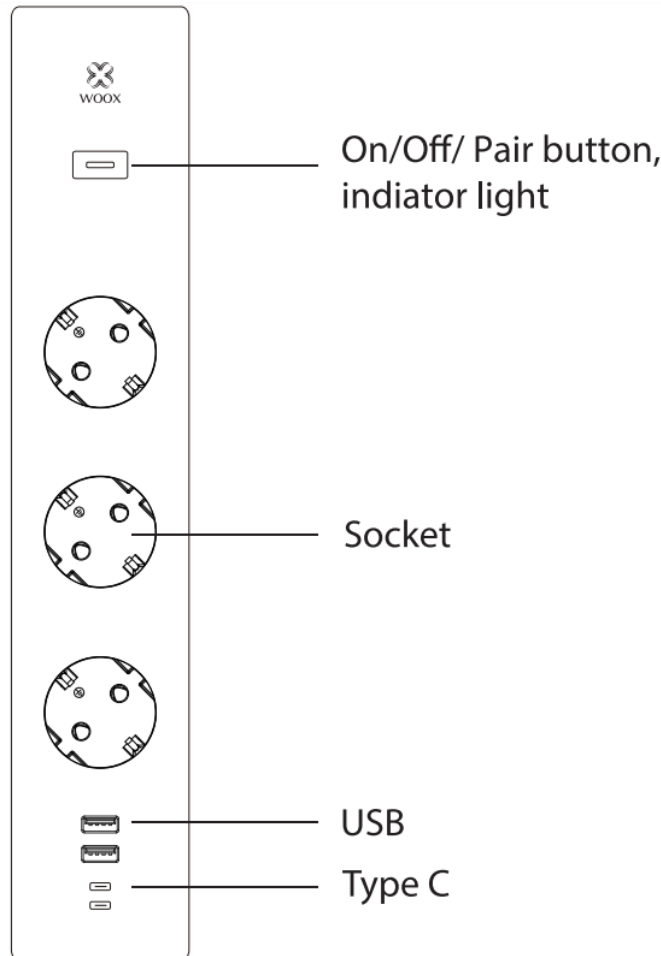

Specification

Item no.: 2961331, Voltage: 230V-50Hz
Max. load :16A/3680W/socket, 16A/3680W/total
Type-A and Type-C output (per port): DC 5.0V/3A
Total output (4port): DCS.OV/3A (max)
Weight:590g; Cable length: 1.5 meters
Dimensions: 350x65x40mm Operating
temperature: -10 °C —40 °C Operating
humidity: 580%RH
Wireless connection: 802.11 b/g/n Wi-Fi 2.4GHz
Frequency: 2.412-2.472GHz

Requirement to use

1. Woon home app
2. WLAN-enabled router: 2.4GHz (Separate Band)

Use

1. Download and install the app “WOOX Home” from Apple App Store or Google Play Store on your mobile device.
2. Launch the app “WOOX Home”.
3. Create a new account or log in to your existing account.
4. Tap “+” to add the device.
5. Select the applicable product type from the list of products.
6. Ensure the indicator light is quick flashing (flashing 2 times per second). If the indicator light isn't flashing: press and hold the pair button for 5 seconds until the indicator light starts to quick flashing.
7. Confirm the Wi-Fi network and password. Note: only 2.4GHz WiFi is supported.
8. The app will now search for the device and register it to your account.
9. Enter the device name.

Note:The device name will also be used by Amazon Alexa and Google Home.

Safety



- To reduce risk of electric shock, this product should only be opened by an authorized technician when service is required.
- Disconnect the product from the mains and other equipment if a problem should occur.
- Read the manual carefully before use. Keep the manual for future reference.
- Only use the device for its intended purposes. Do not use the device for other purposes than described in the manual.
- Do not use the device if any part is damaged or defective. If the device is damaged or defective, replace the device immediately.
- The device is suitable for indoor use only. Do not use the device outdoors.
- Do not expose the product to water or moisture.
- Do not touch the device with wet hands.


Cleaning and maintenance Warning!

- Do not use cleaning solvents or abrasives.
- Do not clean the inside of the device.
- Do not attempt to repair the device. If the device does not operate correctly, replace it with a new device.
- Clean the outside of the device using a soft, damp cloth.

Support

If you need further help or have comments or suggestions please visit www.wooxhome.com

Documents / Resources

	<p>WOOX R6132 Smart WiFi Multi Power Socket [pdf] User Guide</p> <p>R6132 Smart WiFi Multi Power Socket, R6132, Smart WiFi Multi Power Socket, WiFi Multi Power Socket, Multi Power Socket, Power Socket, Socket</p>
---	--

References

-  [Connecting your home to a smarter future; WOOX Home](#)