



WOPET FT50 Automatic Cat Feeder 4L User Guide

[Home](#) » [WOPET](#) » WOPET FT50 Automatic Cat Feeder 4L User Guide 


WOPET FT50 Automatic Cat Feeder 4L



Contents

- [1 Panel Introduction](#)
- [2 Program Setting](#)
- [3 FAQs](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)

Panel Introduction

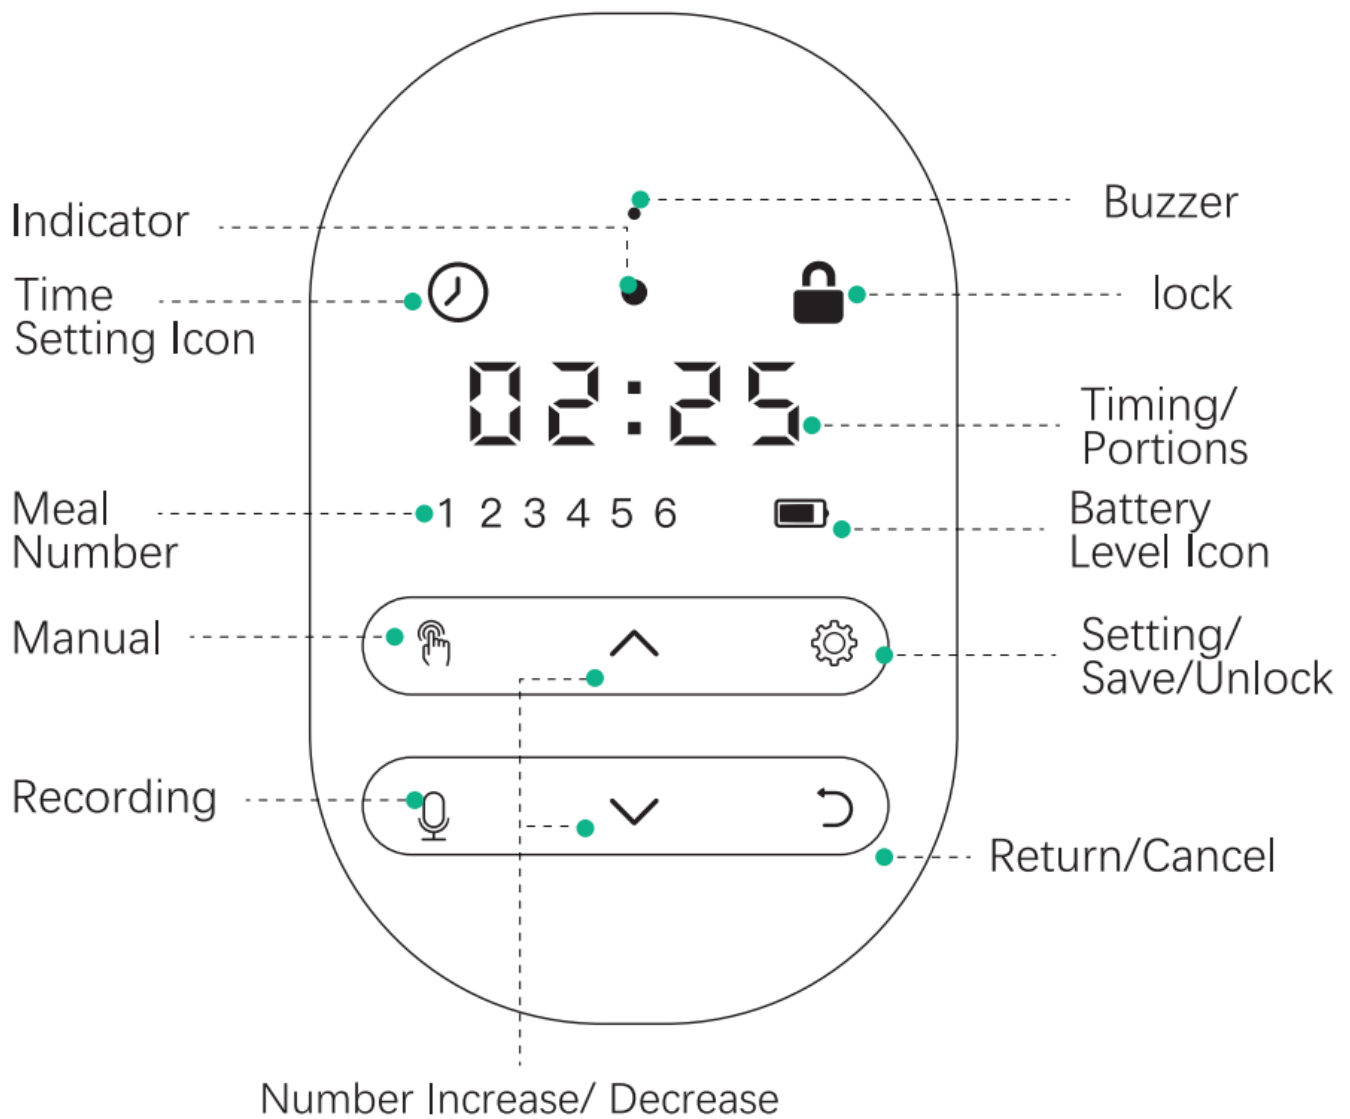

Program Setting





Our device uses a 24-hour clock system, for example, 16:00 is equivalent to 4:00 PM (see page 16 in the user manual for details).

Step 1 – Unlock

Power up OR long press  2s if screen locked.



Step 2 – Set current time

Clock icon flashes, press  to start setting current time with  /  then press  to save.






Step 3.1 – Set feeding time

Press  then number 1 flashes, press  and  /  to set the feeding time and press  to save.



Step 3.2 – Set feeding portion


Press the  /  to adjust the portion then press  to save.



Note:

max 8 portions for each meal,
1 portions = 4/3 Tbsp (1/12 cup, 20ml)

Step 3.3 – Set other meals plan

Press  move the next meal setting, repeat steps to set up feeding time and portion.



Step 4 – Return main interface

All setting done press  back to main interface.



FAQs

Problem	Solutions
How to set the current time	<ol style="list-style-type: none"> 1. Upon turning on, press the settings button to enter current time setup. 2. The clock will flash, adjust the hours using the up and down keys, and save by pressing the settings button. 3. At this point, the minutes will flash, adjust the minutes using the up and down keys, and again save by pressing the settings button. 4. When the numbers for hours and minutes are no longer flashing, the current time setting is complete.
How to set the Feeding time	<ol style="list-style-type: none"> 1. Please ensure to set the correct current time first. 2. Press the down button to enter the setup for the first meal, the number "1" will flash, 3. adjust the time with the up and down keys and save by pressing the settings button. Adjust the meal portions using the up and down keys, and save by pressing the settings button. 4. Repeat the above steps for meals 2-6.
Food did not dispense at the set time	<ol style="list-style-type: none"> 1. Ensure the food's diameter is less than 12mm, only suitable for dry food. 2. Check if the turntable is jammed, if so please clean it first (see pages 10-11 in the user manual for details). 3. Check if the food container still has food, please replenish in time if it's running low. 4. If it is battery-powered, please ensure there's sufficient battery power. We recommend using the plug and batteries at the same time. 5. For first-time use, please manually feed four times to ensure the food fills the slot. Press the manual feeding button on the machine to feed.
The voice broadcast volume is too low	When recording, try to be as close to the machine as possible and speak a little louder.
How much is each portion?	1 portions= 12g = 20ml = 1/12cup =4tsp =4/3Tbsp
The buttons are not responding, there's no sound.	Make sure the device is not locked, if it is, please unlock it first.
How to cancel the feeding plan for the first meal?	Please set the number of feeding portions for the first meal to 0

Thank you for choosing WOPET pet feeder.


Please read the quick guide before using, if you have any problems when using our product, kindly send email with order number to our mailbox: support@wopet.com for help, we'll response within 24 hours.



Scan the QR code to set up the feeder



Documents / Resources

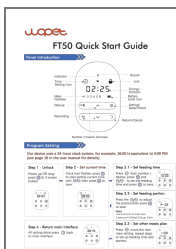

[WOPET FT50 Automatic Cat Feeder 4L](#) [pdf] User Guide
FT50 Automatic Cat Feeder 4L, FT50, Automatic Cat Feeder 4L, Cat Feeder 4L, Feeder 4L

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.