



Onn Universal Remote Manual

User Manual



About this item

- **(TV specification)** The remote works for all Onn. Roku TVs.
- **(Remote key features)** 4 shortcuts buttons for Netflix, Amazon, YouTube and Hulu for your convenience. The remotes has TV power button and Volume buttons. Max operation distance is up 25 ft. TV response time is less than 0.1 second. It's a perfect replacement for your old Roku TV remote.
- **(Easy to use)** ⚠️⚠️ No setup Required ⚠️⚠️ NO programming.
- **(High-grade material).** First-class ABS and silicon not only make the remote feel comfortable but also make it durable.
- **(Reminder)** ⚠️⚠️ ATTENTION: the remote does not work with Roku Player and Roku stick. 2 AAA batteries are required, batteries are not included.

Note: Products with electrical plugs are designed for use in the US. Outlets and voltage differ internationally and this product may require an adapter or converter for use in your destination. Please check compatibility before purchasing.

Battery Installation

Your universal remote requires two (2) AAA Alkaline batteries (not included).

To Install Batteries

1. Remove the battery compartment cover by sliding the cover down.
2. Match the (+) and (-) marks on the batteries to the (+) and (-) marks inside the battery compartment, then insert two (2) AAA Alkaline batteries, Be sure to use fresh batteries.
3. Slide the battery compartment cover back into place.

Note: If your remote stops operating properly, replace the batteries with new ones. The remote will retain the codes you have programmed for up to 10 minutes after the batteries are removed.

Button Function

TV, CBL/SAT, DVD/ VCR, AUX
Selects the device to control.

Red Indicator Light when any button is pressed.

ON•OFF Turns the device On or Off.

EXIT Exits On-Screen Menus.

MUTE Turns off the TV sound while the picture remains. In **SHIFT** mode **OK** Selects menu items for the device you are controlling.

INPUT Selects the video inputs from available viewing sources.

NUMBERS
Enter numbers for direct channel selection.

DOT: Used to select digital channels, for example: 4.1, 9.2.

RECORD, PLAY STOP, REWIND, FAST FORWARD, PAUSE

INFO displays/ selects on-screen channel information, etc.

MENU displays the Menu on the TV and other devices. Use the **SHIFT** button to access this feature.

VOLUME UP/DOWN
Changes the volume level of the device, normally the TV.

CHANNEL UP/DOWN
Changes the channels. In **SHIFT** mode, these buttons navigate on-screen cursors and are used to make selections.



SETUP button is used to program the remote.

SHIFT is the alternative function of this button. Use the **SHIFT** button to access the Menu and Navigation functions of your device. To enter the **SHIFT** mode press this button once. To exit the shift mode, press the **SHIFT** button again.

NOTE: The red indicator light will blink when the remote is in SHIFT mode.

ENTER

For some TV models, the **ENTER** button is used after a channel number is entered to immediately change to the selected channel.

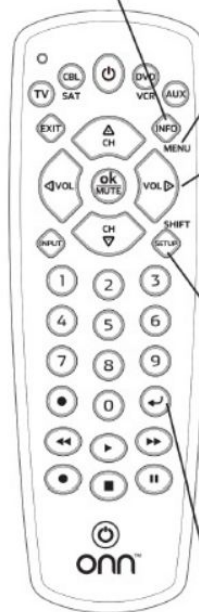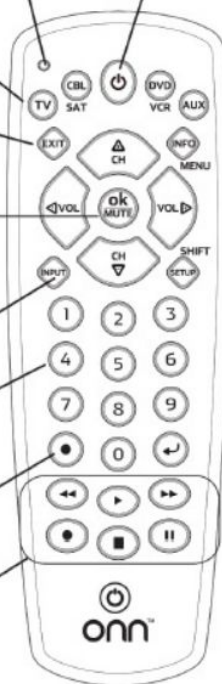

Programming Your Remote

Your ONN universal remote control is designed to control up to 4 different audio/video devices such as TV DVD, VCR, satellite, cable and audio using only one remote. To use this remote, you will need to program it to control the devices of your choice. There are two ways to program the remote – direct code entry or auto code search.



Controlling Combo Devices

Some Combo devices (e.g. TV/VCR, TV/DVD, DVD/VCR, etc~) will require you to setup up two different Mode buttons to control both parts of the Combo device. For example, if you have a TV/DVD Combo, you might need to set up one code under the TV button to control the TV part AND a separate code (under any other Mode button) to control the DVD part.

Master Volume Feature

The Master Volume Feature allows you to select a single device (TV or audio receiver) that the volume control always controls. For example, the remote can be in TV mode while the volume buttons control the volume on your audio receiver instead of your TV.

Programming your remote is as easy


1. Press and hold the **PROGRAM** button until the  button lights up red. The  button's red indicator light remains red.





2. Select the device you want to program from the

Device Categories:



The  button's red indicator light blinks once and remains on.




3. Enter the 4-digit code from the included list for the category and brand of your device. The button's  red indicator light shuts off if a valid code was entered. If the  button's red indicator light is still on that means an incorrect code was entered. In that case, check the list again and re-enter the code.





What is a RokuTV™?

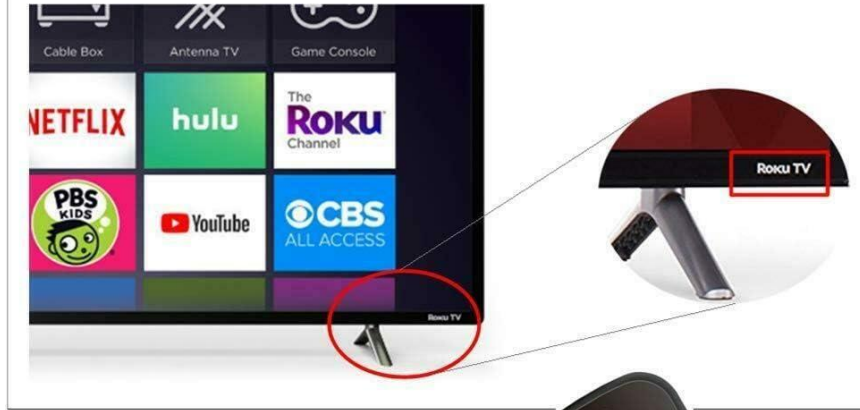

For RokuTV™ ONLY

**RokuTV™ is a smart TV
with built-in Roku system.**

NOT for Roku Player

**ROKU Player is a HDMI
device plugged into a TV.**



FAQ



[Manuals.plus](https://manuals.plus)

- **Q: What is the Onn Universal Remote Manual and Codes [ONB13AV004] used for?**

A: The Onn Universal Remote Manual and Codes [ONB13AV004] is a guide for programming the Onn universal remote control to operate up to four different audio/video devices such as TV, DVD, VCR, satellite, cable, and audio using only one remote.

- **Q: What does the manual provide instructions for?**

A: The manual provides detailed instructions on how to install batteries, program the remote using direct code entry or auto code search, and control combo devices. It also includes a master volume feature that allows users to select a single device (TV or audio receiver) that the volume control always controls.

- **Q: What troubleshooting tips are provided in the manual?**

A: The manual provides troubleshooting tips for situations where the remote does not operate the device or some features of the device.

FAQ



Manuals.plus

- **Q: Is there a code list included in the manual?**

A: Yes, the manual includes a code list for programming the remote.

- **Q: Is there a QR code provided in the manual?**

A: Yes, there is a QR code provided in the manual that can be scanned to view a helpful demonstration video for programming the ONN remote.

- **What is the difference between the ONB13AV004 and the ONNB13AV004?**

They are exactly the same remote. The only difference is the packaging.

- **What TV brand is ONN?**

ONN is a brand of electronics sold exclusively at Walmart stores.



Manuals.plus

**Like And Subscribe
us for more Videos
Manuals.plus**

