



Action Camera

Wi-Fi · Waterproof · Ultra HD

CE   
www.eklasse.ae



Wide Angle
Lens



HDMI



Ultra HD

 
 


 
Waterproof
to 30m



Long-lasting
battery

THE BASICS

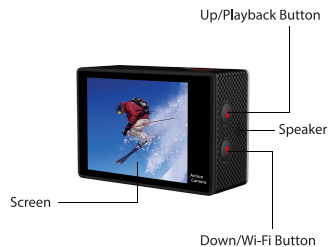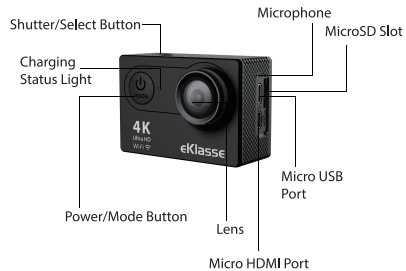

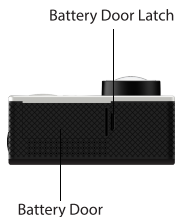

WATERPROOF HOUSING



ACCESSORIES



Waterproof Housing



Handle Bar/
Pole Mount



Mount 1



Mount 2



Mount 3



Mount 4



Mount 5



Mount 6



Mount 7



Clip 1



Clip 2



Helmet
Mounts



Bandages



Battery



Lens Cloth



Tethers



Protective
Backdoor



USB Cable



 
 
Charger



2.4G Remote
(Optional)

MOUNTING YOUR CAMERA

Attach your camera to helmets, gear and equipment.

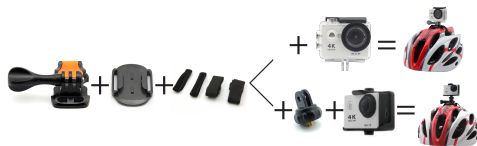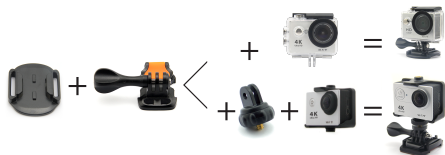

GETTING STARTED

HELLO

Congratulations on your new camera! This user manual will help you learn the basics of capturing life's most incredible moments!

To power ON:

 
Press the **Power/Mode Button**.

To power OFF:

Press and hold the **Power/Mode Button**.

OVERVIEW

Turn camera ON and repeatedly press the **Power/Mode Button** to cycle through camera modes and settings. The modes will appear in following order:



Video

Record Video



Photo

Capture a single photo.



Burst Photo

Capture photo bursts



Time Lapse

 
Shoot a series of photos at set time intervals



Settings

Adjust camera settings, resolution and more.

SETTINGS



Press the **Shutter/Select Button** to enter the settings menu. Repeatedly press the **Power/Mode Button** to cycle through options and press the **Shutter/Select Button** to select desired option. Or use the **Up/Playback** or **Down/Wi-Fi Button** to cycle through the various options.

Video Resolution:

4K25/2.7K30/1080p60/1080p30/720p120

MicroSD Card	4k25/2.7k30	1080p60	1080p30/720p120
32 GB	60 mins	120 mins	240 mins
16 GB	30 mins	60 mins	120 mins

Looping Video: Off/On (4K & 2.7K not supported)

Time Stamp: Off/Date/Date & Time

Exposure: +-2.0/+-1.7/+-1.3/+-1.0/+-0.7/+-0.3/0

Photo Resolution: 12M/8M/5M/4M

Burst Photo: 3 Photos

Time Lapse: 2s/3s/5s/10s/20s/30s/60s

Continuous Lapse: Off/On

Power Frequency: 50Hz/60Hz/Auto

Language: English/Traditional Chinese
/Italian/Spanish/Portuguese/German/
Dutch/France/Czech/Polish/Turkish/
Russian/Japanese/Korean/Thai

Date & Time: MM/DD/YY, DD/MM/YY,
or YY/MM/DD

Sound Indicator: Shutter On/Off, Start Up 1/2/3/
None, Beep On/Off, Volume
0/1/2/3

Upside Down: On/Off

Screen Saver: Off/1 min/3 min/5 min

Power Saver: Off/1 min/3 min/5 min

Format: No/Yes

Reset: No/Yes

Version

VIDEO MODE

Video

To record Video, verify the camera is in **Video** mode. If the **Video** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears.

To start recording:

Press the **Shutter/Select Button**. The camera will emit one beep and the **Camera Status Lights** will flash while recording.

To stop recording:

Press the **Shutter/Select Button**. The **Camera Status Lights** stop flashing and the camera emits one beep to indicate recording has stopped.

This camera automatically stops recording when the battery is out of power. Your **Video** will be saved before the camera powers **OFF**.

PHOTO MODE

Photo

To capture a **Photo**, verify the camera is in **Photo** mode. If the **Photo** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears.

To take a photo:

Press the **Shutter/Select Button**. The camera will emit the camera shutter sound.

BURST PHOTO MODE

Burst Photo

To capture a **Burst Photo** series, verify the camera is in **Burst Photo** mode. If the **Burst Photo** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears. In **Burst Photo** mode, your camera takes 3 photos in 1.5 seconds.

To take a Burst Photo series:

Press the **Shutter/Select Button**. The camera will emit camera shutter sounds.

TIME LAPSE MODE

Time Lapse

To capture a **Time Lapse** series, verify the **Continuous Lapse** is **ON** and camera is in **Time Lapse** mode. If the **Time Lapse** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears. In **Time Lapse** mode, your camera captures a series of photos at **2,3,5,10,20,30** or **60** second intervals.

To take Time Lapse:

Press the **Shutter/Select Button**. The camera initiates countdown and emits the camera shutter sound each time a **Photo** is taken.

PLAYBACK

Playing Back Videos and Photos

To enter the Playback menu:

1. Verify the camera is in **Camera modes**.
2. Press the **Up/Playback Button** to enter the **Playback** menu.
3. Repeatedly press the **Power/Mode Button** to cycle through **Video** and **Photo**.
4. Press the **Shutter/Select Button** to select desired option.
5. Use **Up/Playback Button** or **Down/Wi-Fi Button** to cycle through the various options.
6. Press the **Shutter/Select Button**.
7. To return to the **Playback menu**, press the **Power/Mode Button**.
8. **To exit**, hold down the **Up/Playback Button** for two seconds.

STORAGE/MICROSD CARDS

This camera is compatible with **16GB** and **32GB** capacity **microSD**, **microSDHC**, and

microSDXC memory cards. You must use a **microSD** card with at least a **Class 10 speed** rating. We recommend using brand name memory cards for maximum reliability in high-vibration activities.

BATTERY

To charge the battery

Use the 1A USB charger and USB cable that come standard with your camera.

*Third-party chargers and accessories may not be supported.

* Charging Time: 5 hours

COMPATIBILITY

* Compatibility varies by device. Content playback, sharing and access to the camera's memory card might be not available on some devices.

CAMERA APP

Connecting to the Ez iCam App (4K & 2.7K not supported)

The **Ez iCam App** lets you control your camera remotely using a smartphone or tablet. Features include full camera control, live preview, photo playback and sharing of select content and more.

1. Download the **Ez iCam App** to your smartphone or tablet at the **Google Play** or **Apple App Store**.
2. Press the **Power/Mode Button** to power camera **ON**.
3. Make sure the camera is in **Camera modes**.
4. Press the **Down/Wi-Fi Button** to turn on **Wi-Fi***.
5. In your smartphone or tablet's Wi-Fi settings, connect to the network called **"ICAM-EKAC02EG"** followed by a series of numbers.
6. Open the **Ez iCam App** on your smartphone or tablet.

* Press and hold the **Down/Wi-Fi Button** for three seconds to turn **OFF Wi-Fi**.

The **Ez iCam App** is compatible with smartphones and tablets listed below.

For Apple iOS

- * iPhone 6/6s/7 (Plus)(iOS10)
- * iPad Air & Mini (iOS10)

For Android:

- * Android 4X Quad-core devices




iOS / Android
App Download

 
LIVE STREAMING

This camera supports Facebook Live and YouTube Live. (Available only on Apple iOS)



Stream to Facebook Live or YouTube Live

1. Make sure you have paired the camera with the Ez iCam App.
2. Tap the camera icon in the bottom right corner of the picture, then tap the Live Streaming icon .

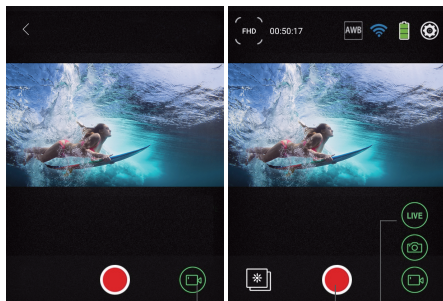


Camera icon

Red button

Live streaming icon

 3. Tap the red button and then tap the Facebook or YouTube icon.
4. Log in to Facebook Live or YouTube. Facebook or YouTube will open a browser window and request that you log in and grant certain permissions.

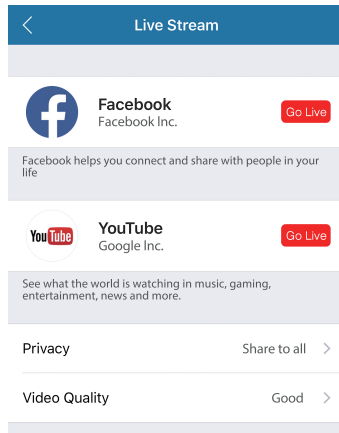

5. Tap the Facebook or YouTube icon to start Live Streaming.

2.4G Remote



Photo Button

Video Button

*Splashproof



Video

To record **Video**, verify the camera is in **Video** mode.

To start recording:

Press the **Grey Video Button**. The camera will emit three beeps and the **Camera Light** will flash while recording.

To stop recording:

Press the **Grey Video Button** again. The **Camera Light** will stop flashing while recording.



Photo

To capture a **Photo**, verify the camera is in **Photo** or **Video** mode.

To take a photo:

Press the **Red Photo Button**. The camera will emit a camera shutter sound.



Burst Photo

To capture a **Burst Photo** series, verify the camera is in **Burst Photo** mode.

To take a Burst Photo series:

Press the **Red Photo Button**. The camera will emit camera shutter sounds.



Time Lapse

To capture a **Time Lapse** series, verify the Continuous Lapse is **ON** and camera is in **Time Lapse** mode.

To take Time Lapse:

Press the **Red Photo Button**. The camera initiates countdown and emits a camera shutter sound each time a **Photo** is taken.

***To power OFF camera:**

Press and hold the **Red Photo Button**.