



# V1 CUSTOMIZABLE KEYBOARD USER MANUAL



# Fully Assembled Version

## Keyboard

1x Fully Assembled Keyboard

Including

1x Case

1x PCB

1x Steel Plate

 
1x Sound Absorbing Foam

1x Silicone Bottom Pad

4 Sets x Stabilizers

1 Set x Keycaps

1 Set x Switches

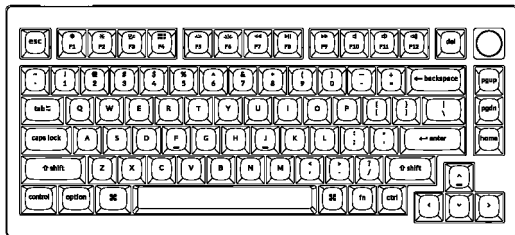

## Cable

1x Type-C to Type-C Cable

1x Type-A to Type-C Adapter

 
## Tools

1x Switch Puller

1x Keycap Puller

1x Screwdriver

1x Hex Key

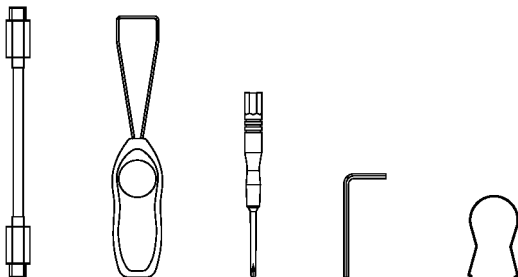

# Barebone Version

## Keyboard Kit

1x Keyboard Kit (Without Keycaps & Switches)

Including

1x Case

 
1x PCB

1x Steel Plate

1x Sound Absorbing Foam

1x Silicone Bottom Pad

4 sets x Stabilizers

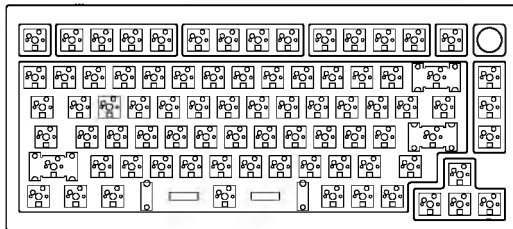

## Cable

1x Type-C to Type-C Cable

1x Type-A to Type-C Adapter

 
## Tools

1x Switch Puller

1x Keycap Puller

1x Screwdriver


1x Hex Key

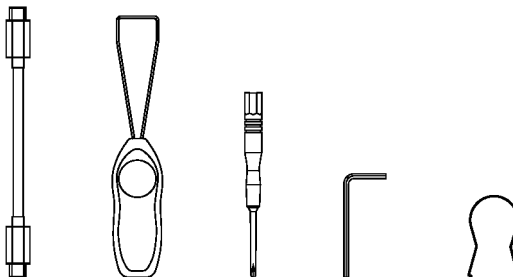

## QUICK START GUIDE


If you are a Windows user, please find the appropriate keycaps in the box, then follow the instructions below to find and replace the following keycaps.
 
### Mac / Windows

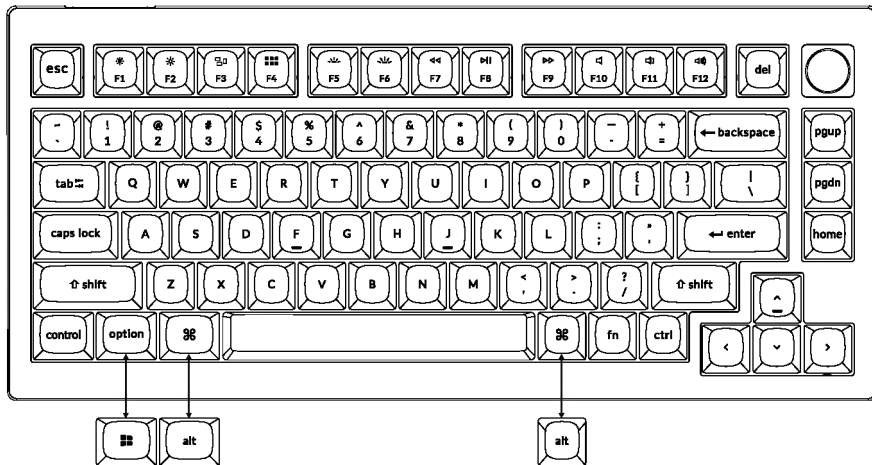

## 1 Switch To The Right System

 Please make sure the system toggle on the top left corner has been switched to the same system as your computer's operating system.



---

## 2 The VIA Key Remapping Software

Please visit [caniusevia.com](https://caniusevia.com) to download the latest VIA software to remap the keys. If the VIA software cannot recognize your keyboard, please reach out to our support to get the instruction.

 


### 3 The Layers

There are four layers of key settings on the keyboard. The layer 0 and layer 1 are for the Mac system. The layer 2 and layer 3 are for the Windows system.

If your system toggle is switched to Mac, then the layer 0 will be activated.


If your system toggle is switched to Windows, then the layer 2 will be activated. Remember that if you are using it in Windows mode, please make changes to the layer 2 instead of the top layer ( the layer 0 ). This is a common mistake people are making.




---

### 4 The Backlight

 Press fn + Q to change the lighting effect

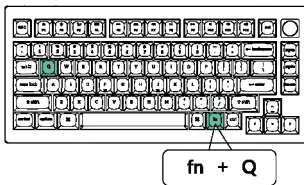


 Press fn + tab to turn the backlight on/off

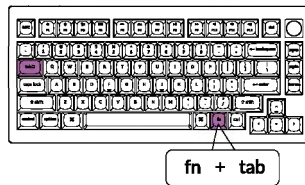


## 5 Adjust The Backlight Brightness

 Press fn + W to increase the backlight brightness

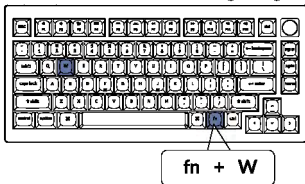

 Press fn + S to decrease the backlight brightness

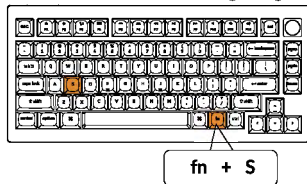

---

## 6 Warranty

The keyboard is highly customizable and easy to be rebuilt. If anything goes wrong with any of the keyboard components of keyboard during the warranty period, we will only replace the defective parts of the keyboard, not the whole keyboard.



 
## 7 Watch The Building Tutorial On Our Website

If you are building the keyboard for the first time, we highly recommend you watch the building tutorial video on our website first, then start building the keyboard yourself.



---

## 8 Factory Reset

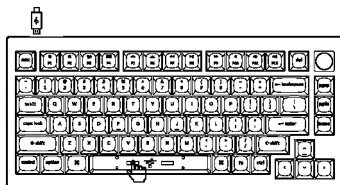




Troubleshooting? Don't know what's going on with the keyboard?

- ① Try factory reset by pressing **fn + J + Z** (for 4 seconds).
  - ② Download the right firmware for your keyboard from our website.  
Remove the power cable from the keyboard.
  - ③ Remove the space bar keycap to find the reset button on the PCB.
  - ④ Hold the reset key while plugging in the power cable and then release the reset key. The keyboard now will enter DFU mode.
  - ⑤ Flash the firmware with the QMK Toolbox.
  - ⑥ Factory reset the keyboard again by pressing **fn + J + Z** (for 4 seconds).
- \* Step by step guide can be found on our website.

## V1 CUSTOMIZABLE KEYBOARD SPECIFICATIONS
   
| Specifications       |                                       |
|----------------------|---------------------------------------|
| Layout               | 75%                                   |
| Switch type          | Mechanical                            |
| Width                | 148.72 mm                             |
| Length               | 328.45 mm                             |
| Front height         | 17.87 mm (without keycaps)            |
| Back height          | 25.84 mm (without keycaps)            |
| Front height         | 27.30 mm (with OSA keycaps installed) |
| Back height          | 36.62 mm (with OSA keycaps installed) |
| Keyboard feet height | 2 mm                                  |
| Angle                | 3.5 / 7.08 / 9.52 degree              |


# V1 MECHANICAL KEYBOARD OVERVIEW

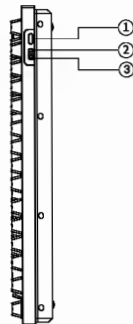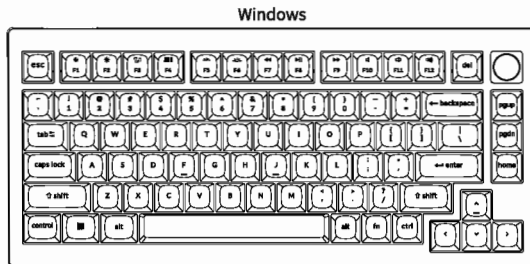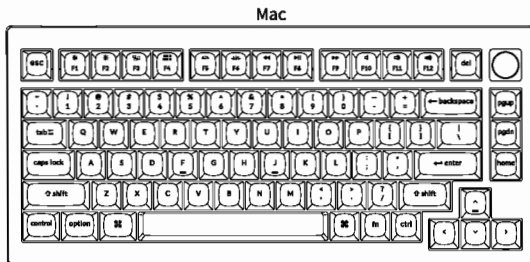


- ① Type-C Port
- ② Mac Layout
- ③ Windows Layout

## DEFAULT KEY LAYOUT:

 
**LAYER 0:** This layer will be activated when your keyboard's system toggle is switched to Mac.

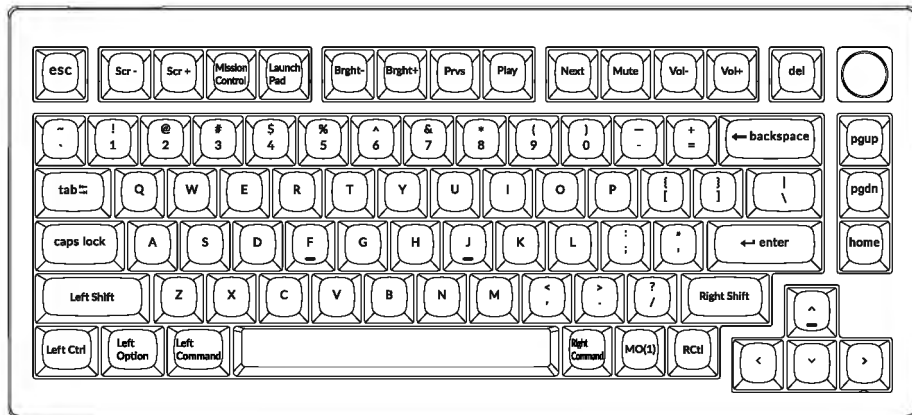

**LAYER 1:** This layer will be activated when your keyboard's system toggle is switched to Mac and press the fn/MO(1) key.

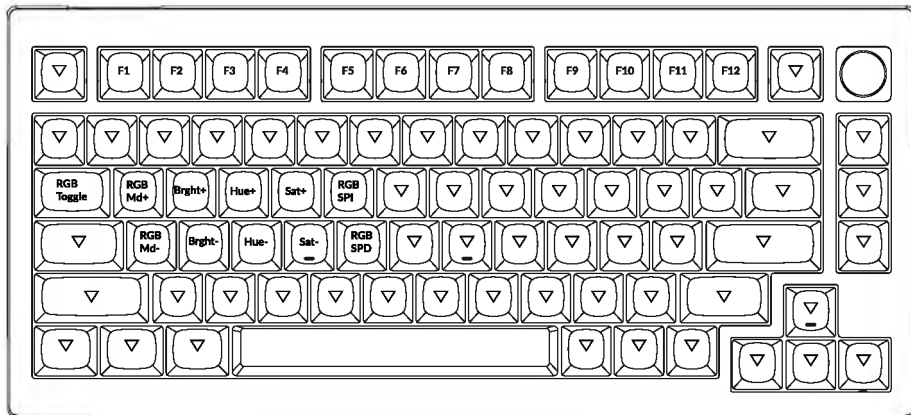 


**LAYER 2:** This layer will be activated when your keyboard's system toggle is switched to Windows.

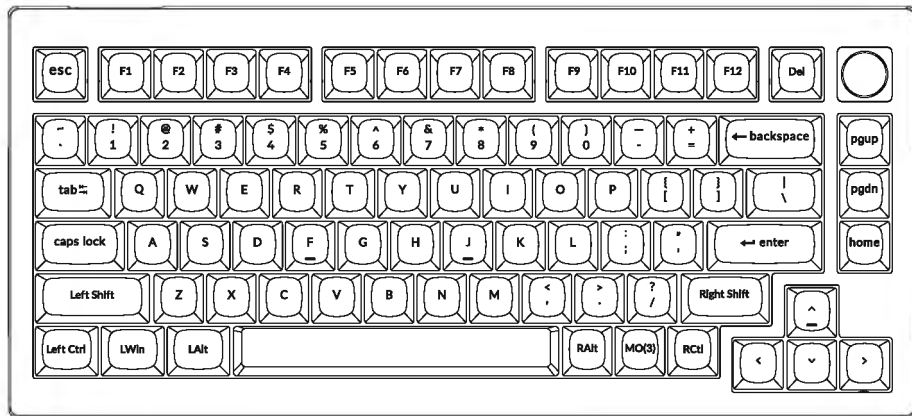 

LWin = Left Windows   LAlt = Left Alt   RAlt = Right Alt   RCtrl=Right Ctrl

 **LAYER 3:** This layer will be activated when your keyboard's system toggle is switched to Windows and press the fn/MO(3) key.

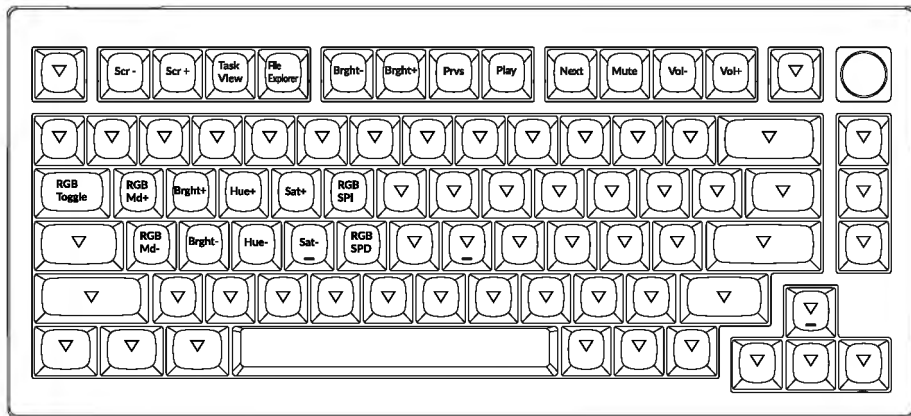

## KEY DESCRIPTION

| Key Description |                            |
|-----------------|----------------------------|
| Scr-            | Screen Brightness Decrease |
| Scr+            | Screen Brightness Increase |
| Bright-         | Backlight Decrease         |
| Bright+         | Backlight Increase         |
| Prvs            | Previous                   |
| Play            | Play/Pause                 |
| Next            | Next                       |
| Mute            | Mute                       |
| Vol-            | Volume Decrease            |
| Vol+            | Volume Increase            |
| RGB Toggle      | Turn Backlight on/off      |

| Key Description |                                                 |
|-----------------|-------------------------------------------------|
| RGBMd+          | RGB Mode Next                                   |
| RGBMd-          | RGB Mode Previous                               |
| Hue+            | Hue Increase                                    |
| Hue-            | Hue Decrease                                    |
| RGB SPI         | RGB Speed Increase                              |
| RGB SPD         | RGB Speed Decrease                              |
| MO(1)           | Layer 1 will be activated when holding this key |
| MO(3)           | Layer 3 will be activated when holding this key |

**Third party input tools are not compatible with the keyboard.**

Due to compatibility, versions, brands and drivers of Windows/macOS, functionalities of third Party input tools may be affected while using the keyboard. Please make sure your operating system and drivers are up to date.

**Certain fn keys or multimedia keys does not work under Windows/Android mode.**

Functionalities of certain multimedia keys may be disabled due to compatibility, versions, brands and drivers of Windows/Android OS.

**Safety Precaution:**

Keep the product, accessories and packaging parts out of reach of children to prevent any accidents and choking hazards.

Always keep the product dry to avoid corrosion.

Do not expose the product to extreme temperatures below -10°C (5°F) or above 50°C (131°F) to preserve the lifespan of the keyboard.

**Keychron, Inc.**

**Dover, DE 19901, United States**

Find us at:

<https://www.keychron.com>

[Support@keychron.com](mailto:Support@keychron.com)

 @keychron

 @keychron

 @keychronMK

Designed by Keychron

Made in China



 
# V1客制化键盘用户手册

旋钮版本

# 完全组装版本

## 键盘

- 1x 已组装成品键盘
- 1x 外壳
- 1x PCB
- 1x 铁质定位板
- 1x 底部吸音泡棉
- 1x 硅胶底垫
- 4套PCB卫星轴
- 1套键帽
- 1套机械轴体

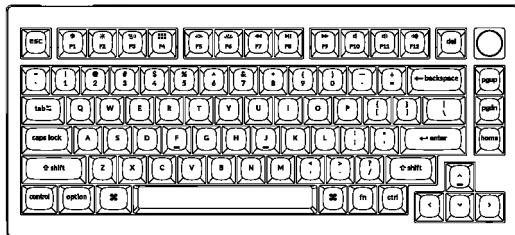


## 线材

- 1x Type-C to Type-C 接口线材
- 1x Type-A to Type-C 转接头

## 工具

 
- 1x 拔键器
- 1x 拔轴器
- 1x 十字螺丝刀
- 1x 内六角螺丝刀

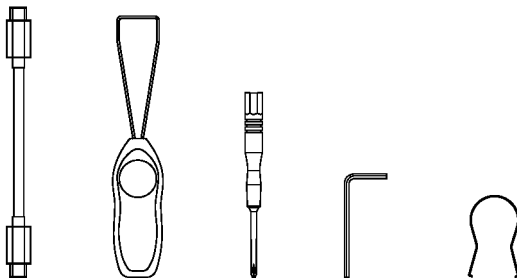

## 套件版本

### 键盘

 - 1x 键盘本体 (不包含键帽、轴体)
- 1x 外壳
- 1x PCB
- 1x 铁质定位板
- 1x 底部吸音泡棉
- 1x 硅胶底垫
- 4套PCB卫星轴

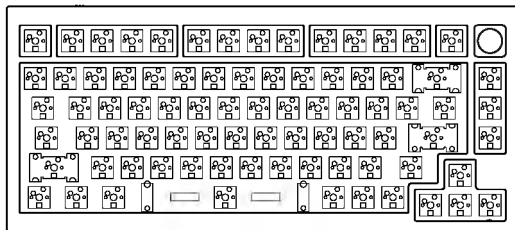


### 线材

- 1x Type-C to Type-C 接口线材
- 1x Type-A to Type-C 转接头

### 工具

 
- 1x 拔键器
- 1x 拔轴器
- 1x 十字螺丝刀
- 1x 内六角螺丝刀

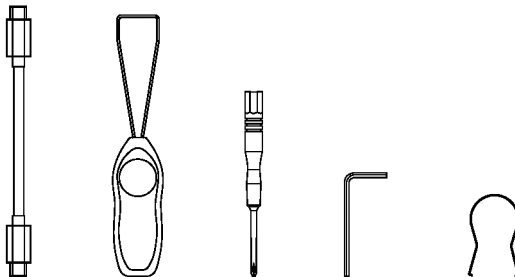

## 快速入门指南


如果您是Windows用户，请在包装内中找到对应的键帽，然后按照下面的说明找到并替换以下键帽。
 
### Mac / Windows

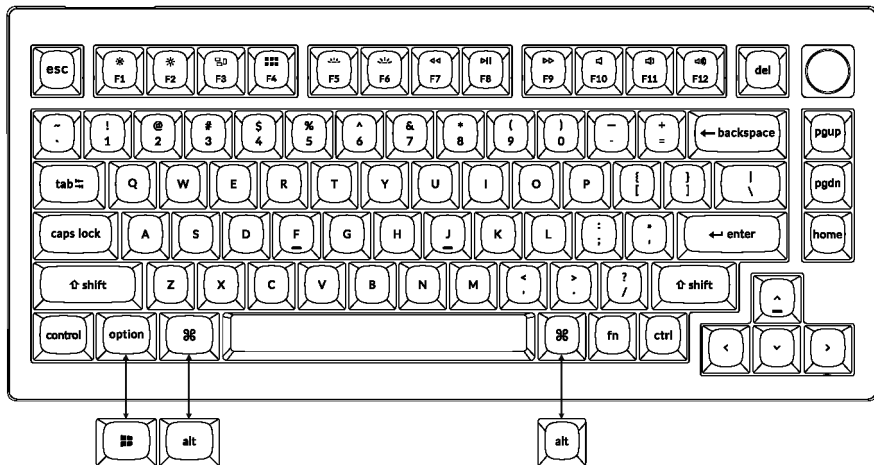

## 1、系统切换

 请确保键盘左上角的系统拨片切换到对应系统，  
如果没有选择正确，  
部分功能将无法使用。



---

## 2、关于VIA映射软件

可以访问[caniusevia.com](http://caniusevia.com)下载最新的VIA软件，  
VIA是可以映射按键的软件。  
如果VIA软件不能识别你的键盘，  
请联系我们以获得技术支持。



### 3、关于键盘键层说明

键盘有四层按键设置。  
层0和层1是用于Mac系统。  
层2和层3用于Windows系统。

 
如果您的系统切换到Mac，  
层0将被激活。

如果您的系统切换到Windows，  
那么层2将被激活。  
如果您在Windows系统模式下使用，  
请对图层2进行更改，而不是层0。  
否则无法进行按键映射操作。



### 4、更改键盘背光模式以及快速关闭/开启键盘背光

组合fn+Q键，更改键盘背光模式

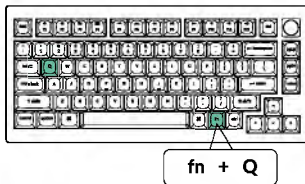


组合fn+tab键，可快速关闭/开启键盘背光




## 5、调整键盘背光亮度

 组合fn+W键, 提高键盘背光亮度

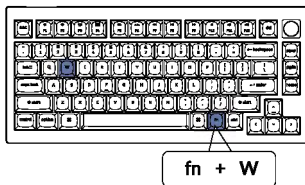

组合fn+S键, 减少键盘背光亮度

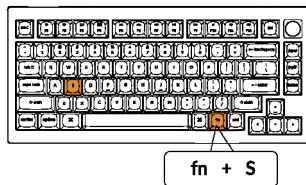 

---

## 6、保修

由于V1客制化键盘是可高度定制且易于组装的，  
所以键盘的任何一个部件出了问题，  
我们只会更换键盘有问题的部件而不是整个键盘。

 


## 7、键盘组装教程

如果您没有安装过类似产品的经验，  
我们建议您观看我们网站上的键盘组装教程视频，  
然后再开始进行键盘组装。

**TUTORIAL**

## 8、恢复出厂模式

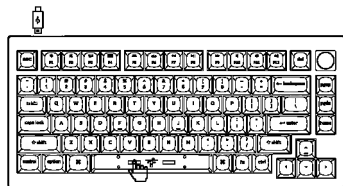

如果键盘出现了故障，不知道怎么办？




- ① 依照顺序长按fn+J+Z(等待四秒)。
- ② 从我们的网站为您的键盘下载正确的固件，然后拔掉键盘上的数据线。
- ③ 拔掉空格键键帽，找到位于PCB上面的复位按钮。
- ④ 长按复位按钮同时插入键盘的数据线然后放开这个复位按键，此时键盘会进入DFU模式。
- ⑤ 然后您可以使用QMK工具箱进行刷新固件的操作。
- ⑥ 再次将键盘恢复出厂设置长按fn+J+Z(等待四秒)。

\*步骤指南可以在我们的网站上找到。

## V1客制化键盘规格
   
| 规格     |                      |
|--------|----------------------|
| 布局     | 75%                  |
| 开关类型   | 机械轴体                 |
| 宽度     | 148.72 mm            |
| 长度     | 328.45 mm            |
| 键盘下沿高度 | 不含键帽17.87 mm         |
| 键盘上沿高度 | 不含键帽25.84 mm         |
| 键盘下沿高度 | 含OSA键帽高度27.30 mm     |
| 键盘上沿高度 | 含OSA键帽高度36.62 mm     |
| 脚垫厚度   | 2 mm                 |
| 键盘坡度   | 3.5° / 7.08° / 9.52° |


## V1客制化键盘按键说明

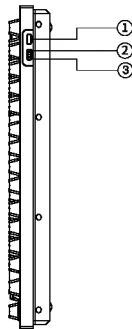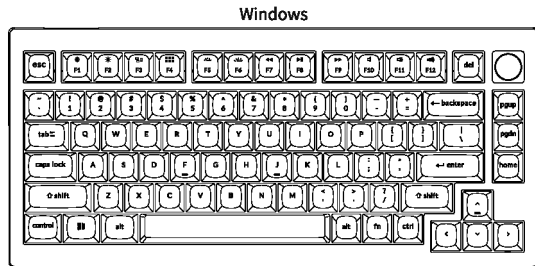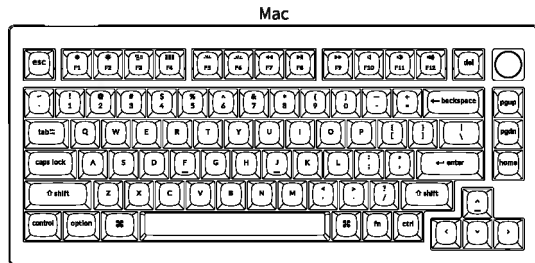


- ① Typec接口
- ② Mac系统档位
- ③ Windows系统档位

## 按键布局

 
层0:当您的系统拨片切到Mac档位的时候,层0将被激活使用

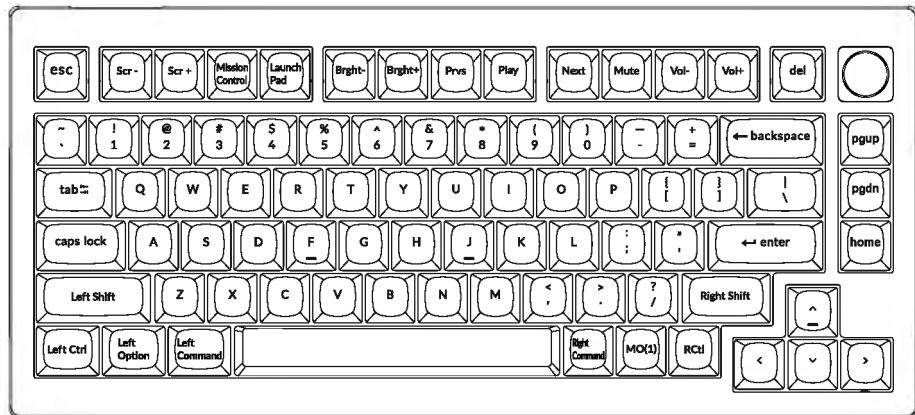

 层1:当您的系统拨片切到Mac档位并组合fn/MO(1)键的时候,层1将被激活使用

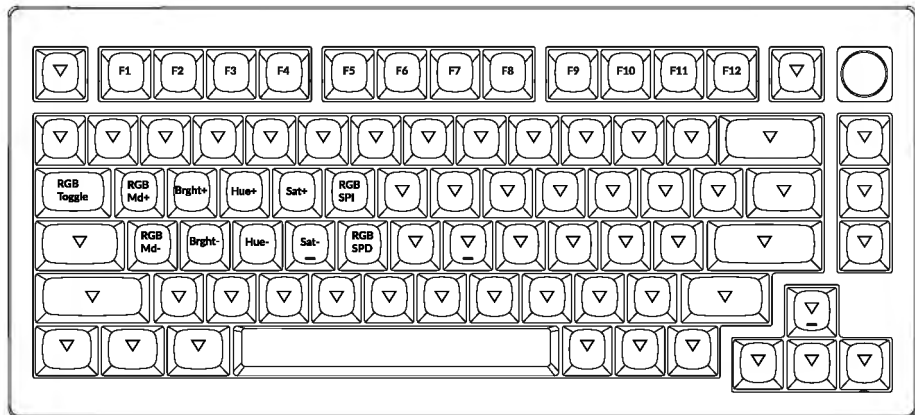


层2:当您的系统拨片切到Windows档位的时候,层2将被激活使用

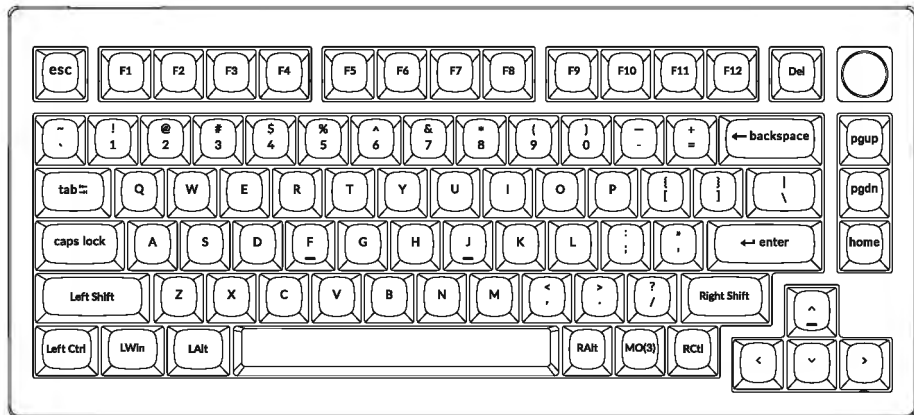 

LWin = Left Windows LAlt = Left Alt RAlt = Right Alt RCl=Right Ctrl

 层3:当您的系统拨片切到Windows档位并组合fn/MO(3)键的时候,层3将被激活使用

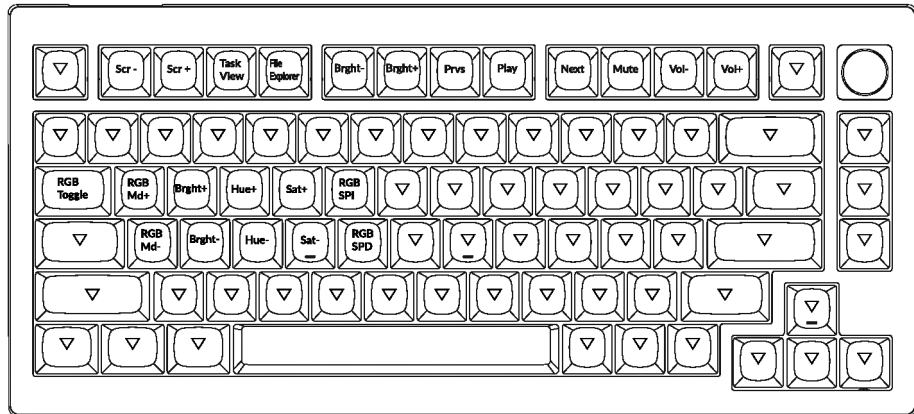

## V1客制化键盘多媒体按键说明

| 按键说明       |           |
|------------|-----------|
| Scr-       | 屏幕亮度-     |
| Scr+       | 屏幕亮度+     |
| Bright-    | 键盘背光亮度-   |
| Bright+    | 键盘背光亮度+   |
| Prvs       | 上一曲       |
| Play       | 播放/暂停     |
| Next       | 下一曲       |
| Mute       | 静音        |
| Vol-       | 音量-       |
| Vol+       | 音量+       |
| RGB Toggle | 关闭/开启键盘背光 |

| 按键说明    |                |
|---------|----------------|
| RGBMD+  | 下一个RGB灯光模式     |
| RGBMD-  | 上一个RGB灯光模式     |
| Hue+    | 下一个灯光颜色        |
| Hue-    | 上一个灯光颜色        |
| RGB SPI | RGB灯光速度+       |
| RGB SPD | RGB灯光速度-       |
| MO(1)   | 按住MO(1),层1将被激活 |
| MO(3)   | 按住MO(3),层3将被激活 |

### 第三方输入工具与键盘不兼容：

由于Windows/Android操作系统的兼容性、版本、品牌和驱动程序，使用键盘时，第三方输入工具可能会受到影响。请确保您的操作系统和驱动程序是最新的。

### 某些fn键或多媒体键不能在Windows/Android模式下工作：

由于Windows/Android操作系统的兼容性、版本和驱动程序，某些多媒体键的功能可能会被禁用。

### 安全预防措施：

防止儿童接触到产品、附件和包装部件，以防止任何意外和窒息的危险。

保持产品干燥，避免腐蚀。

不要将产品暴露在低于-10°C(5°F)或高于50°C(131°F)的极端温度下，以保持键盘的寿命。

### Keychron, Inc.

Dover, DE 19901, United States

<https://www.keychron.com>

通过以下方式与我们联系

Support@keychron.com

Facebook @keychron

Instagram @keychron

Twitter @keychronMK

Keychron设计

中国制造

中国区总代：渴创技术（深圳）有限公司

执行标准：GB/T 14081-2010

售后热线：400-0766268

地址：深圳市龙岗区坂田街道大发埔社区  
大发路24号文坑工业区2栋201